

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, mechanical unit assignment, transmission ratios, capacities .....	2
<b>2 Overview of transmission</b> .....	<b>8</b>
2.1 Overview of transmission .....	8
<b>3 Calculating overall ratio (i)</b> .....	<b>10</b>
3.1 Calculating overall ratio (i) .....	10
<b>4 Repair instructions</b> .....	<b>10</b>
4.1 Repair instructions .....	10
4.2 Contact corrosion .....	10
4.3 General repair instructions .....	11
<b>30 - Clutch</b> .....	<b>14</b>
<b>1 Repairing clutch mechanism</b> .....	<b>14</b>
1.1 Repairing clutch mechanism .....	14
1.2 Assembly overview - Pedal cluster (LHD vehicles) .....	16
1.3 Removing and installing clutch pedal with over-centre spring .....	19
1.4 Adjusting clutch pedal switch -F 36 .....	21
1.5 Removing and installing clutch pedal switch -F 194 .....	22
1.6 Adjusting clutch pedal switch -F 194 .....	24
1.7 Assembly overview - Pedal cluster (RHD vehicles) .....	25
1.8 Assembly overview - Hydraulic system for vehicles with aluminium master and slave cylinders .....	29
1.9 Assembly overview - Hydraulic system for vehicles with plastic master and slave cylinders .....	32
1.10 Notes on removing and installing master and slave cylinders .....	36
1.11 Functional check for master and slave cylinders .....	36
1.12 Removing and installing master cylinder .....	37
1.13 Bleeding clutch system .....	43
<b>2 Repairing clutch release mechanism</b> .....	<b>45</b>
2.1 Repairing clutch release mechanism .....	45
<b>3 Repairing clutch</b> .....	<b>52</b>
3.1 Repairing clutch .....	52
<b>34 - Controls, Housing</b> .....	<b>58</b>
<b>1 Repairing shift mechanism for vehicles up to 05.99</b> .....	<b>58</b>
1.1 Repairing shift mechanism for vehicles up to 05.99 .....	58
1.2 Removing and installing shift mechanism .....	64
1.3 Adjusting shift mechanism .....	66
1.4 Checking gear lever alignment .....	68
<b>2 Repairing shift mechanism for vehicles as of 05.99 &gt;</b> .....	<b>69</b>
2.1 Repairing shift mechanism for vehicles as of 05.99 > .....	69
2.2 Servicing gear lever and rear push rod .....	70
2.3 Servicing selector rod and front push rod .....	73
2.4 Removing and installing gear lever with rear push rod .....	76
2.5 Removing and installing shift mechanism .....	77
2.6 Adjusting shift mechanism .....	79
2.7 Checking gear lever alignment .....	81
<b>3 Removing gearbox</b> .....	<b>82</b>
3.1 Removing gearbox .....	82
3.2 Installing .....	90
<b>4 Checking gearbox oil</b> .....	<b>97</b>



4.1	Checking gearbox oil . . . . .	97
<b>5</b>	<b>Dismantling and assembling gearbox . . . . .</b>	<b>99</b>
5.1	Dismantling and assembling gearbox . . . . .	99
5.2	Gearbox overview . . . . .	99
5.3	Assembly overview . . . . .	101
5.4	Removing and installing input shaft ball bearing and multi-function sender . . . . .	102
5.5	Removing and installing input shaft, drive pinion, selector rods and gearbox cover . . . . .	107
5.6	Removing and installing input shaft ball bearing, multi-function sender, input shaft, drive pinion, selector rods and gearbox cover . . . . .	113
<b>6</b>	<b>Dismantling and assembling shift mechanism in gearbox . . . . .</b>	<b>123</b>
6.1	Dismantling and assembling shift mechanism in gearbox . . . . .	123
<b>35 - Gears, Shafts . . . . .</b>		<b>134</b>
<b>1</b>	<b>Dismantling and assembling input shaft . . . . .</b>	<b>134</b>
1.1	Dismantling and assembling input shaft . . . . .	134
1.2	Modified 3rd and 4th gear synchroniser, as of 05.03 . . . . .	151
<b>2</b>	<b>Adjusting input shaft . . . . .</b>	<b>153</b>
2.1	Adjusting input shaft . . . . .	153
<b>3</b>	<b>Dismantling and assembling drive pinion, up to 05.03 . . . . .</b>	<b>156</b>
3.1	Dismantling and assembling drive pinion, up to 05.03 . . . . .	156
3.2	Reinforcements as of 08.98 > (as of gearbox build date 17 08 8) in the area of the 4th gear wheel . . . . .	182
<b>4</b>	<b>Dismantling and assembling drive pinion, as of 05.03 &gt; . . . . .</b>	<b>184</b>
4.1	Dismantling and assembling drive pinion, as of 05.03 > . . . . .	184
<b>5</b>	<b>Removing and installing reverse idler gear . . . . .</b>	<b>211</b>
5.1	Removing and installing reverse idler gear . . . . .	211
<b>39 - Final drive, Differential . . . . .</b>		<b>213</b>
<b>1</b>	<b>Replacing seal for flange shaft . . . . .</b>	<b>213</b>
1.1	Replacing seal for flange shaft . . . . .	213
<b>2</b>	<b>Removing and installing speedometer sender and drive wheel . . . . .</b>	<b>217</b>
2.1	Removing and installing speedometer sender and drive wheel . . . . .	217
2.2	Removing and installing speedometer sender -G22 . . . . .	217
2.3	Removing and installing speedometer drive wheel . . . . .	219
<b>3</b>	<b>Removing and installing differential . . . . .</b>	<b>222</b>
3.1	Removing and installing differential . . . . .	222
<b>4</b>	<b>Dismantling and assembling differential . . . . .</b>	<b>230</b>
4.1	Dismantling and assembling differential . . . . .	230
<b>5</b>	<b>Adjusting drive pinion and crown wheel . . . . .</b>	<b>242</b>
5.1	Adjusting drive pinion and crown wheel . . . . .	242
5.2	Adjusting and marking of final drive sets . . . . .	242
5.3	Position of shims . . . . .	244
5.4	Adjustment overview . . . . .	244
5.5	Readjustment sequence for final drive set . . . . .	245
5.6	Adjusting drive pinion . . . . .	246
5.7	Re-determine shim "S4" when replacing gearbox cover . . . . .	256
5.8	Adjusting crown wheel . . . . .	257