

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, mechanical unit assignment, transmission ratios, capacities	2
2 Identification of rear final drive	4
2.1 Identification of rear final drive	4
2.2 Code letters, mechanical unit assignment, transmission ratios, capacities	5
3 Overview of transmission	6
3.1 Overview of transmission	6
4 Calculations	8
4.1 Calculations	8
4.2 Calculating transmission ratios "i"	8
4.3 Calculating speed "V"	8
5 General repair instructions	8
5.1 General repair instructions	8
30 - Clutch	12
1 Servicing clutch mechanism	12
1.1 Servicing clutch mechanism	12
1.2 Assembly overview - Pedal cluster (LHD vehicles)	13
1.3 Removing and installing clutch pedal with over-centre spring	16
1.4 Adjusting clutch pedal switch -F 36	18
1.5 Removing and installing clutch pedal switch -F 194	19
1.6 Adjusting clutch pedal switch -F 194	21
1.7 Assembly overview - Pedal cluster (RHD vehicles)	22
1.8 Exploded view - Hydraulic system	26
1.9 Removing and installing master cylinder	30
1.10 Bleeding clutch system	35
2 Servicing clutch release mechanism	37
2.1 Servicing clutch release mechanism	37
3 Servicing clutch	43
3.1 Servicing clutch	43
34 - Controls, Housing	49
1 Servicing gear selector mechanism for vehicles up to 05.99	49
1.1 Servicing gear selector mechanism for vehicles up to 05.99	49
1.2 Removing and installing shift mechanism	55
1.3 Adjusting gear selector mechanism	57
1.4 Checking gear stick position	59
2 Servicing gear selector mechanism for vehicles from 05.99 >	60
2.1 Servicing gear selector mechanism for vehicles from 05.99 >	60
2.2 Servicing gear stick and rear push rod	61
2.3 Servicing selector rod and front push rod	64
2.4 Removing and installing rear gear stick with push rod	67
2.5 Removing and installing shift mechanism	68
2.6 Adjusting gear selector mechanism	70
2.7 Checking gear stick position	72
3 Removing gearbox	73
3.1 Removing gearbox	73
3.2 Mounting gearbox on assembly stand	81
3.3 Installing	82
4 Checking oil level in manual gearbox	86



4.1	Checking oil level in manual gearbox	86
5	Removing and installing cover with Torsen differential	86
5.1	Removing and installing cover with Torsen differential	86
6	Dismantling and assembling gearbox	89
6.1	Dismantling and assembling gearbox	89
6.2	Gearbox overview	89
6.3	Assembly overview	91
6.4	Removing and installing input shaft ball bearing and multi-function sender	92
6.5	Removing and installing input shaft, drive pinion, hollow shaft, selector rods, gearbox cover and cover with Torsen differential	95
6.6	Removing and installing input shaft ball bearing, multi-function sender, input shaft, drive pinion, selector rods, gearbox cover and cover with Torsen differential	100
7	Servicing cover for Torsen differential, removing and installing Torsen differential	110
7.1	Servicing cover for Torsen differential, removing and installing Torsen differential	110
8	Dismantling and assembling gear selector mechanism in gearbox	117
8.1	Dismantling and assembling gear selector mechanism in gearbox	117
35 - Gears, Shafts		125
1	Dismantling and assembling input shaft	125
1.1	Dismantling and assembling input shaft	125
1.2	3rd and 4th gear synchroniser modified from 05.03 >	142
2	Adjusting input shaft	144
2.1	Adjusting input shaft	144
3	Dismantling and assembling drive pinion and hollow shaft up to 05.03	147
3.1	Dismantling and assembling drive pinion and hollow shaft up to 05.03	147
3.2	Reinforcements from 08.98 > a (as of gearbox build date 17 08 8) in the area of the 4th gear wheel	170
4	Dismantling and assembling drive pinion and hollow shaft from 05.03 >	172
4.1	Dismantling and assembling drive pinion and hollow shaft from 05.03 >	172
5	Removing and installing reverse idler gear	197
5.1	Removing and installing reverse idler gear	197
39 - Final drive, Differential rear		199
1	Replacing seal for flange shaft	199
1.1	Replacing seal for flange shaft	199
2	Replacing oil seal for Flange shaft/propshaft	204
2.1	Replacing oil seal for Flange shaft/propshaft	204
3	Removing and installing speedometer sender and drive wheel	207
3.1	Removing and installing speedometer sender and drive wheel	207
3.2	Removing and installing speedometer sender -G22	208
3.3	Removing and installing speedometer drive wheel	208
4	Removing and installing differential	210
4.1	Removing and installing differential	210
5	Dismantling and assembling differential	215
5.1	Dismantling and assembling differential	215
6	Adjusting drive pinion and crown wheel	227
6.1	Adjusting drive pinion and crown wheel	227
6.2	Adjusting and marking of final drive sets	227
6.3	Position of shims	229
6.4	Adjustment overview	229
6.5	Readjustment sequence for final drive set	230
6.6	Adjusting drive pinion	231
6.7	Re-determining "S4" shim when fitting new gearbox cover	241
6.8	Adjusting crown wheel	243

7	Servicing propshaft	250
7.1	Servicing propshaft	250
7.2	Removing and installing propshaft	253
7.3	Measuring and marking radial run-out at propshaft flange	256
7.4	Adjusting propshaft	258
8	Checking gear oil level in rear final drive	261
8.1	Checking gear oil level in rear final drive	261
9	Replacing flange shaft sealing rings	262
9.1	Replacing flange shaft sealing rings	262
10	Replacing seal for propshaft flange	264
10.1	Replacing seal for propshaft flange	264
11	Removing and installing rear final drive	270
11.1	Removing and installing rear final drive	270
11.2	Attaching rear final drive to engine stand	272
12	Dismantling and assembling rear final drive	274
12.1	Dismantling and assembling rear final drive	274
12.2	Assembly overview	274
13	Removing and installing differential	276
13.1	Removing and installing differential	276
14	Dismantling and assembling differential	282
14.1	Dismantling and assembling differential	282
15	Removing and installing and dismantling and assembling drive pinion	294
15.1	Removing and installing and dismantling and assembling drive pinion	294
16	Adjusting drive pinion and crown wheel	306
16.1	Adjusting drive pinion and crown wheel	306
16.2	Adjusting and marking of final drive sets	307
16.3	Readjustment sequence for final drive set	308
16.4	Adjustment overview	309
16.5	Position of shims	310
16.6	Adjusting drive pinion	311
16.7	Adjusting crown wheel	317