

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, allocation, transmission ratios, capacities	2
2 Transmission layout	5
2.1 Identification and ratio	5
2.2 Calculating ratio „i“	5
3 General repair instructions	7
3.1 Components	7
3.2 Special tools	12
30 - Clutch	13
1 Servicing clutch mechanism	13
1.1 Exploded view - pedal cluster (LHD vehicles)	13
1.2 Removing and installing clutch pedal and over-centre spring	14
1.3 Removing and installing vent valve/ clutch pedal switch F36	16
1.4 Exploded view - pedal cluster (RHD vehicles)	18
1.5 Exploded view - hydraulic system	20
1.6 Notes on removing and installing clutch master cylinder and clutch slave cylinder	22
1.7 Function check for clutch master cylinder and slave cylinder	23
1.8 Removing and installing clutch master cylinder	24
1.9 Bleeding clutch system	28
2 Servicing clutch release mechanism	31
2.1 Exploded view - clutch release mechanism	31
2.2 Removing and installing clutch slave cylinder	33
3 Servicing clutch	38
3.1 Exploded view - clutch (vehicles with V6 TDI engine)	38
3.2 Removing and installing clutch	40
3.3 Exploded view - clutch with SAC pressure plate (vehicles with 1.9 ltr. - 96 kW unit injector engine and 2.7 ltr - 169 kW engine)	41
3.4 Removing and installing clutch with SAC pressure plate	43
3.5 Resetting adjuster ring in SAC clutch pressure plate	45
34 - Controls, housing	48
1 Servicing selector mechanism - vehicles up to 05.99, vehicle ID No. 4B-X-130 000	48
1.1 Exploded view - selector mechanism (vehicles up to 05.99, vehicle ID No. 4B-X-130 000)	49
1.2 Removing and installing selector mechanism - vehicles up to 05.99, vehicle ID No. 4B-X-130 000	52
1.3 Adjusting selector mechanism - vehicles up to 05.99, vehicle ID No. 4B-X-130 000	54
2 Servicing selector mechanism - vehicles from 05.99 to 05.01, vehicle ID No. 4B-X-130 001 to 4B-1-053 717	59
2.1 Exploded view - selector mechanism (vehicles from 05.99 to 05.01, vehicle ID No. 4B-X-130 001 to 4B-1-053 717)	60
2.2 Removing and installing gear lever with push rod (rear) - vehicles from 05.99 to 05.01, vehicle ID No. 4B-X-130 001 to 4B-1-053 717	64
2.3 Removing and installing selector mechanism - vehicles from 05.99 to 05.01, vehicle ID No. 4B-X-130 001 to 4B-1-053 717	65
2.4 Adjusting selector mechanism - vehicles from 05.99 to 05.01, vehicle ID No. 4B-X-130 001 to 4B-1-053 717	69
3 Servicing selector mechanism - vehicles from 05.01 onwards, vehicle ID No. 4B-1-053 718 ▶	73
3.1 Exploded view - selector mechanism (vehicles from 05.01 onwards, vehicle ID No. 4B-1-053 718 ▶)	74



3.2	Removing and installing gear knob and boot - vehicles from 05.01 onwards, vehicle ID No. 4B-1-053 718 ▶	76
3.3	Removing and installing selector mechanism - vehicles from 05.01 onwards, vehicle ID No. 4B-1-053 718 ▶	77
3.4	Adjusting selector mechanism - vehicles from 05.01 onwards, vehicle ID No. 4B-1-053 718 ▶	81
4	Removing and installing gearbox	83
4.1	Removing gearbox - vehicles with 4-cyl. TDI engine	83
4.2	Removing gearbox - vehicles with V6 TDI engine	91
4.3	Removing gearbox - vehicles with V6 bi-turbo engine	99
4.4	Installing gearbox	107
4.5	Transporting gearbox	112
5	Checking oil level in manual gearbox	114
6	Dismantling and assembling gearbox	115
6.1	Exploded view - gearbox	115
6.2	Exploded view - manual gearbox, selector shaft and end cover	116
6.3	Exploded view - 5th and 6th gear	117
6.4	Exploded view - input shaft, pinion shaft and internal selector mechanism	119
6.5	Removing and installing end cover, 5th and 6th gear, bearing plate, input shaft, pinion shaft and selector rods	120
6.6	Servicing end cover	137
6.7	Servicing bearing plate	143
6.8	Re-determining thickness of shim „S4“	148
6.9	Servicing gearbox housing	151
6.10	Dismantling and assembling selector shaft assembly	160
35	Gears, shafts	163
1	Dismantling and assembling input shaft	163
2	Dismantling and assembling pinion shaft	169
39	Final drive - differential	180
1	Renewing oil seal for flange shaft	180
2	Removing and installing speedometer sender G22	183
3	Removing and installing drive wheel for speedometer sender	184
4	Dismantling and assembling front final drive	186
4.1	Removing and installing differential	186
4.2	Exploded view - dismantling and assembling differential	187
4.3	Adjusting pinion shaft and crown wheel	195
4.4	Adjusting pinion shaft	198
4.5	Adjusting crown wheel	206