

Contents

00 - Technical data	1
1 Identification of gearbox and low range gearing	1
1.1 Gearbox identification	1
1.2 Identification of low range gearing unit („additional shift stage“)	2
1.3 Code letters, allocation, transmission ratios, capacities	2
2 Identification of rear final drive	8
2.1 Code letters, allocation, transmission ratios, capacities	8
3 Transmission layout	10
3.1 Gearbox diagram	10
3.2 Calculating ratio „i“	10
4 General repair instructions	12
4.1 Special tools	12
4.2 Components	12
30 - Clutch	15
1 Servicing clutch mechanism	15
1.1 Pedal cluster (LHD vehicles) - exploded view	15
1.2 Removing and installing clutch pedal and over-centre spring	16
1.3 Removing and installing vent valve/ clutch pedal switch F36	17
1.4 Removing and installing clutch pedal switch for engine start F194 (interlock switch) for vehicles with low range gearing	19
1.5 Pedal cluster (RHD vehicles) - exploded view	21
1.6 Hydraulics - exploded view	22
1.7 Notes on removing and installing clutch master cylinder and slave cylinder	24
1.8 Removing and installing clutch master cylinder	25
1.9 Bleeding clutch system	27
2 Servicing clutch release mechanism	29
2.1 Clutch release mechanism - exploded view	29
2.2 Removing and installing clutch slave cylinder	31
3 Servicing clutch	35
3.1 Clutch for vehicles with V6 110 kW TDI engine - exploded view	35
3.2 Removing and installing clutch	37
3.3 Clutch with SAC pressure plate for vehicles with power rating 132 kW and higher - exploded view	38
3.4 Removing and installing clutch with SAC pressure plate	40
3.5 Resetting adjuster ring in SAC clutch pressure plate	42
34 - Controls, housing	45
1 Servicing selector mechanism - vehicles up to 05.99	45
1.1 Selector mechanism for vehicles up to 05.99 - exploded view	45
1.2 Removing and installing selector mechanism (vehicles up to 05.99)	48
1.3 Adjusting selector mechanism (vehicles up to 05.99)	51
2 Servicing selector mechanism - vehicles from 05.99 onwards, vehicle ID No. 4B-X-130 001 ▶	55
2.1 Selector mechanism - vehicles from 05.99 onwards, vehicle ID No. 4B-X-130 001 ▶	56
2.2 Gear knob for vehicles with low range gearing - exploded view	60
2.3 Removing and installing gear knob - vehicles with low range gearing	61
2.4 Removing and installing gear lever with push rod (rear) - vehicles from 05.99 onwards, vehicle ID No. 4B-X-130 001 ▶	62
2.5 Removing and installing selector mechanism - vehicles from 05.99 onwards, vehicle ID No. 4B-X-130 001 ▶	64
2.6 Adjusting selector mechanism - vehicles from 05.99 onwards, vehicle ID No. 4B-X-130 001 ▶	68



3	Removing and installing gearbox	71
3.1	Removing gearbox - vehicles with V6 TDI engine	71
3.2	Removing gearbox - vehicles with V6 biturbo engine	78
3.3	Removing gearbox - vehicles with V8 engine	87
3.4	Installing gearbox - vehicles with V6 and V8 engines	96
3.5	Removing gearbox - vehicles with low range gearing	100
3.6	Installing gearbox - vehicles with low range gearing	112
4	Checking oil level in manual gearbox	116
5	Oil lines, gearbox oil cooling pump	117
5.1	Oil lines for vehicles with V6 TDI engine (132 kW) and V6 biturbo engine - exploded view	117
5.2	Oil lines for vehicles with V8 engine - exploded view	118
5.3	Removing and installing oil pump	118
6	Hydraulic system for low range gearing	121
6.1	Checking hydraulic fluid level for low range gearing hydraulic system	121
6.2	Filling hydraulic system	121
7	Low range gearing - exploded view	123
7.1	Removing and installing low range gearing	124
7.2	Re-determining shim for low range gearing	128
7.3	Servicing low range gearing - exploded view	131
7.4	Dismantling and assembling low range gearing - assembly sequence	134
7.5	Removing and installing hydraulic actuator	142
7.6	Renewing oil seal for flange shaft/propshaft - vehicles with low range gearing	149
8	Dismantling and assembling gearbox - exploded view	155
8.1	Bearing housing, centre differential and end cover - exploded view	156
8.2	Gear cluster and selector shaft - exploded view	157
8.3	5th and 6th gear - exploded view	158
8.4	Input shaft, pinion shaft, hollow shaft and internal selector mechanism - exploded view	159
8.5	Removing and installing bearing housing, centre differential, end cover, selector mechanism in gearbox, input shaft, pinion shaft and hollow shaft	160
8.6	Dismantling and assembling bearing housing - exploded view	179
8.7	Servicing bearings for centre differential - exploded view	185
8.8	Servicing end cover - exploded view	189
8.9	Servicing bearing plate - exploded view	193
8.10	Re-determining thickness of shim „S4“	197
8.11	Servicing gearbox housing - exploded view	200
8.12	Dismantling and assembling selector shaft assembly - exploded view	208
35 - Gears, shafts		211
1	Dismantling and assembling input shaft - exploded view	211
2	Dismantling and assembling pinion shaft and hollow shaft - exploded view	217
39 - Final drive - rear differential		227
1	Servicing propshaft	227
1.1	Exploded view - propshaft	227
1.2	Removing and installing propshaft	228
1.3	Measuring and marking radial run-out at flange for propshaft	231
1.4	Adjusting propshaft	232
2	Checking gear oil in rear final drive	236
3	Exploded view - Removing and installing rear final drive	237
3.1	Removing and installing rear final drive	238
4	Renewing oil seals on rear final drive	241
4.1	Renewing oil seals for flange shafts	241
4.2	Renewing oil seal for propshaft flange	243

5	Securing rear final drive to assembly stand	249
6	Dismantling and assembling rear final drive - general view	250
7	Exploded view - removing and installing differential	251
7.1	Removing and installing differential	253
8	Exploded view - dismantling and assembling differential	255
9	Exploded view - removing and installing pinion shaft	264
9.1	Removing and installing pinion shaft; dismantling and assembling pinion shaft	265
10	Adjusting pinion shaft and crown wheel	274
10.1	Adjustment and marking of final drive gear set	274
10.2	Position of shims	277
10.3	Table of adjustments	277
10.4	Adjusting pinion shaft	278
10.5	Adjusting crown wheel	282
39	Final drive - front differential	288
1	Renewing oil seal for flange shaft	288
2	Renewing oil seal and grooved ball bearing for flange for propshaft on gearbox	290
3	Removing and installing speedometer sender G22	296
4	Removing and installing drive wheel for speedometer sender	297
5	Dismantling and assembling front final drive	298
5.1	Removing and installing differential	298
5.2	Exploded view - dismantling and assembling differential	299
5.3	Adjusting pinion shaft and crown wheel	307
5.4	Adjusting pinion shaft	310
5.5	Adjusting crown wheel	316