

Contents

| | |
|---|-----------|
| 01 - Self-diagnosis, electrical checks | 1 |
| 1 Self-diagnosis | 1 |
| 1.1 Self-diagnosis function | 1 |
| 1.2 Fault detection by low range gearing control unit J554 | 1 |
| 1.3 Safety functions of low range gearing control unit J554 | 2 |
| 1.4 Warning functions of low range gearing control unit J554 | 2 |
| 2 Electrical/electronic components and fitting locations | 3 |
| 2.1 Removing and installing low range gearing control unit J554 | 6 |
| 2.2 Removing and installing low range gearing hydraulic pump V190 | 7 |
| 3 Self-diagnosis procedure | 9 |
| 3.1 Safety precautions | 9 |
| 3.2 Connecting up vehicle diagnostic, testing and information system VAS 5051 A and selecting functions | 9 |
| 3.3 List of available functions | 11 |
| 4 Interrogating fault memory | 12 |
| 4.1 Fault tables | 13 |
| 5 Basic setting | 22 |
| 5.1 Basic setting procedure | 22 |
| 6 Erasing fault memory | 25 |
| 7 End of output | 26 |
| 8 Encoding control unit | 27 |
| 8.1 Low range gearing control unit J554 with fixed code | 27 |
| 8.2 Encodable low range gearing control unit J554 | 27 |
| 9 Measured value block | 29 |
| 9.1 Reading measured value block | 29 |
| 9.2 List of available display groups | 29 |
| 9.3 Test table | 30 |
| 10 Electrical checks | 35 |
| 10.1 Connecting 68-pin adapter cable V.A.G 1598/18 A (test box) to low range gearing control unit J554 | 36 |
| 10.2 Test table | 39 |
| 11 CAN bus | 47 |
| 11.1 Checking "two-wire bus system" | 47 |