

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Code letters, allocation, ratios	2
3 Rear final drive	5
3.1 Rear final drive identification	5
3.2 Code letters, ratios	5
4 Capacities	6
5 Notes on tow-starting and towing	7
6 Transmission layout	8
6.1 Actuation of selector elements	8
7 Repair instructions	10
8 Rules for cleanliness when working on the automatic gearbox	12
32 - Torque converter	13
1 Exploded view - torque converter	13
1.1 Draining torque converter	13
1.2 Renewing oil seal for torque converter	14
1.3 Checking torque converter	15
1.4 Installing torque converter	15
37 - Controls, housing	18
1 Servicing selector mechanism	18
1.1 Checking ignition key removal lock	18
1.2 Checking selector mechanism	18
1.3 Selector mechanism cover - exploded view of components	19
1.4 Dismantling and assembling selector mechanism cover	20
1.5 Removing and installing tiptronic switch F189	23
1.6 Removing and installing selector lever handle	24
1.7 Removing and installing selector mechanism cover	24
1.8 Removing and installing selector mechanism	26
1.9 Selector mechanism - exploded view	28
1.10 Dismantling and assembling selector mechanism	31
1.11 Dismantling and assembling selector lever	32
1.12 Removing and installing selector lever lock solenoid	34
1.13 Removing and installing selector lever cable	34
1.14 Checking and adjusting selector lever cable	38
1.15 Removing and installing locking cable	39
2 Removing and installing gearbox (vehicles with 8-cyl. naturally aspirated engine)	42
2.1 Removing	43
2.2 Installing	50
3 Removing and installing gearbox (vehicles with 8-cyl. biturbo engine)	55
3.1 Removing and installing	55
4 Removing and installing gearbox support (left and right)	56
5 Transporting the automatic gearbox	57
6 Securing gearbox to engine and gearbox support	59
7 Exploded view - ATF drain plug, inspection plug and filler plug	61
7.1 Checking and topping up ATF level	61
7.2 Draining ATF and filling up after repairs	65
8 ATF pipes	68
8.1 ATF pipes - overview of components	68



8.2	Removing and installing ATF pipes	69
8.3	Cleaning ATF pipes and ATF cooler	70
38	Gears, control	72
1	Exploded view - ATF oil pan, ATF strainer and valve body	72
1.1	Removing and installing ATF oil pan	76
1.2	Removing and installing ATF strainer	78
1.3	Removing and installing valve body	78
1.4	Removing and installing gearbox input speed sender G182	78
1.5	Removing and installing wiring harness in gearbox	78
1.6	Removing and installing gearbox oil temperature sender G93	78
1.7	Removing and installing gearbox output speed sender G195	79
1.8	Removing and installing speedometer sender G22	79
1.9	Removing and installing multifunction switch F125	80
1.10	Renewing oil seal for selector shaft	80
39	Final drive - rear differential	83
1	Checking gear oil in rear final drive and topping up	83
2	Exploded view - Removing and installing rear final drive	84
2.1	Removing and installing rear final drive	85
3	Renewing oil seals on rear final drive	88
3.1	Renewing oil seals for flange shafts	88
3.2	Renewing oil seal for propshaft flange	89
4	Securing rear final drive to assembly stand	96
5	General overview - dismantling and assembling rear final drive	97
6	Exploded view - removing and installing differential	98
6.1	Removing and installing differential	100
7	Exploded view - dismantling and assembling differential	102
8	Exploded view - removing and installing pinion shaft	111
8.1	Removing and installing pinion shaft; dismantling and assembling pinion shaft	112
9	Adjusting pinion shaft and crown wheel	121
9.1	Adjustment and marking of final drive gear set	121
9.2	Position of shims	124
9.3	Table of adjustments	124
9.4	Adjusting pinion shaft	125
9.5	Adjusting crown wheel	129
39	Final drive - front differential	135
1	Overview - gear oil in front final drive	135
1.1	Checking gear oil level in front final drive	135
1.2	Filling up gear oil in front final drive after repairs	136
2	Exploded view - front final drive	138
2.1	Removing and installing flange shaft (left-side)	140
2.2	Renewing oil seal for flange shaft (left-side)	142
2.3	Renewing drive wheel for speedometer sender G22	142
2.4	Renewing ball bearing for flange shaft (left-side)	142
2.5	Removing and installing flange shaft (right-side)	142
2.6	Renewing oil seal for flange shaft (right-side)	144
2.7	Renewing O-ring on cover for final drive	144
3	Exploded view - oil drain plug and inspection plug for gear oil in transfer box	146
3.1	Checking gear oil level in transfer box and topping up	146
3.2	Changing gear oil in transfer box and filling up after repairs	147
4	Exploded view - transfer box	149
4.1	Removing and installing flange shaft (rear)	152

4.2	Renewing oil seal for flange shaft (rear)	153
4.3	Removing and installing transfer box	153
4.4	Removing and installing intermediate flange for front axle drive	154
4.5	Renewing twin-lip oil seal in intermediate flange for front axle drive	155
4.6	Renewing twin-lip oil seal in input pinion	155
4.7	Renewing needle bearing for spur gear 2	155
5	Exploded view - servicing propshaft	156
5.1	Removing and installing propshaft	157
5.2	Measuring and marking radial run-out at flange for propshaft	160
5.3	Adjusting propshaft	162