

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox, front final drive, transfer box</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Notes on 5-speed automatic gearbox 01V .....	1
1.3 Gearbox (front-wheel drive) - code letters, gearbox allocation, ratios, equipment .....	2
1.4 Gearbox (four-wheel drive) - code letters, gearbox allocation, ratios, equipment .....	10
<b>2 Rear final drive</b> .....	<b>23</b>
2.1 Rear final drive identification .....	23
<b>3 Capacities</b> .....	<b>24</b>
3.1 ATF in planetary gearbox .....	24
3.2 Front final drive .....	24
3.3 Transfer box .....	24
3.4 Rear final drive .....	25
<b>4 Notes on tow-starting and towing</b> .....	<b>26</b>
<b>5 Transmission layout</b> .....	<b>27</b>
5.1 Actuation of selector elements .....	28
<b>6 Repair instructions</b> .....	<b>30</b>
6.1 Resetting adaption values for gearbox control unit (basic setting) .....	32
<b>7 Rules for cleanliness when working on the automatic gearbox</b> .....	<b>33</b>
<b>32 - Torque converter</b> .....	<b>34</b>
<b>1 Exploded view - torque converter</b> .....	<b>34</b>
1.1 Identification of torque converter .....	35
1.2 Draining torque converter .....	35
1.3 Renewing oil seal for torque converter .....	35
1.4 Checking torque converter .....	36
1.5 Installing torque converter .....	36
<b>37 - Controls, housing</b> .....	<b>38</b>
<b>1 Servicing selector mechanism - vehicles up to model year 2001</b> .....	<b>38</b>
1.1 Checking ignition key removal lock .....	38
1.2 Checking selector mechanism .....	38
1.3 Exploded view - selector mechanism cover .....	39
1.4 Removing and installing selector lever handle .....	41
1.5 Removing and installing selector mechanism cover .....	41
1.6 Removing and installing tiptronic switch F189 and sliding cover .....	42
1.7 Exploded view - selector mechanism .....	43
1.8 Removing and installing selector mechanism .....	47
1.9 Dismantling and assembling selector mechanism (assembly sequence) .....	49
1.10 Removing and installing selector lever lock solenoid N110 .....	54
1.11 Removing and installing selector lever cable .....	56
1.12 Checking and adjusting selector lever cable .....	59
1.13 Removing and installing locking cable .....	61
1.14 Adjusting locking cable .....	63
<b>2 Servicing selector mechanism - vehicles from model year 2002 onwards</b> .....	<b>65</b>
2.1 Checking ignition key removal lock .....	65
2.2 Checking selector mechanism .....	65
2.3 Exploded view - selector mechanism cover, selector lever handle .....	66
2.4 Removing and installing selector lever handle .....	68
2.5 Removing and installing selector mechanism cover .....	68
2.6 Removing and installing tiptronic switch F189 and sliding cover .....	69
2.7 Exploded view - selector mechanism .....	69



2.8	Removing and installing selector mechanism	71
2.9	Dismantling and assembling selector mechanism	73
2.10	Removing and installing selector lever lock solenoid N110	75
2.11	Exploded view - selector lever cable and locking cable	75
2.12	Removing and installing selector lever cable	76
2.13	Checking and adjusting selector lever cable	80
2.14	Removing and installing locking cable	82
2.15	Adjusting locking cable	84
<b>3</b>	<b>Removing and installing gearbox</b>	<b>86</b>
3.1	Removing and installing gearbox - all vehicles except those with 2.7 ltr. and 4.2 ltr. engine	86
3.2	Removing and installing gearbox - vehicles with 2.7 ltr. engine	103
3.3	Removing and installing gearbox - vehicles with 4.2 ltr. engine	120
3.4	Removing and installing gearbox support (left and right)	141
3.5	Transporting the automatic gearbox	144
3.6	Securing gearbox to assembly stand	145
<b>4</b>	<b>ATF in planetary gearbox</b>	<b>146</b>
4.1	Checking and topping up ATF level in planetary gearbox	146
4.2	Checking ATF level - vehicles with auxiliary ATF cooler	149
4.3	Draining ATF and filling up after repairs	152
<b>5</b>	<b>ATF pipes</b>	<b>154</b>
5.1	Exploded view - ATF cooling pipes (4-cylinder engines)	154
5.2	Exploded view - ATF cooling pipes (6-cylinder petrol engines, except 2.7 ltr. bi-turbo)	155
5.3	Exploded view - ATF cooling pipes (2.7 ltr. bi-turbo engine)	156
5.4	Exploded view - ATF cooling pipes (6-cylinder TDI engines)	157
5.5	Exploded view - ATF cooling pipes / auxiliary ATF cooler	158
5.6	Removing and installing ATF cooling pipes	159
5.7	Cleaning ATF cooling pipes and ATF cooler	161
<b>38</b>	<b>Gears, control</b>	<b>163</b>
<b>1</b>	<b>Removing and installing oil pan, ATF strainer and valve body</b>	<b>163</b>
1.1	Different hydraulic control systems	163
1.2	Exploded view - gearbox with hydraulic control Type E17	163
1.3	Exploded view - gearbox with hydraulic control Type E18/2	166
1.4	Removing and installing oil pan	168
1.5	Removing and installing ATF strainer	171
1.6	Removing and installing valve body	171
1.7	Removing and installing internal oil pipe	171
1.8	Renewing oil seal for selector shaft	171
1.9	Removing and installing multi-function switch F125	173
1.10	Removing and installing speedometer sender G22	174
1.11	Removing and installing gearbox input speed sender G182 - gearbox with hydraulic control E17	174
1.12	Removing and installing gearbox input speed sender G182 - gearbox with hydraulic control E18/2	175
1.13	Removing and installing gearbox speed sender G38 / gearbox output speed sender G195	175
1.14	Removing and installing wiring harness in gearbox	175
1.15	Removing and installing gearbox oil temperature sender G93	175
<b>39</b>	<b>Final drive - rear differential</b>	<b>176</b>
<b>1</b>	<b>Checking gear oil in rear final drive</b>	<b>176</b>
<b>2</b>	<b>Removing and installing rear final drive</b>	<b>177</b>
<b>3</b>	<b>Renewing oil seals for flange shafts</b>	<b>180</b>
<b>4</b>	<b>Renewing oil seal for propshaft flange</b>	<b>183</b>

<b>5</b>	<b>Securing rear final drive to assembly stand</b>	<b>189</b>
<b>6</b>	<b>Overview - rear final drive</b>	<b>190</b>
<b>7</b>	<b>Exploded view - differential</b>	<b>191</b>
7.1	Removing and installing differential	193
<b>8</b>	<b>Dismantling and assembling differential</b>	<b>194</b>
<b>9</b>	<b>Exploded view - pinion shaft</b>	<b>202</b>
9.1	Removing and installing pinion shaft; dismantling and assembling pinion shaft	203
<b>10</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>212</b>
10.1	Adjustment and marking of final drive gear set	212
10.2	Position of shims	214
10.3	Table of adjustments	214
10.4	Recommended sequence for adjusting gear set	215
10.5	Adjusting pinion shaft	215
10.6	Determining thickness of shim "S3"	216
10.7	Adjusting crown wheel	219
10.8	Determining total shim thickness "Stotal" (S1 plus S2)	220
<b>39</b>	<b>Final drive - front differential</b>	<b>225</b>
<b>1</b>	<b>Gear oil in front final drive</b>	<b>225</b>
1.1	Checking gear oil level in front final drive	225
1.2	Filling up gear oil in front final drive after repairs	226
<b>2</b>	<b>Exploded view - front final drive</b>	<b>228</b>
2.1	Renewing oil seal for flange shaft (right-side)	229
2.2	Renewing oil seal and grooved ball bearing for flange shaft (left-side)	231
2.3	Renewing gasket for front axle drive	237
2.4	Renewing oil seal for final drive/gearbox housing	240
2.5	Renewing O-ring on cover for final drive	244
<b>3</b>	<b>Gear oil in transfer box</b>	<b>247</b>
3.1	Checking gear oil level in transfer box and topping up	247
3.2	Changing gear oil in transfer box and filling up after repairs	248
<b>4</b>	<b>Servicing front axle drive and transfer box</b>	<b>251</b>
4.1	Exploded view - front axle drive and transfer box	251
4.2	Removing and installing transfer box with centre differential	251
4.3	Renewing oil seal for output flange for propshaft	253
4.4	Renewing oil seal in intermediate flange for front axle drive	255
4.5	Renewing oil seal in input pinion	255
4.6	Renewing needle bearing for spur gear 2	255
<b>5</b>	<b>Propshaft</b>	<b>256</b>
5.1	Exploded view - propshaft	256
5.2	Removing and installing propshaft	257
5.3	Measuring and marking radial run-out at flange for propshaft	260
5.4	Adjusting propshaft	261