

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on CVT gearbox type „multitronic 01J (front-wheel drive)“	2
3 Code letters, gearbox allocation, ratios, equipment	3
4 Capacities	5
5 Notes on towing	6
6 Repair instructions	7
6.1 Contact corrosion!	7
6.2 General repair instructions	7
6.3 ATF emerges from gearbox bell housing	9
7 Rules for cleanliness when working on the gearbox	10
13 - Crankshaft group	11
1 Damper unit, for description refer to: Engine, mechanics; Repair group 13	11
37 - Controls, housing	12
1 Electrical/electronic components and fitting locations	12
2 Checking selector mechanism	17
3 Servicing selector mechanism - vehicles up to model year 2001	20
3.1 Exploded view - selector mechanism cover	20
3.2 Removing and installing selector lever handle	21
3.3 Removing and installing selector mechanism cover	21
3.4 Removing and installing tiptronic switch F189 and sliding cover	22
3.5 Exploded view - selector mechanism	23
3.6 Removing and installing selector mechanism	27
3.7 Dismantling and assembling selector mechanism	29
3.8 Removing and installing selector lever lock solenoid N110	34
3.9 Removing and installing selector lever cable	36
3.10 Checking and adjusting selector lever cable	39
3.11 Removing and installing locking cable	41
3.12 Adjusting locking cable	43
4 Servicing selector mechanism - vehicles from model year 2002 onwards	45
4.1 Exploded view - selector mechanism cover, selector lever handle	45
4.2 Removing and installing selector lever handle	46
4.3 Removing and installing selector mechanism cover	46
4.4 Removing and installing tiptronic switch F189	47
4.5 Exploded view - selector mechanism	47
4.6 Removing and installing selector mechanism	49
4.7 Dismantling and assembling selector mechanism	51
4.8 Removing and installing selector lever lock solenoid N110	53
4.9 Exploded view - selector lever cable and locking cable	53
4.10 Removing and installing selector lever cable	55
4.11 Adjusting selector lever cable	58
4.12 Adjusting selector lever cable to basic setting	60
4.13 Removing and installing locking cable	63
4.14 Adjusting locking cable	65
5 Removing and installing gearbox	67
5.1 Removing gearbox - vehicles with 4-cyl. petrol engine	67
5.2 Removing gearbox - vehicles with 6-cyl. petrol engine	73
5.3 Removing gearbox - vehicles with 4-cyl. TDI engine	84
5.4 Removing gearbox - vehicles with 6-cyl. TDI engine	92



5.5	Installing gearbox	102
6	Transporting automatic gearbox	107
7	Securing gearbox to engine and gearbox support	108
8	ATF in gearbox	110
8.1	Checking and correcting ATF level	110
8.2	Changing ATF or filling up after performing repairs	116
9	ATF lines, ATF cooler and additional ATF filter	119
9.1	Exploded view - ATF lines, ATF cooler and additional ATF filter	119
9.2	Cleaning ATF lines and ATF cooler	122
9.3	Removing and installing ATF lines	123
9.4	Removing and installing additional ATF filter	124
9.5	Removing and installing ATF breather pipe	125
10	Renewing oil seal for selector shaft	126
38 - Gears, control		127
1	Dismantling and assembling gearbox	127
1.1	Removing and installing end cover	127
1.2	Removing and installing automatic gearbox control unit J217	132
1.3	Cleaning selector shaft	132
1.4	Removing and installing hydraulic control unit	132
1.5	Removing and installing input shaft	132
1.6	Renewing oil seal for input shaft	132
39 - Final drive - differential		134
1	Gear oil in front final drive	134
1.1	Checking gear oil level in front final drive	134
2	Servicing front final drive	136
2.1	Removing and installing flange shaft (left-side)	136
2.2	Removing and installing flange shaft (right-side)	138
2.3	Removing and installing cover for front final drive	140
2.4	Renewing flange shaft oil seal (left-side)	141
2.5	Renewing oil seal for flange shaft (right-side) and grooved ball bearing	141
2.6	Renewing oil seal for pinion shaft	141