

Contents

01	Self-diagnosis, electrical checks	1
1	Self-diagnosis	1
1.1	Self-diagnosis function	1
1.2	Safety functions of gearbox control unit	2
2	Electrical/electronic components and fitting locations	3
2.1	Removing and installing automatic gearbox control unit J217	10
3	Performing self-diagnosis	11
3.1	Safety precautions	11
3.2	Connecting vehicle diagnostic, testing and information system VAS 5051 A and selecting functions	11
3.3	List of selectable functions	13
4	Interrogating fault memory	14
4.1	Interrogating fault memory	14
4.2	Fault tables	15
4.3	Fault tables: Fault code 16987 / P0603 up to fault code 17968 / P1560	15
4.4	Fault tables: Fault code 18112 / P1704 up to fault code 18269 / P1861	27
5	Final control diagnosis	41
6	Erasing fault memory	46
7	Ending output	47
8	Coding control unit	48
9	Measured value block	50
9.1	Reading measured value block	50
9.2	Overview of selectable display groups	50
9.3	Test table	52
10	Electrical check	63
10.1	Connecting adapter V.A.G 1598/20 (test box) to automatic gearbox control unit J217	64
10.2	Test table	66
10.3	Checking wiring between automatic gearbox control unit J217 and gearbox	76
10.4	Checking multi-function switch F125 with 8-pin connector	78
10.5	Checking multi-function switch F125 with 10-pin connector	81
10.6	Checking voltage supply for selector mechanism cover	84
11	CAN bus	86
11.1	Checking a "two-wire bus system"	86