

Contents

01 - Self-diagnosis, electrical checks	1
1 Self-diagnosis function	1
1.1 Gearbox control unit safety functions	2
2 Electrical/electronic components and fitting locations	4
3 Self-diagnosis procedure	9
3.1 Safety precautions	9
3.2 Connecting up vehicle diagnostic, testing and information system VAS 5051 A and selecting functions	9
3.3 List of available functions	11
4 Interrogating fault memory	12
4.1 Interrogating fault memory	12
4.2 Fault tables	13
4.3 Fault tables for faults 16889 / P0505 to 18159 / P1751	13
4.4 Fault tables for faults 18161 / P1753 to 18260 / P1852	24
5 Final control diagnosis	36
6 Erasing fault memory	38
7 End of output	39
8 Encoding control unit	40
9 Reading measured value block	42
9.1 List of available display groups	42
9.2 Test table	45
10 Adaption of clutch characteristic curve	57
11 Electrical checks	59
11.1 Connecting adapter V.A.G 1598/21 (test box) to automatic gearbox control unit J217 - vehicles up to Model Year 2003	60
11.2 Connecting adapter V.A.G 1598/37 (test box) to automatic gearbox control unit J217 - Model Year 2004 vehicles	62
11.3 Electrical checking - Model Year 2001 vehicles	64
11.4 Electrical checking - Model Year 2002 and 2003 vehicles	68
11.5 Electrical checking - Model Year 2004 vehicles	71
11.6 Checking selector lever lock solenoid N110	73
11.7 Checking power supply for shift mechanism cover	74
11.8 Electrical checking of solenoid valves and pressure regulating valves	74
12 CAN bus	76
12.1 Checking "two-wire bus system"	76
12.2 Two control units communicating via a "two-wire bus system"	77
12.3 Three or more control units communicating via a "two-wire bus system"	78