

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of Motronic system	1
1.1 Self-diagnosis of Motronic system	1
1.2 Technical data for self-diagnosis	1
1.3 Connecting and selecting functions for vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551	2
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	6
3 Final control diagnosis	14
3.1 Final control diagnosis	14
4 Basic setting	18
4.1 Basic setting	18
5 Coding engine control unit	20
5.1 Coding engine control unit	20
6 Reading measured value block	21
6.1 Reading measured value block	21
24 - Mixture preparation, Injection	23
1 Servicing Motronic injection system	23
1.1 Servicing Motronic injection system	23
1.2 Safety precautions	23
1.3 Rules for cleanliness	23
1.4 Technical data	24
1.5 Fitting locations overview	24
1.6 Dismantling and assembling fuel rail with injectors	28
1.7 Testing wiring and components with test box V.A.G 1598/31	29
1.8 Renewing engine control unit	30
1.9 Testing idling speed	30
1.10 Checking fuel pressure regulator and holding pressure	32
1.11 Testing injection quantity, leak-tightness and spray pattern of injectors	34
1.12 Removing and installing injectors	36
1.13 Checking injectors	37
1.14 Testing fuel pump relay -J17 and activation	40
1.15 Testing Motronic current supply relay -J271	43
1.16 Checking air mass meter	45
1.17 Testing intake air temperature sender -G42	49
1.18 Testing coolant temperature sender -G62	51
2 Testing lambda control	53
2.1 Testing lambda control	53
2.2 Testing lambda probe and lambda control	53
2.3 Testing operation	53
2.4 Checking Lambda probe heating	57
2.5 Testing lambda probe signal wiring and activation	59
2.6 Removing and installing lambda probe	61
3 Testing intake manifold change-over function	61
3.1 Testing intake manifold change-over function	61
3.2 Testing operation	61
3.3 Testing intake manifold change-over valve -N156	62
3.4 Testing vacuum system	65
4 Testing fuel tank breather system	66
4.1 Testing fuel tank breather system	66
4.2 Testing solenoid valve 1 for activated charcoal filter -N80	66

5	Testing secondary air inlet valve -N112	70
5.1	Testing secondary air inlet valve -N112	70
5.2	Testing secondary air pump relay -J299	72
6	Testing electronic engine power control (electronic throttle)	76
6.1	Testing electronic engine power control (electronic throttle)	76
6.2	Operation of electronic throttle system	76
6.3	Testing throttle valve control part -J338	77
6.4	Performing adaption of throttle valve control part	77
6.5	Testing angle senders for throttle valve drive -G187 and -G188	79
6.6	Notes on EPC warning lamp (fault warning lamp for electronic throttle -K132)	81
7	Testing accelerator position senders -G79 and -G185	83
7.1	Testing accelerator position senders -G79 and -G185	83
7.2	Testing kick-down switching point	86
7.3	Testing brake light switch and brake pedal switch	87
7.4	Testing clutch pedal switch	90
8	Testing auxiliary signals	93
8.1	Testing auxiliary signals	93
8.2	Checking engine speed signal	93
8.3	Testing fuel consumption signal	93
8.4	Testing road speed signal	94
8.5	Testing crash signal	95
8.6	Testing air conditioner compressor shut-off	96
8.7	Testing data exchange between control units for engine, ABS/EDL and gearbox.	97
28 - Ignition system	99	
1	Testing ignition system	99
1.1	Testing ignition system	99
1.2	General notes on ignition system	99
1.3	Safety precautions	99
1.4	Technical data for ignition system	99
1.5	Testing ignition coils	100
1.6	Testing output stages for ignition coils	101
1.7	Checking control unit voltage supply	103
1.8	Testing engine speed sender -G28	104
1.9	Testing knock sensor control limit	106
1.10	Testing knock sensors -G61 and -G66	106
1.11	Testing Hall sender -G40	108
2	Testing camshaft timing control	111
2.1	Testing camshaft timing control	111
2.2	Operation of camshaft timing control	111
2.3	Testing solenoid valves for camshaft adjustment -N205.	112