

Contents

01 - Self-diagnosis	1
1 Self-diagnosis of Motronic system	1
1.1 Self-diagnosis of Motronic system	1
1.2 Technical data for self-diagnosis	1
1.3 Safety precautions	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	1
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	6
3 Final control diagnosis	16
3.1 Final control diagnosis	16
4 Basic setting	19
4.1 Basic setting	19
5 Coding control unit	20
5.1 Coding control unit	20
5.2 Coding table	21
6 Reading measured value block	22
6.1 Reading measured value block	22
7 Readiness code	23
7.1 Readiness code	23
7.2 Reading off readiness code	23
7.3 Generating readiness code	25
24 - Mixture preparation, Injection	32
1 Servicing Motronic injection system	32
1.1 Servicing Motronic injection system	32
1.2 Safety precautions	32
1.3 Rules for cleanliness	32
1.4 Technical data	33
1.5 Fitting locations overview	34
1.6 Dismantling and assembling air cleaner	46
1.7 Wiring and component check with test box V.A.G 1598/31	47
1.8 Procedure after voltage supply open circuit	49
1.9 Renewing engine control unit	49
1.10 Testing idling speed	51
1.11 Checking system pressure, fuel pressure regulator and holding pressure	53
1.12 Testing injectors	56
1.13 Dismantling and assembling fuel rail with injectors	60
1.14 Removing and installing injectors	63
1.15 Checking injection quantity, leak-tightness and spray pattern of injectors	64
1.16 Testing fuel pump relay -J17 and activation	66
1.17 Testing air mass meter -G70	71
1.18 Checking intake air system for leaks (unmetered air)	75
2 Testing lambda control	76
2.1 Testing lambda control	76
2.2 Function of lambda control (before catalytic converter)	76
2.3 Testing lambda probe and lambda control (before catalytic converter)	77
2.4 Testing lambda probe (before catalytic converter) for ageing - engine code ANB	83
2.5 Testing lambda probe and lambda control (after catalytic converter) - engine code ANB ..	85
2.6 Testing lambda probe heating -Z19 and -Z29 at lambda probes (before and after catalytic converter)	91
2.7 Removing and installing lambda probe	94



3	Testing secondary air system - engine code ANB	96
3.1	Testing secondary air system - engine code ANB	96
3.2	Testing secondary air inlet valve -N112	99
3.3	Testing secondary air pump relay -J299 and activation	104
4	Testing fuel tank breather	108
4.1	Testing fuel tank breather	108
4.2	Testing solenoid valve 1 for activated charcoal filter -N80	109
5	Testing electronic engine power control (electronic throttle)	113
5.1	Testing electronic engine power control (electronic throttle)	113
5.2	Operation of electronic throttle system	113
5.3	Notes on EPC warning lamp (fault warning lamp for electronic throttle) in dash panel insert	114
5.4	Testing electronic throttle warning lamp -K132	114
5.5	Testing throttle valve control part -J338	116
5.6	Performing adaption of throttle valve control part	116
5.7	Checking throttle valve for dirt	118
5.8	Cleaning throttle valve control part	121
5.9	Testing angle senders for throttle valve drive	122
5.10	Testing accelerator position senders	125
5.11	"Learning" kickdown function	128
5.12	Testing brake light switch and brake pedal switch	130
5.13	Testing clutch pedal switch -F36	134
6	Testing auxiliary signals	137
6.1	Testing auxiliary signals	137
6.2	Checking engine speed signal	138
6.3	Testing speed signal	138
6.4	Testing air conditioner compressor shut-off	139
6.5	Testing crash signal wiring	140
6.6	Testing fuel consumption signal for on-board computer	141
6.7	Testing fuel level signal wiring	141
6.8	Testing poor road signal	141
6.9	Testing data exchange between engine control unit and other control units with CAN interface	142
7	Vacuum system layout	145
7.1	Vacuum system layout	145
28 - Ignition system		149
1	Testing ignition system	149
1.1	Testing ignition system	149
1.2	General notes on ignition system	149
1.3	Safety precautions	149
1.4	Technical data	149
1.5	Removing and installing parts of the ignition system	150
1.6	Testing ignition coils	154
1.7	Testing output stage -N122 for ignition coils	159
1.8	Testing Motronic current supply relay -J271 - Vehicles from model year 2000 onwards	162
1.9	Testing intake air temperature sender -G42	166
1.10	Testing engine speed sender -G28	169
1.11	Testing coolant temperature sender -G62	172
1.12	Testing voltage supply for control unit	175
1.13	Testing knock sensor control limit	177
1.14	Testing knock sensors	178
1.15	Testing Hall sender -G40	180
1.16	Check misfiring recognition	183