

Contents

| | |
|--|-----------|
| 01 - Self-diagnosis | 1 |
| 1 Self-diagnosis of Motronic system | 1 |
| 1.1 Self-diagnosis of Motronic system | 1 |
| 1.2 Technical data for self-diagnosis | 1 |
| 1.3 Safety precautions | 1 |
| 1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions | 1 |
| 2 Interrogating and erasing fault memory | 4 |
| 2.1 Interrogating and erasing fault memory | 4 |
| 2.2 Fault table | 5 |
| 3 Final control diagnosis | 14 |
| 3.1 Final control diagnosis | 14 |
| 4 Basic setting | 17 |
| 4.1 Basic setting | 17 |
| 5 Coding control unit | 19 |
| 5.1 Coding control unit | 19 |
| 5.2 Coding table | 20 |
| 6 Reading measured value block | 20 |
| 6.1 Reading measured value block | 20 |
| | |
| 24 - Mixture preparation, Injection | 22 |
| 1 Servicing Motronic injection system | 22 |
| 1.1 Servicing Motronic injection system | 22 |
| 1.2 Safety precautions | 22 |
| 1.3 Rules for cleanliness | 22 |
| 1.4 Technical data | 23 |
| 1.5 Fitting locations overview | 24 |
| 1.6 Removing and installing parts of the injection system | 30 |
| 1.7 Dismantling and assembling air cleaner | 36 |
| 1.8 Removing and installing parts of intake manifold change-over | 37 |
| 1.9 Wiring and component check with test box V.A.G 1598/31 | 38 |
| 1.10 Renewing engine control unit | 40 |
| 1.11 Testing idling speed | 41 |
| 1.12 Checking fuel pressure regulator and holding pressure | 44 |
| 1.13 Testing injectors | 47 |
| 1.14 Dismantling and assembling fuel rail with injectors | 51 |
| 1.15 Removing and installing injectors | 53 |
| 1.16 Checking injection quantity, leak-tightness and spray pattern of injectors | 54 |
| 1.17 Testing fuel pump relay -J17 and activation | 56 |
| 1.18 Testing air mass meter -G70 | 61 |
| 1.19 Checking intake air system for leaks (unmetered air) | 65 |
| 2 Testing intake manifold change-over function | 66 |
| 2.1 Testing intake manifold change-over function | 66 |
| 2.2 Testing operation | 67 |
| 2.3 Checking vacuum system for leaks | 67 |
| 2.4 Testing intake manifold change-over valve-N156 | 69 |
| 3 Testing lambda control | 73 |
| 3.1 Testing lambda control | 73 |
| 3.2 Operation of lambda control | 73 |
| 3.3 Testing lambda probe and lambda control | 74 |
| 3.4 Testing lambda probe heating | 81 |
| 3.5 Removing and installing lambda probe | 85 |
| 4 Testing secondary air system | 86 |



| | | |
|-----------|--|------------|
| 4.1 | Testing secondary air system | 86 |
| 4.2 | Testing secondary air inlet valve -N112 | 89 |
| 4.3 | Testing secondary air pump relay -J299 and activation | 94 |
| 5 | Testing fuel tank breather | 98 |
| 5.1 | Testing fuel tank breather | 98 |
| 5.2 | Testing solenoid valve 1 for activated charcoal filter -N80 | 98 |
| 6 | Testing electronic engine power control (electronic throttle) | 103 |
| 6.1 | Testing electronic engine power control (electronic throttle) | 103 |
| 6.2 | Operation of electronic throttle system | 103 |
| 6.3 | Notes on EPC warning lamp (fault warning lamp for electronic throttle) in dash panel insert | 104 |
| 6.4 | Testing electronic throttle warning lamp -K132 | 105 |
| 6.5 | Testing throttle valve control part -J338 | 106 |
| 6.6 | Performing adaption of throttle valve control part | 107 |
| 6.7 | Testing angle senders for throttle valve drive | 109 |
| 6.8 | Testing accelerator position senders | 113 |
| 6.9 | "Learning" kickdown function | 116 |
| 7 | Testing auxiliary signals | 117 |
| 7.1 | Testing auxiliary signals | 117 |
| 7.2 | Checking engine speed signal | 117 |
| 7.3 | Testing fuel consumption signal for on-board computer | 118 |
| 7.4 | Testing road speed signal | 119 |
| 7.5 | Testing air conditioner compressor shut-off | 121 |
| 7.6 | Testing brake light switch and brake pedal switch | 123 |
| 7.7 | Testing clutch pedal switch -F36 | 127 |
| 7.8 | Testing data exchange between engine control unit, ABS control unit and gearbox control unit | 130 |
| 28 | - Ignition system | 132 |
| 1 | Testing ignition system | 132 |
| 1.1 | Testing ignition system | 132 |
| 1.2 | General notes on ignition system | 132 |
| 1.3 | Safety precautions | 132 |
| 1.4 | Technical data for ignition system | 132 |
| 1.5 | Removing and installing parts of the ignition system | 133 |
| 1.6 | Testing ignition coils | 136 |
| 1.7 | Testing intake air temperature sender -G42 | 140 |
| 1.8 | Testing engine speed sender -G28 | 143 |
| 1.9 | Testing coolant temperature sender -G62 | 146 |
| 1.10 | Testing voltage supply for control unit | 150 |
| 1.11 | Testing knock sensor control limit | 151 |
| 1.12 | Testing knock sensors | 152 |
| 1.13 | Testing Hall senders | 155 |