

## Contents

<b>01 - Self diagnosis . . . . .</b>	<b>1</b>
1 <b>Self-diagnosis of Motronic system . . . . .</b>	<b>1</b>
1.1    Self-diagnosis of Motronic system . . . . .	1
1.2    Technical data of self-diagnosis . . . . .	1
1.3    Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	2
1.4    Interrogating and erasing fault memory . . . . .	3
1.5    Fault table . . . . .	4
1.6    Fault codes 00282 - 16507 . . . . .	4
1.7    Fault codes 16514 - 18020 . . . . .	14
1.8    Final control diagnosis . . . . .	24
1.9    Basic setting . . . . .	26
1.10   Coding control unit . . . . .	27
1.11   Read measured value block . . . . .	29
1.12   Reading measured value block: Display Groups 01 to 10 . . . . .	33
1.13   Read measured value block: Display Groups 11 to 99 . . . . .	43
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>52</b>
1 <b>Servicing Motronic injection system . . . . .</b>	<b>52</b>
1.1    Servicing Motronic injection system . . . . .	52
1.2    Safety precautions . . . . .	52
1.3    Rules for cleanliness . . . . .	52
1.4    Technical data . . . . .	53
1.5    Fitting locations overview . . . . .	54
1.6    Removing and installing parts of the injection system . . . . .	58
1.7    Dismantling and assembling air cleaner . . . . .	64
1.8    Dismantling and assembling fuel manifold with injectors . . . . .	65
1.9    Removing and installing parts of intake manifold change-over system . . . . .	67
1.10   Removing and installing throttle valve control part . . . . .	69
1.11   Wiring and component check with test box V.A.G 1598/22 . . . . .	72
1.12   Renewing engine control unit . . . . .	73
1.13   Testing idling speed . . . . .	74
1.14   Checking fuel pressure regulator and holding pressure . . . . .	74
1.15   Checking injectors . . . . .	76
1.16   Testing injection quantity, leak-tightness and spray pattern of injectors . . . . .	80
1.17   Testing fuel pump relay and activation . . . . .	82
1.18   Checking air mass meter . . . . .	85
2 <b>Testing intake manifold change-over function . . . . .</b>	<b>86</b>
2.1    Testing intake manifold change-over function . . . . .	86
2.2    Testing operation . . . . .	86
2.3    Testing vacuum system . . . . .	87
2.4    Testing intake manifold change-over valve . . . . .	88
3 <b>Testing lambda control . . . . .</b>	<b>91</b>
3.1    Testing lambda control . . . . .	91
3.2    Poor performance after cold start . . . . .	91
3.3    Testing operation of lambda probes . . . . .	92
3.4    Checking Lambda probe heating . . . . .	94
3.5    Testing lambda probe signal wiring and activation . . . . .	95
3.6    Removing and installing lambda probe . . . . .	96
4 <b>Testing fuel tank breather system . . . . .</b>	<b>96</b>
4.1    Testing fuel tank breather system . . . . .	96
4.2    Testing operation . . . . .	96
4.3    Testing solenoid valve 1 for activated charcoal filter . . . . .	97
5 <b>Testing throttle valve control part . . . . .</b>	<b>100</b>

5.1	Testing throttle valve control part . . . . .	100
5.2	Testing learning requirement . . . . .	100
5.3	Performing adaption of throttle valve control part . . . . .	100
5.4	Testing idling speed switch . . . . .	101
5.5	Testing throttle valve potentiometer . . . . .	103
5.6	Testing throttle valve positioner sender . . . . .	104
5.7	Testing throttle valve positioner . . . . .	105
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>106</b>
6.1	Testing auxiliary signals . . . . .	106
6.2	Testing air conditioner compressor shut-off . . . . .	106
6.3	Testing engine speed adaption when air conditioner cuts in . . . . .	107
6.4	Testing engine speed adaption when rear window heating is switched on . . . . .	109
6.5	Testing engine speed signal . . . . .	110
6.6	Checking speed signal . . . . .	110
6.7	Testing signal for actual engine torque . . . . .	111
6.8	Testing signal for specified engine torque from ABS/ASR control unit . . . . .	112
6.9	Testing ignition timing retardation during gearshifts . . . . .	112
6.10	Testing CAN bus . . . . .	113
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>114</b>
<b>1</b>	<b>Testing ignition system . . . . .</b>	<b>114</b>
1.1	Testing ignition system . . . . .	114
1.2	Safety precautions . . . . .	114
1.3	Removing and installing parts of the ignition system . . . . .	115
1.4	Technical data . . . . .	118
1.5	Testing ignition coils . . . . .	118
1.6	Checking intake air temperature sender . . . . .	121
1.7	Checking engine speed sender . . . . .	122
1.8	Testing coolant temperature sender . . . . .	126
1.9	Checking control unit voltage supply . . . . .	127
1.10	Testing knock sensors . . . . .	129
1.11	Checking Hall sender . . . . .	131
<b>2</b>	<b>Testing camshaft timing control . . . . .</b>	<b>134</b>
2.1	Testing camshaft timing control . . . . .	134
2.2	Testing operation of camshaft timing control . . . . .	135
2.3	Testing solenoid valves for camshaft adjustment . . . . .	136