

## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	1
1.1   Technical data . . . . .	1
1.2   Engine number . . . . .	1
1.3   Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
1 <b>Removing and installing engine . . . . .</b>	3
1.1   Removing and installing engine . . . . .	3
1.2   Removing . . . . .	3
1.3   Attaching engine to engine stand . . . . .	13
1.4   Installing . . . . .	13
1.5   Tightening torques . . . . .	16
<b>13 - Crankshaft group . . . . .</b>	<b>18</b>
1 <b>Dismantling and assembling engine . . . . .</b>	18
1.1   Dismantling and assembling engine . . . . .	18
1.2   Ribbed belt drive for vane pump, alternator and viscous fan . . . . .	18
1.3   Ribbed belt drive for air conditioner - assembly overview . . . . .	25
1.4   Removing and installing ribbed belt . . . . .	29
1.5   Removing and installing bearing for viscous fan . . . . .	31
1.6   Removing and installing bracket for alternator, vane pump (power steering) and viscous fan . . . . .	33
1.7   Toothed belt drive . . . . .	36
1.8   Removing and installing toothed belt . . . . .	40
2 <b>Removing and installing sealing flanges and flywheel/drive plate . . . . .</b>	44
2.1   Removing and installing sealing flanges and flywheel/drive plate . . . . .	44
2.2   Removing and installing stiffening frame . . . . .	48
2.3   Renewing crankshaft oil seal - pulley end . . . . .	53
2.4   Removing and installing front sealing flange . . . . .	55
2.5   Removing and installing dual mass flywheel/ drive plate . . . . .	57
3 <b>Removing and installing crankshaft . . . . .</b>	60
3.1   Removing and installing crankshaft . . . . .	60
3.2   Removing and installing chain sprocket . . . . .	65
3.3   Removing and installing needle bearing in crankshaft . . . . .	66
3.4   Crankshaft dimensions . . . . .	67
4 <b>Dismantling and assembling pistons and conrods . . . . .</b>	68
4.1   Dismantling and assembling pistons and conrods . . . . .	68
4.2   Piston and cylinder dimensions . . . . .	74
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>76</b>
1 <b>Removing and installing cylinder head . . . . .</b>	76
1.1   Removing and installing cylinder head . . . . .	76
1.2   Part I . . . . .	77
1.3   Part II . . . . .	81
1.4   Removing and installing intake manifold (with change-over function) . . . . .	84
1.5   Removing and installing cylinder head cover . . . . .	88
1.6   Removing cylinder head . . . . .	90
1.7   Installing cylinder head . . . . .	92
1.8   Checking compressions . . . . .	95
2 <b>Servicing valve gear . . . . .</b>	96
2.1   Servicing valve gear . . . . .	96
2.2   Checking camshaft axial clearance . . . . .	106

2.3	Renewing camshaft oil seals . . . . .	107
2.4	Removing and installing camshafts and camshaft adjuster . . . . .	112
2.5	Checking hydraulic bucket tappets . . . . .	119
2.6	Renewing valve stem seals . . . . .	120
2.7	Checking valve guides . . . . .	122
2.8	Renewing valve guides . . . . .	122
2.9	Reworking valve seats . . . . .	124
<b>17 - Lubrication</b> . . . . .		<b>126</b>
1	<b>Removing and installing parts of the lubrication system</b> . . . . .	126
1.1	Removing and installing parts of the lubrication system . . . . .	126
1.2	Part I . . . . .	127
1.3	Part II . . . . .	132
1.4	Removing and installing sump . . . . .	135
1.5	Removing and installing oil pump . . . . .	138
1.6	Checking oil pressure and oil pressure switch . . . . .	139
1.7	Engine oil . . . . .	140
1.8	Checking oil level . . . . .	141
<b>19 - Cooling system</b> . . . . .		<b>143</b>
1	<b>Removing and installing parts of cooling system</b> . . . . .	143
1.1	Removing and installing parts of cooling system . . . . .	143
1.2	Parts of cooling system . . . . .	144
1.3	Draining and filling cooling system . . . . .	145
1.4	Removing and installing coolant pump . . . . .	149
1.5	Removing and installing, checking coolant thermostat . . . . .	151
1.6	Removing and installing bottom coolant pipe . . . . .	154
1.7	Removing and installing radiator . . . . .	155
1.8	Checking cooling system for leaks . . . . .	157
<b>26 - Exhaust system</b> . . . . .		<b>159</b>
1	<b>Removing and installing parts of exhaust system</b> . . . . .	159
1.1	Removing and installing parts of exhaust system . . . . .	159
1.2	Vehicles with front-wheel drive . . . . .	159
1.3	Separating centre and rear silencers . . . . .	163
1.4	Removing and installing exhaust manifold . . . . .	165
1.5	Stress-free alignment of exhaust system . . . . .	169
1.6	Checking exhaust system for leaks . . . . .	170