

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
2 <b>Safety precautions</b>	<b>2</b>
2.1 Working on the fuel system	2
2.2 Procedure before opening high-pressure section of injection system	2
2.3 Working on the cooling system	3
2.4 Using testers and measuring instruments during a road test	3
2.5 Working on the exhaust system	3
3 <b>General repair instructions</b>	<b>4</b>
3.1 Rules for cleanliness when working on fuel supply system and injection system	4
3.2 Checking fuel system for leaks	4
3.3 Foreign particles in engine	4
3.4 Contact corrosion!	4
3.5 Routing and attachment of pipes, hoses and wiring	5
3.6 Checking vacuum system	5
3.7 Installing radiators and condensers	5
<b>10 - Removing and installing engine</b>	<b>7</b>
1 <b>Removing and installing engine</b>	<b>7</b>
1.1 Removing engine	7
1.2 Securing engine to assembly stand	22
1.3 Installing engine	23
<b>13 - Crankshaft group</b>	<b>28</b>
1 <b>Dismantling and assembling engine</b>	<b>28</b>
1.1 Poly V-belt for alternator, power steering pump and air conditioner compressor	28
1.2 Removing and installing poly V-belt	29
1.3 Removing and installing vibration damper	31
1.4 Removing and installing bracket for ancillaries	31
1.5 Toothed belt drive - exploded view	34
1.6 Removing, installing and tensioning toothed belt	36
1.7 Detaching toothed belt from camshaft sprocket	44
1.8 Removing and installing tensioner for toothed belt	48
2 <b>Removing and installing sealing flanges and flywheel/dual-mass flywheel</b>	<b>53</b>
2.1 Sealing flanges and flywheel/dual-mass flywheel - exploded view of components	53
2.2 Renewing crankshaft oil seal (pulley end)	55
2.3 Removing and installing sealing flange (front)	57
2.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	62
2.5 Removing and installing flywheel - vehicles with multitronic gearbox	63
2.6 Removing and installing sealing flange (rear)	64
3 <b>Removing and installing crankshaft</b>	<b>67</b>
3.1 Crankshaft - exploded view	67
3.2 Crankshaft dimensions	69
3.3 Extracting and driving in needle bearing for crankshaft	69
3.4 Removing and installing chain sprocket	71
4 <b>Dismantling and assembling pistons and conrods</b>	<b>73</b>
4.1 Pistons and conrods - exploded view	73
4.2 Piston and cylinder dimensions	76
<b>15 - Cylinder head, valve gear</b>	<b>77</b>

<b>1</b>	<b>Removing and installing cylinder head</b>	<b>77</b>
1.1	Cylinder head - exploded view	77
1.2	Removing and installing cylinder head cover	78
1.3	Removing and installing cylinder head	81
1.4	Checking compression	87
<b>2</b>	<b>Servicing valve gear</b>	<b>91</b>
2.1	Valve gear - exploded view	91
2.2	Checking axial clearance of camshafts	93
2.3	Renewing exhaust camshaft oil seal	94
2.4	Renewing inlet camshaft oil seal	98
2.5	Removing and installing camshafts and hydraulic chain tensioner	101
2.6	Renewing valve stem oil seals with cylinder head installed	112
2.7	Renewing valve stem oil seals with cylinder head removed	116
2.8	Checking hydraulic bucket tappets	120
2.9	Checking valves	121
2.10	Valve dimensions	121
2.11	Machining valve seats	121
2.12	Checking valve guides	123
2.13	Removing and installing camshaft control valve 1 N205	124
<b>17 - Lubrication</b>		<b>127</b>
<b>1</b>	<b>Removing and installing parts of lubrication system</b>	<b>127</b>
1.1	Sump and balance shaft assembly with oil pump - exploded view of components	127
1.2	Removing and installing sump and balance shaft assembly	130
1.3	Oil pump with balance shaft gear assembly - exploded view of components	142
1.4	Crankcase breather	144
1.5	Oil filter and oil cooler - exploded view of components	146
1.6	Removing and installing oil cooler	147
1.7	Removing and installing oil filter housing	147
1.8	Checking oil pressure and oil pressure switch	149
1.9	Engine oil	152
1.10	Checking oil level	153
<b>19 - Cooling</b>		<b>154</b>
<b>1</b>	<b>Removing and installing parts of cooling system</b>	<b>154</b>
1.1	Connection diagram - coolant hoses	154
1.2	Draining and filling cooling system	156
1.3	Removing and installing coolant pump	164
1.4	Removing and installing coolant pipe (top)	165
1.5	Removing and installing coolant pipe (bottom)	167
1.6	Thermostat housing - exploded view of components	168
1.7	Removing and installing thermostat housing with map-controlled engine cooling thermostat F265	169
1.8	Checking map-controlled engine cooling thermostat F265	170
1.9	Removing and installing radiator	172
1.10	Removing and installing radiator cowl	176
1.11	Removing and installing radiator fan	178
1.12	Renewing radiator fan motor	178
1.13	Checking cooling system for leaks	178
<b>26 - Exhaust system</b>		<b>181</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>181</b>
1.1	Exhaust system - exploded view	181
1.2	Separating centre and rear silencers	183
1.3	Removing and installing front exhaust pipe	184
1.4	Removing and installing catalytic converter	186

---

1.5	Removing and installing exhaust manifold . . . . .	188
1.6	Stress-free alignment of exhaust system . . . . .	191
1.7	Checking exhaust system for leaks . . . . .	192