

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	2
2 Safety precautions	3
2.1 Working on the fuel system	3
2.2 Procedure before opening high-pressure section of injection system	3
2.3 Working on the cooling system	4
2.4 Using testers and measuring instruments during a road test	4
2.5 Working on the exhaust system	4
3 General repair instructions	5
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
3.2 Checking fuel system for leaks	5
3.3 Foreign particles in engine	5
3.4 Contact corrosion!	5
3.5 Routing and attachment of pipes, hoses and wiring	6
3.6 Checking vacuum system	6
3.7 Installing radiators and condensers	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Removing engine	9
1.3 Securing engine to assembly stand	28
1.4 Installing engine	28
13 - Crankshaft group	35
1 Servicing work on pulley end	35
1.1 Lock carrier - exploded view	35
1.2 Moving lock carrier into service position	35
1.3 Poly V-belt drive - exploded view	38
1.4 Removing and installing poly V-belt	39
1.5 Removing and installing tensioner for poly V-belt	41
1.6 Removing and installing vibration damper	42
2 Removing and installing sealing flanges and dual-mass flywheel/flywheel/drive plate	44
2.1 Sealing flanges and dual-mass flywheel/flywheel/drive plate - exploded view	44
2.2 Renewing crankshaft oil seal (pulley end)	46
2.3 Removing and installing sealing flange (front)	48
2.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	51
2.5 Extracting and driving in needle bearing for dual-mass flywheel	53
2.6 Removing and installing flywheel - vehicles with multitronic gearbox 01J	55
2.7 Removing and installing drive plate - vehicles with automatic gearbox 01V	56
2.8 Removing and installing sealing flange (rear)	58
3 Removing and installing crankshaft	60
3.1 Crankshaft - exploded view	60
3.2 Crankshaft dimensions	63
3.3 Measuring axial clearance	63
3.4 Measuring radial clearance	63
3.5 Removing and installing drive chain sprocket for oil pump	64
4 Dismantling and assembling pistons and conrods	66
4.1 Pistons and conrods - exploded view	66



4.2	Piston and cylinder dimensions	69
4.3	Checking radial clearance of conrod bearings	69
15	- Cylinder head, valve gear	70
1	Toothed belt drive	70
1.1	Toothed belt covers - exploded view	70
1.2	Toothed belt drive - exploded view	71
1.3	Removing and installing toothed belt	73
2	Cylinder head	81
2.1	Cylinder head - exploded view	81
2.2	Removing and installing cylinder head cover (left-side)	83
2.3	Removing and installing cylinder head cover (right-side)	85
2.4	Removing cylinder head (left-side)	88
2.5	Removing cylinder head (right-side)	92
2.6	Installing cylinder head	96
2.7	Checking compression	99
3	Removing and installing intake manifold	103
3.1	Intake manifold - exploded view	103
3.2	Removing and installing intake manifold	104
4	Servicing valve gear	109
4.1	Valve gear - exploded view	109
4.2	Camshaft adjusters - exploded view	112
4.3	Checking axial clearance of camshafts	114
4.4	Renewing camshaft oil seals	114
4.5	Removing and installing camshafts and camshaft adjusters	116
4.6	Checking hydraulic bucket tappets	123
4.7	Renewing valve stem oil seals with cylinder head installed	125
4.8	Renewing valve stem oil seals with cylinder head removed	129
4.9	Checking valve guides	133
4.10	Machining valve seats	134
4.11	Checking valves	136
5	Checking variable valve timing	137
5.1	Safety precautions	137
5.2	Checking function of variable valve timing	137
5.3	Checking variable valve timing when driving	140
5.4	Checking camshaft control valves (solenoid valves)	143
17	- Lubrication	151
1	Removing and installing parts of lubrication system	151
1.1	Sump (bottom section), oil pump - exploded view	151
1.2	Removing and installing sump (bottom section)	153
1.3	Removing and installing oil pump	156
1.4	Removing and installing drive chain and chain tensioner for oil pump	159
1.5	Sump (top section), oil filter, chain tensioner - exploded view	160
1.6	Removing and installing sump (top section)	162
1.7	Oil retention valve and spray nozzle valve - exploded view	173
1.8	Removing and installing oil pressure switch F1	174
1.9	Checking oil pressure and oil pressure switch F1	175
1.10	Engine oil	177
1.11	Checking oil level	177
19	- Cooling	179
1	Removing and installing parts of cooling system	179
1.1	Diagram of coolant hose connections	179
1.2	Draining and filling cooling system	181

1.3	Coolant pump and thermostat - exploded view	187
1.4	Removing and installing coolant pump	187
1.5	Removing and installing thermostat	189
1.6	Checking thermostat	189
1.7	Coolant pipes - exploded view	189
1.8	Removing and installing coolant pipe (front)	190
1.9	Removing and installing coolant pipe (right-side)	193
1.10	Removing and installing coolant pipe (rear)	193
1.11	Removing and installing radiator	195
1.12	Renewing radiator fan motor	200
1.13	Checking cooling system for leaks	201
26 - Exhaust system		203
1	Removing and installing components of exhaust system - rest-of-world vehicles	203
1.1	Front-wheel drive vehicles	203
1.2	Exhaust system on vehicles with four-wheel drive - exploded view	207
1.3	Separating centre and rear silencers	212
1.4	Removing and installing front exhaust pipe (left-side) with catalytic converter	214
1.5	Removing and installing front exhaust pipe (right-side) with catalytic converter	219
1.6	Removing and installing exhaust manifold (left-side)	225
1.7	Removing and installing exhaust manifold (right-side)	225
1.8	Stress-free alignment of exhaust system - vehicles with front-wheel drive	225
1.9	Stress-free alignment of exhaust system - vehicles with four-wheel drive	226
1.10	Checking exhaust system for leaks	228
2	Removing and installing components of exhaust system - USA vehicles	229
2.1	Exhaust system on vehicles with front-wheel drive - exploded view	229
2.2	Exhaust system on vehicles with four-wheel drive - exploded view	233
2.3	Separating centre and rear silencers	238
2.4	Removing and installing front exhaust pipe (left-side) with catalytic converter	240
2.5	Removing and installing front exhaust pipe (right-side) with catalytic converter	246
2.6	Removing and installing exhaust manifold (left-side)	253
2.7	Removing and installing exhaust manifold (right-side)	253
2.8	Stress-free alignment of exhaust system - vehicles with front-wheel drive	255
2.9	Stress-free alignment of exhaust system - vehicles with four-wheel drive	256
2.10	Checking exhaust system for leaks	258
3	Servicing exhaust flap	259
3.1	Checking function of exhaust flap	259
3.2	Checking vacuum unit for exhaust flap	260
3.3	Checking exhaust flap 1 valve N321	261
4	Servicing secondary air system	264
4.1	Principle and function	264
4.2	Secondary air system - overview	264
4.3	Checking secondary air inlet valve N112	266
4.4	Checking secondary air pump relay J299 and secondary air pump motor V101	271
4.5	Removing and installing secondary air pump	277
4.6	Checking combination valves for secondary air system for correct operation and leakage	279
4.7	Removing and installing combination valve for secondary air system (left-side)	280
4.8	Removing and installing combination valve for secondary air system (right-side)	283