

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
2 Safety precautions	3
2.1 Working on the cooling system	3
2.2 Using testers and measuring instruments during a road test	3
2.3 Working on the exhaust system	3
3 General repair instructions	4
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	4
3.2 Checking fuel system for leaks	4
3.3 Foreign particles in engine	4
3.4 Contact corrosion!	4
3.5 Routing and attachment of pipes, hoses and wiring	5
3.6 Checking vacuum system	5
3.7 Installing radiators, condensers and charge air coolers	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing	8
1.2 Attaching engine to engine stand	21
1.3 Installing	23
1.4 Tightening torques	24
13 - Crankshaft group	25
1 Poly V-belt drive - exploded view	25
1.1 Removing and installing poly V-belt	27
1.2 Checking alignment of poly V-belt	29
1.3 Removing and installing vibration damper	31
2 Toothed belt drive - exploded view	33
2.1 Removing and installing toothed belt	35
2.2 Removing toothed belt from camshaft sprockets	44
3 Sealing flanges and drive plate - exploded view	50
3.1 Renewing crankshaft oil seal (pulley end)	51
3.2 Removing and installing sealing flange (front)	53
3.3 Removing and installing sealing flange (rear)	57
3.4 Removing and installing drive plate	59
4 Crankshaft - exploded view	62
4.1 Crankshaft dimensions	65
4.2 Measuring axial clearance	65
4.3 Measuring radial clearance	65
4.4 Removing and installing drive chain sprocket for oil pump	66
5 Pistons and conrods - exploded view	68
5.1 Piston and cylinder dimensions	71
5.2 Checking radial clearance of conrod bearings	71
15 - Cylinder head, valve gear	72
1 Removing and installing cylinder head	72
1.1 Removing and installing cylinder head cover (left-side)	72
1.2 Removing and installing cylinder head cover (right-side)	73
1.3 Removing cylinder head (left-side)	75

1.4	Removing cylinder head (right-side)	80
1.5	Installing cylinder head	85
2	Checking compression	89
3	Valve gear - exploded view	92
3.1	Checking axial clearance of camshafts	95
3.2	Renewing camshaft oil seals	96
3.3	Renewing oil seal at Hall sender	97
3.4	Removing and installing camshafts and camshaft adjuster - cylinder head (left-side)	101
3.5	Removing and installing camshafts and camshaft adjuster - cylinder head (right-side)	105
3.6	Removing and installing roller rocker fingers	110
3.7	Renewing valve stem oil seals	111
3.8	Checking valve guides	114
3.9	Checking valves	115
3.10	Machining valve seats	115
17 - Lubrication	118	
1	Removing and installing parts of lubrication system	118
1.1	Oil pump, sump (bottom section) - exploded view	118
1.2	Removing and installing oil level and oil temperature sender G266	119
1.3	Removing and installing sump (bottom section)	120
1.4	Removing and installing chain drive for oil pump	122
1.5	Removing and installing oil pump	123
1.6	Sump (top section) - exploded view	124
1.7	Removing and installing sump (top section)	126
1.8	Oil retention valves - exploded view	133
1.9	Renewing oil retention valves	134
1.10	Oil filter housing - exploded view	135
1.11	Checking oil pressure and oil pressure switch F1	137
1.12	Engine oil	138
1.13	Checking oil level	139
19 - Cooling	140	
1	Diagram of coolant hose connections	140
1.1	Draining and filling cooling system	141
1.2	Coolant pump and thermostat - exploded view	145
1.3	Removing and installing coolant pump	147
1.4	Removing, installing and checking thermostat	148
1.5	Checking thermostat	149
1.6	Checking cooling system for leaks	149
1.7	Checking pressure relief valve in filler cap	150
1.8	Oil cooler - exploded view	151
1.9	Removing and installing oil cooler	151
1.10	Removing and installing viscous fan	152
1.11	Removing and installing radiator	153
1.12	Removing and installing radiator fan V7	158
26 - Exhaust system	160	
1	Removing and installing parts of exhaust system	160
1.1	Silencers with mountings - exploded view	160
1.2	Removing and installing exhaust manifold	161
1.3	Removing and installing front exhaust pipe with catalytic converter (left-side)	162
1.4	Removing and installing front exhaust pipe with catalytic converter (right-side)	164
1.5	Stress-free alignment of exhaust system	165
1.6	Checking exhaust system for leaks	167
2	Secondary air system	168

2.1	Principle and function	168
2.2	Secondary air system - exploded view	169
2.3	Removing and installing secondary air pump	170
2.4	Checking combination valve for secondary air system for proper operation and leakage	171
2.5	Removing and installing combination valve for secondary air system (left-side)	172
2.6	Removing and installing combination valve for secondary air system (right-side)	173