

Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Engine number | 1 |
| 1.2 Engine data | 1 |
| 2 Safety precautions | 3 |
| 2.1 Working on the cooling system | 3 |
| 2.2 Using testers and measuring instruments during a road test | 3 |
| 2.3 Working on the exhaust system | 3 |
| 3 General repair instructions | 4 |
| 3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger | 4 |
| 3.2 Checking fuel system for leaks | 4 |
| 3.3 Foreign particles in engine | 4 |
| 3.4 Contact corrosion! | 4 |
| 3.5 Routing and attachment of pipes, hoses and wiring | 5 |
| 3.6 Checking vacuum system | 5 |
| 3.7 Installing radiators, condensers and charge air coolers | 6 |
| 10 - Removing and installing engine | 7 |
| 1 Removing and installing engine | 7 |
| 1.1 Removing lock carrier | 8 |
| 1.2 Removing engine | 17 |
| 1.3 Separating engine and gearbox | 30 |
| 1.4 Securing engine to assembly stand | 35 |
| 1.5 Installing engine | 36 |
| 1.6 Checking electrohydraulic engine mounting solenoid valves N144 and N145 | 42 |
| 13 - Crankshaft group | 47 |
| 1 Dismantling and assembling engine | 47 |
| 1.1 Pulling lock carrier forwards | 47 |
| 1.2 Poly V-belt drive - exploded view | 52 |
| 1.3 Removing and installing poly V-belt | 54 |
| 1.4 Checking alignment of poly V-belt | 55 |
| 1.5 Removing and installing vibration damper | 57 |
| 1.6 Toothed belt covers - exploded view | 58 |
| 1.7 Toothed belt drive - exploded view | 59 |
| 1.8 Removing and installing toothed belt | 61 |
| 2 Sealing flanges and drive plate | 70 |
| 2.1 Sealing flanges and drive plate - exploded view | 70 |
| 2.2 Renewing crankshaft oil seal (pulley end) | 71 |
| 2.3 Removing and installing sealing flange (front) | 73 |
| 2.4 Removing and installing sealing flange (rear) | 82 |
| 2.5 Removing and installing drive plate | 84 |
| 3 Dismantling and assembling crankshaft | 87 |
| 3.1 Crankshaft - exploded view | 87 |
| 3.2 Crankshaft dimensions | 90 |
| 3.3 Measuring axial clearance | 90 |
| 3.4 Measuring radial clearance | 90 |
| 3.5 Removing and installing drive chain sprocket for oil pump | 91 |
| 4 Dismantling and assembling pistons and conrods | 93 |
| 4.1 Pistons and conrods - exploded view | 93 |
| 4.2 Piston and cylinder dimensions | 96 |



| | | |
|-----------|---|------------|
| 4.3 | Checking radial clearance of conrod bearings | 96 |
| 15 | Cylinder head, valve gear | 97 |
| 1 | Removing and installing cylinder head | 97 |
| 1.1 | Cylinder head - exploded view | 97 |
| 1.2 | Removing and installing cylinder head cover (left-side) | 99 |
| 1.3 | Removing and installing cylinder head cover (right-side) | 100 |
| 1.4 | Removing cylinder head (left-side) | 102 |
| 1.5 | Removing cylinder head (right-side) | 103 |
| 1.6 | Installing cylinder head | 105 |
| 2 | Removing and installing intake manifold | 108 |
| 2.1 | Intake manifold - exploded view | 108 |
| 2.2 | Removing and installing air cleaner housing | 109 |
| 2.3 | Renewing seals for air mass meters | 113 |
| 2.4 | Removing and installing intake manifold - vehicles up to 04.2003 | 114 |
| 2.5 | Removing and installing intake manifold - vehicles from 05.2003 onwards | 122 |
| 2.6 | Checking compression | 128 |
| 3 | Valve gear | 131 |
| 3.1 | Valve gear - exploded view | 131 |
| 3.2 | Checking axial clearance of camshafts | 134 |
| 3.3 | Renewing camshaft oil seals | 135 |
| 3.4 | Renewing oil seal at Hall sender | 137 |
| 3.5 | Removing and installing camshafts and camshaft adjuster - cylinder head (left-side) | 140 |
| 3.6 | Removing and installing camshafts and camshaft adjuster - cylinder head (right-side) | 147 |
| 3.7 | Removing and installing roller rocker fingers | 153 |
| 3.8 | Renewing valve stem oil seals | 153 |
| 3.9 | Checking valve guides | 156 |
| 3.10 | Checking valves | 157 |
| 3.11 | Machining valve seats | 157 |
| 4 | Checking variable valve timing | 160 |
| 4.1 | Testing the system | 160 |
| 4.2 | Checking camshaft control valves (solenoid valves) | 163 |
| 17 | Lubrication | 168 |
| 1 | Removing and installing parts of lubrication system | 168 |
| 1.1 | Oil pump, sump (bottom section) - exploded view | 168 |
| 1.2 | Removing and installing sump (bottom section) | 169 |
| 1.3 | Removing and installing chain drive for oil pump | 171 |
| 1.4 | Removing and installing oil pump | 172 |
| 1.5 | Sump (top section) - exploded view | 173 |
| 1.6 | Removing and installing sump (top section) | 175 |
| 1.7 | Oil filter bracket with oil cooler - exploded view | 185 |
| 1.8 | Removing and installing oil filter bracket with oil cooler | 187 |
| 1.9 | Oil retention valves - exploded view | 188 |
| 1.10 | Renewing oil retention valves | 189 |
| 1.11 | Checking oil pressure and oil pressure switch | 190 |
| 1.12 | Engine oil | 192 |
| 1.13 | Checking oil level | 192 |
| 19 | Cooling | 194 |
| 1 | Removing and installing parts of cooling system | 194 |
| 1.1 | Connection diagram for coolant hoses - vehicles to 04.2003 | 194 |
| 1.2 | Connection diagram for coolant hoses - vehicles from 05.2003 | 196 |
| 1.3 | Connection diagram for coolant hoses - vehicles for hot countries with auxiliary radiator | 197 |
| 1.4 | Draining and filling cooling system | 198 |

| | | |
|-----------|---|------------|
| 1.5 | Coolant pump and thermostat - exploded view | 203 |
| 1.6 | Removing and installing coolant pump | 205 |
| 1.7 | Continued coolant circulation pump V51 | 205 |
| 1.8 | Checking continued coolant circulation pump V51 | 205 |
| 1.9 | Checking continued coolant circulation relay J151 | 208 |
| 1.10 | Removing and installing continued coolant circulation pump V51 - vehicles up to 04.2003 | 211 |
| 1.11 | Removing and installing continued coolant circulation pump V51 - vehicles from 05.2003 | 211 |
| 1.12 | Removing, installing and checking thermostat | 212 |
| 1.13 | Exploded view of coolant pipes - vehicles up to 04.2003 | 213 |
| 1.14 | Exploded view of coolant pipes - vehicles from 05.2003 | 215 |
| 1.15 | Removing and installing front coolant pipe - vehicles from 05.2003 | 217 |
| 1.16 | Removing and installing coolant pipe going to cylinder head | 219 |
| 1.17 | Removing and installing coolant pipe going to cylinder block | 219 |
| 1.18 | Removing and installing coolant pipe leading to oil filter bracket | 221 |
| 1.19 | Removing and installing coolant pipe (rear) | 221 |
| 1.20 | Exploded view of auxiliary radiator - vehicles for hot countries with auxiliary radiator | 223 |
| 1.21 | Removing and installing auxiliary radiator - vehicles for hot countries with auxiliary radiator | 223 |
| 1.22 | Removing and installing radiator | 224 |
| 1.23 | Checking cooling system for leaks | 230 |
| 1.24 | Radiator fans V7 and V177 | 232 |
| 1.25 | Checking radiator fans V7 and V177 | 233 |
| 1.26 | Removing and installing radiator fan 2 V177 (left-side) | 240 |
| 1.27 | Removing and installing radiator fan V7 (right side) | 242 |
| 21 | - Turbocharging/supercharging | 243 |
| 1 | Checking charge air system with turbocharger | 243 |
| 1.1 | Safety precautions | 243 |
| 1.2 | Function | 243 |
| 1.3 | Hose connection diagram for charge pressure control | 243 |
| 1.4 | Checking turbocharger and charge pressure regulating valve | 244 |
| 1.5 | Effects of leaks in the intake and exhaust systems | 249 |
| 1.6 | Checking charge pressure control solenoid valve N75 | 249 |
| 1.7 | Checking charge pressure sender G31 | 254 |
| 1.8 | Connection diagram for overrun air recirculation control | 257 |
| 1.9 | Checking air recirculation valve for turbocharger N249 | 259 |
| 1.10 | Checking mechanical air recirculation valve | 263 |
| 2 | Servicing charge air system with turbocharger | 265 |
| 2.1 | Rules for cleanliness | 265 |
| 2.2 | Turbocharger - exploded view | 265 |
| 2.3 | Removing and installing turbocharger (left-side) | 267 |
| 2.4 | Removing and installing turbocharger (right-side) | 271 |
| 2.5 | Charge air cooler - exploded view | 275 |
| 2.6 | Removing and installing charge air cooler | 276 |
| 2.7 | Exploded view of charge air cooler - vehicles for hot countries with auxiliary radiator | 280 |
| 2.8 | Removing and installing charge air cooler - vehicles for hot countries with auxiliary radiator | 281 |
| 26 | - Exhaust system | 285 |
| 1 | Removing and installing parts of exhaust system | 285 |
| 1.1 | Exhaust system - exploded view | 285 |
| 1.2 | Separating centre and rear silencers | 288 |
| 1.3 | Removing and installing front exhaust pipe (left-side) | 289 |
| 1.4 | Removing and installing front exhaust pipe (right-side) | 290 |
| 1.5 | Removing and installing exhaust manifold (left-side) | 291 |



| | | |
|----------|--|------------|
| 1.6 | Removing and installing exhaust manifold (right-side) | 293 |
| 1.7 | Stress-free alignment of exhaust system | 296 |
| 1.8 | Checking exhaust system for leaks | 298 |
| 2 | Secondary air system | 299 |
| 2.1 | Principle and function | 299 |
| 2.2 | Secondary air system - exploded view | 300 |
| 2.3 | Checking secondary air inlet valve N112 | 301 |
| 2.4 | Checking secondary air pump relay J299 and secondary air pump motor V101 | 306 |
| 2.5 | Cleaning filter element for secondary air pump | 313 |
| 2.6 | Removing and installing secondary air pump | 313 |
| 2.7 | Checking combination valve for secondary air system for proper operation and leakage | 313 |
| 2.8 | Removing and installing combination valve for secondary air system (left-side) | 315 |
| 2.9 | Removing and installing combination valve for secondary air system (right-side) | 316 |
| 3 | Exhaust gas temperature monitoring | 318 |
| 3.1 | Checking exhaust gas temperature sender G235 and G236 | 318 |
| 3.2 | Removing and installing exhaust gas temperature sender | 321 |