

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Engine number</b> .....	<b>1</b>
<b>2 Engine data</b> .....	<b>2</b>
<b>3 Safety precautions</b> .....	<b>3</b>
<b>4 General repair instructions</b> .....	<b>5</b>
4.1 Rules for cleanliness .....	5
4.2 Checking for leaks in the fuel system .....	5
4.3 Contact corrosion! .....	5
<b>10 - Removing and installing engine</b> .....	<b>6</b>
<b>1 Removing and installing engine</b> .....	<b>6</b>
1.1 Removing lock carrier .....	7
1.2 Removing engine .....	13
1.3 Separating engine and gearbox .....	26
1.4 Securing engine to engine and gearbox stand .....	29
1.5 Installing engine .....	30
1.6 Checking solenoid valves for electrohydraulic engine mountings .....	35
<b>13 - Crankshaft group</b> .....	<b>40</b>
<b>1 Dismantling and assembling engine</b> .....	<b>40</b>
1.1 Lock carrier - exploded view of components .....	40
1.2 Moving lock carrier into service position .....	40
<b>2 Servicing work on pulley end</b> .....	<b>45</b>
2.1 Poly V-belt drive for alternator .....	45
2.2 Removing and installing poly V-belt .....	45
2.3 Removing and installing vibration damper .....	47
2.4 Renewing crankshaft oil seal (pulley end) .....	48
<b>3 Servicing work on timing chain end</b> .....	<b>51</b>
3.1 Drive plate - exploded view of components .....	51
3.2 Removing and installing drive plate .....	51
3.3 Renewing crankshaft oil seal (timing chain end) .....	52
3.4 Timing chain covers - exploded view of components .....	54
3.5 Removing and installing all timing chain covers .....	55
3.6 Camshaft timing chains - exploded view of components .....	67
3.7 Removing and installing camshaft timing chains .....	71
3.8 Detaching camshaft timing chains from camshafts .....	81
3.9 Drive chain for valve gear - exploded view of components .....	100
3.10 Removing and installing drive chain for valve gear .....	101
3.11 Chain for auxiliary drives - exploded view of components .....	103
3.12 Removing and installing chain for auxiliary drives .....	103
3.13 Auxiliary drives - exploded view of components .....	104
3.14 Renewing oil seals for auxiliary drives .....	105
3.15 Removing and installing spur gear drive .....	107
<b>4 Removing and installing crankshaft</b> .....	<b>112</b>
4.1 Crankshaft - exploded view of components .....	112
4.2 Allocation of main bearing shells for new crankshafts .....	115
4.3 Allocation of main bearing shells on used and machined crankshafts .....	116
4.4 Crankshaft dimensions .....	117
4.5 Measuring axial clearance .....	117
4.6 Measuring radial clearance .....	118
<b>5 Dismantling and assembling pistons and conrods</b> .....	<b>119</b>
5.1 Pistons and conrods - exploded view of components .....	119



5.2	Piston and cylinder dimensions .....	122
5.3	Measuring radial clearance of conrods .....	122
<b>15</b>	<b>- Cylinder head, valve gear .....</b>	<b>123</b>
<b>1</b>	<b>Removing and installing cylinder head .....</b>	<b>123</b>
1.1	Cylinder head - exploded view of components .....	123
1.2	Removing and installing cylinder head cover (left-side) .....	124
1.3	Removing and installing cylinder head cover (right-side) .....	127
1.4	Removing and installing cylinder head .....	129
1.5	Checking compression .....	133
<b>2</b>	<b>Servicing valve gear .....</b>	<b>138</b>
2.1	Valve gear - exploded view of components .....	138
2.2	Removing and installing camshafts .....	140
2.3	Checking axial clearance of camshafts .....	141
2.4	Removing and installing roller rocker fingers .....	142
2.5	Renewing valve stem oil seals .....	143
2.6	Checking valve guides .....	145
2.7	Checking valves .....	146
2.8	Valve dimensions .....	147
2.9	Machining valve seats .....	147
<b>3</b>	<b>Checking variable valve timing .....</b>	<b>150</b>
3.1	Testing the system .....	150
3.2	Checking camshaft control valves (solenoid valves) .....	152
<b>17</b>	<b>- Lubrication .....</b>	<b>157</b>
<b>1</b>	<b>Removing and installing parts of lubrication system .....</b>	<b>157</b>
1.1	Oil pump, sump (bottom section) - exploded view of components .....	157
1.2	Removing and installing sump (bottom section) .....	158
1.3	Removing and installing oil pump .....	162
1.4	Sump (top section) - exploded view of components .....	165
1.5	Removing and installing sump (top section) .....	166
1.6	Oil retention valve and spray nozzle valve - exploded view of components .....	173
1.7	Removing and installing oil retention valves and spray nozzle valve .....	173
1.8	Oil filter housing - exploded view of components .....	174
1.9	Removing and installing oil filter housing .....	175
1.10	Removing and installing oil cooler .....	176
1.11	Removing and installing oil pressure switch F1 .....	177
1.12	Checking oil pressure and oil pressure switch .....	178
1.13	Engine oil .....	179
1.14	Checking oil level .....	179
<b>19</b>	<b>- Cooling .....</b>	<b>181</b>
<b>1</b>	<b>Removing and installing parts of cooling system .....</b>	<b>181</b>
1.1	Diagram of coolant hose connections .....	181
1.2	Draining and filling cooling system .....	182
1.3	Coolant pump and thermostat - exploded view of components .....	187
1.4	Removing and installing coolant pump .....	189
1.5	Removing and installing thermostat .....	191
1.6	Checking thermostat .....	192
1.7	Coolant pipes - exploded view of components .....	192
1.8	Removing and installing coolant pipe (front) .....	193
1.9	Removing and installing coolant pipe (rear) .....	194
1.10	Removing and installing coolant pipe (left-side) .....	197
1.11	Removing and installing coolant pipe (right-side) .....	199
1.12	Removing and installing radiator .....	204
1.13	Removing and installing auxiliary radiator (left-side) .....	208

1.14	Removing and installing auxiliary radiator (right-side)	210
1.15	Checking cooling system for leaks	212
1.16	Radiator fan V7 and radiator fan 2 V177	214
1.17	Checking radiator fan V7 and radiator fan 2 V177	214
1.18	Removing and installing radiator fan V7 (left side)	221
1.19	Removing and installing radiator fan 2 V177 (right side)	222
<b>26</b>	<b>- Exhaust system</b>	<b>224</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>224</b>
1.1	Separating centre and rear silencers	227
1.2	Removing and installing front exhaust pipe (left-side) with starter catalytic converter and main catalytic converter	228
1.3	Removing and installing front exhaust pipe (right-side) with starter catalytic converter and main catalytic converter	235
1.4	Removing and installing exhaust manifold (left-side)	240
1.5	Removing and installing exhaust manifold (right-side)	242
1.6	Stress-free alignment of exhaust system	244
1.7	Checking exhaust system for leaks	245
<b>2</b>	<b>Servicing secondary air system</b>	<b>246</b>
2.1	Principle and function	246
2.2	Secondary air system - overview	247
2.3	Checking secondary air inlet valve N112	248
2.4	Checking secondary air pump relay J299 and secondary air pump motor V101	252
2.5	Removing and installing secondary air pump	258
2.6	Checking combination valve for secondary air system for proper operation and leakage	259
2.7	Removing and installing combination valve for secondary air system (left-side)	260
2.8	Removing and installing combination valve for secondary air system (right-side)	263