

Contents

| | |
|---|-----------|
| 01 - Self diagnosis | 1 |
| 1 Self diagnosis | 1 |
| 1.1 Self diagnosis | 1 |
| 1.2 Technical data of self diagnosis | 1 |
| 1.3 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit | 2 |
| 1.4 Interrogating and erasing fault memory | 3 |
| 1.5 Fault table | 4 |
| 1.6 Final control diagnosis | 12 |
| 1.7 Basic setting | 15 |
| 1.8 Coding control unit | 17 |
| 1.9 Reading measured value block | 18 |
| 1.10 Readout specifications for general vehicle inspection | 22 |
| 1.11 Readout specifications for injection pump | 23 |
| 1.12 Readout specifications for engine idling speed | 25 |
| 1.13 Readout specifications for exhaust gas recirculation | 26 |
| 1.14 Readout specifications for temperature senders | 27 |
| 1.15 Readout specifications for engine power output | 27 |
| 1.16 Readout specifications for charge pressure control | 28 |
| 23 - Mixture preparation, Injection | 30 |
| 1 Servicing Diesel direct injection system | 30 |
| 1.1 Servicing Diesel direct injection system | 30 |
| 1.2 Safety precautions | 30 |
| 1.3 Rules for cleanliness | 30 |
| 1.4 Fitting locations overview | 31 |
| 1.5 Servicing injection pump | 35 |
| 1.6 Removing and installing injection pump | 39 |
| 1.7 Dynamically checking and adjusting commencement of injection | 44 |
| 1.8 Removing, installing and testing injectors | 45 |
| 1.9 Renewing injection timing device cover O-ring | 47 |
| 1.10 Wiring and component check with test box V.A.G 1598/22 | 47 |
| 1.11 Renewing engine control unit | 48 |
| 1.12 Checking Diesel direct injection system current supply | 48 |
| 2 Testing injection control | 52 |
| 2.1 Testing injection control | 52 |
| 2.2 Checking injection adjuster control range | 52 |
| 2.3 Checking commencement of injection valve | 53 |
| 2.4 Checking fuel temperature sender | 54 |
| 3 Checking control unit input values | 55 |
| 3.1 Checking control unit input values | 55 |
| 3.2 Checking engine speed sender | 55 |
| 3.3 Checking needle lift sender | 56 |
| 3.4 Testing coolant temperature sender | 57 |
| 3.5 Checking intake manifold temperature sender | 58 |
| 3.6 Checking brake light switch and brake pedal switch | 59 |
| 3.7 Testing clutch pedal switch | 59 |
| 3.8 Checking modulating piston movement sender and quantity adjuster | 60 |
| 3.9 Checking air mass meter | 62 |
| 3.10 Checking accelerator position sender | 64 |
| 4 Testing signals from/to automatic gearbox | 66 |
| 4.1 Testing signals from/to automatic gearbox | 66 |
| 4.2 Testing gearshift signal | 66 |
| 4.3 Testing signal for accelerator pedal position | 67 |
| 4.4 Testing engine speed signal | 67 |

| | | |
|-----------|--|-----------|
| 4.5 | Testing kickdown signal | 68 |
| 5 | Testing signals from/to air conditioner | 68 |
| 5.1 | Testing signals from/to air conditioner | 68 |
| 5.2 | Testing air conditioner compressor shut-off | 68 |
| 5.3 | Testing air conditioner signal | 69 |
| 6 | Testing signals from/to dash panel insert | 69 |
| 6.1 | Testing signals from/to dash panel insert | 69 |
| 6.2 | Checking speed signal | 69 |
| 6.3 | Testing engine speed signal | 70 |
| 6.4 | Testing fuel consumption signal | 71 |
| 28 | Glow plug system | 72 |
| 1 | Checking glow plug system | 72 |
| 1.1 | Checking glow plug system | 72 |
| 1.2 | Testing operation | 72 |
| 1.3 | Checking glow plugs | 72 |
| 1.4 | Testing glow period warning lamp | 73 |