

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	18
1.3 Installing engine	19
13 - Crankshaft group	24
1 Dismantling and assembling engine	24
1.1 Poly V-belt drive for power steering pump, alternator, coolant pump and viscous fan - exploded view of components	24
1.2 Poly V-belt drive for air conditioner - exploded view of components	26
1.3 Routing of poly V-belt	27
1.4 Removing and installing poly V-belt	27
1.5 Removing and installing vibration damper	29
1.6 Removing and installing bracket for ancillaries	30
1.7 Toothed belt drive - exploded view of components	34
1.8 Removing and installing toothed belt	37
1.9 Checking semi-automatic tensioning roller for toothed belt	43
1.10 Positioning crankshaft at TDC with engine removed	43
2 Removing and installing sealing flanges and dual-mass flywheel/drive plate	45
2.1 Sealing flanges and dual-mass flywheel/drive plate - exploded view of components	45
2.2 Renewing crankshaft oil seal (pulley end)	47
2.3 Removing and installing dual-mass flywheel	50
2.4 Removing and installing drive plate	51
3 Removing and installing crankshaft	53
3.1 Crankshaft - exploded view of components	53
3.2 Removing and installing sender wheel for engine speed sender G28	54
3.3 Extracting and driving in needle bearing for crankshaft	55
3.4 Crankshaft dimensions	56
4 Dismantling and assembling pistons and conrods	57
4.1 Pistons and conrods - exploded view of components	57
4.2 Checking piston projection at TDC	60
4.3 Piston and cylinder dimensions	61
4.4 Measuring radial clearance of conrods	61
15 - Cylinder head, valve gear	63
1 Removing and installing cylinder head	63
1.1 Cylinder head - exploded view of components	63
1.2 Removing and installing cylinder head cover	65
1.3 Removing cylinder head	66
1.4 Installing cylinder head	74
1.5 Removing and installing intake manifold	77
1.6 Checking compression	78
2 Servicing valve gear	81
2.1 Valve gear - exploded view of components	81
2.2 Checking axial clearance of camshaft	82
2.3 Removing and installing camshaft	83
2.4 Checking hydraulic bucket tappets	87



2.5	Renewing valve stem oil seals	88
2.6	Valve dimensions	92
2.7	Machining valve seats	92
2.8	Checking valve guides	94
2.9	Checking valves	95
17	- Lubrication	96
1	Removing and installing parts of lubrication system	96
1.1	Sump, oil pump - exploded view of components	96
1.2	Oil filter bracket, oil filter - exploded view of components	99
1.3	Removing and installing sump	100
1.4	Removing and installing oil pump	107
1.5	Checking oil pressure and oil pressure switch	107
1.6	Engine oil	109
1.7	Checking oil level	109
19	- Cooling	111
1	Removing and installing parts of cooling system	111
1.1	Coolant hose connection diagram	111
1.2	Draining and filling cooling system	113
1.3	Coolant pump and thermostat - exploded view of components	118
1.4	Removing and installing coolant pump	119
1.5	Removing, installing and checking thermostat	120
1.6	Removing and installing coolant pipe	121
1.7	Removing and installing viscous fan	122
1.8	Removing and installing bearing for viscous fan in bracket	124
1.9	Removing and installing radiator	127
1.10	Checking cooling system for leaks	131
21	- Turbocharging/supercharging	134
1	Checking charge air system with turbocharger	134
1.1	Safety precautions	134
1.2	Requirements for turbocharging check	134
1.3	Effects of leaks in the intake and exhaust systems	134
1.4	Checking turbocharger and charge pressure	135
1.5	Hose connection diagram for charge pressure control	140
1.6	Checking solenoid valve for charge pressure control N75	142
1.7	Checking intake manifold pressure sender G71	145
2	Servicing charge air system with turbocharger	149
2.1	Rules for cleanliness	149
2.2	Turbocharger - exploded view of components	149
2.3	Removing and installing turbocharger	151
2.4	Charge air cooler - exploded view of components	156
2.5	Removing and installing charge air cooler	157
26	- Exhaust system	159
1	Removing and installing parts of exhaust system	159
1.1	Exhaust system - exploded view of components	159
1.2	Separating centre and rear silencers	161
1.3	Removing and installing exhaust manifold	162
1.4	Removing and installing catalytic converter with front exhaust pipe	163
1.5	Stress-free alignment of exhaust system	165
1.6	Checking exhaust system for leaks	166
2	Exhaust gas recirculation system	167
2.1	Exhaust gas recirculation system - exploded view of components	167
2.2	Hose connection diagram for exhaust gas recirculation	168

2.3	Checking mechanical exhaust gas recirculation valve	169
2.4	Checking exhaust gas recirculation	170
2.5	Checking exhaust gas recirculation valve N18	171