

## Contents

<b>20 - Fuel supply system</b> .....	<b>1</b>
<b>1 Notes for working on fuel supply system</b> .....	<b>1</b>
1.1 Notes for working on fuel supply system .....	1
1.2 General repair instructions .....	1
1.3 Safety precautions when working on the fuel supply system .....	1
1.4 Rules for cleanliness .....	1
<b>2 Fuel supply system - front-wheel drive</b> .....	<b>2</b>
2.1 Fuel supply system - front-wheel drive .....	2
2.2 Overview of components: fuel tank with attachments .....	3
2.3 Draining fuel tank .....	9
2.4 Removing and installing fuel tank with attachments .....	12
2.5 Overview of components: fuel delivery unit and fuel gauge sender until approx. 11.98 . . .	17
2.6 Testing fuel pump (electrical test) until approx. 11.98 .....	21
2.7 Testing fuel pump delivery rate until approx. 11.98 .....	25
2.8 Removing and installing fuel delivery unit until approx. 11.98 .....	27
2.9 Testing fuel gauge sender -G until approx. 11.98 .....	34
2.10 Removing and installing fuel gauge sender -G until approx. 11.98 .....	36
2.11 Overview of components: fuel delivery unit and fuel gauge sender from approx. 11.98 . . .	38
2.12 Testing fuel pump (electrical test) from approx. 11.98 .....	41
2.13 Testing fuel pump delivery rate from approx. 11.98 .....	44
2.14 Removing and installing fuel delivery unit from approx. 11.98 .....	47
2.15 Testing fuel gauge sender -G from approx. 11.98 .....	50
2.16 Removing and installing fuel gauge sender -G from approx. 11.98 .....	52
<b>3 Fuel supply system - four-wheel drive</b> .....	<b>52</b>
3.1 Fuel supply system - four-wheel drive .....	52
3.2 Overview of components: fuel tank with attachments - Vehicles with 4-cylinder or 6-cylinder engine and A6 allroad .....	53
3.3 Draining fuel tank .....	58
3.4 Removing and installing fuel tank with attachments - Vehicles with 4-cylinder or 6-cylinder engine and A6 allroad .....	61
3.5 Overview of components: fuel filler neck with expansion chamber - Vehicles with 4-cylinder or 6-cylinder engine and A6 allroad .....	66
3.6 Removing and installing fuel filler neck with expansion chamber - Vehicles with 4-cylinder or 6-cylinder engine and A6 allroad .....	71
3.7 Overview of components: fuel tank with attachments - Vehicles with 8-cylinder engine except for A6 allroad .....	74
3.8 Draining fuel tank .....	80
3.9 Removing and installing fuel tank with attachments - Vehicles with 8-cylinder engine except for A6 allroad .....	82
3.10 Overview of components: fuel filler neck with expansion chamber - Vehicles with 8-cylinder engine except for A6 allroad .....	87
3.11 Removing and installing fuel filler neck with expansion chamber - Vehicles with 8-cylinder engine except for A6 allroad .....	91
3.12 Overview of components: fuel delivery unit and fuel gauge senders - all engines .....	96
3.13 Testing fuel pump (electrical test) .....	106
3.14 Testing fuel pump delivery rate - Vehicles with 4-cylinder engine .....	110
3.15 Testing fuel pump delivery rate - Vehicles with 6-cylinder normally aspirated engine .....	111
3.16 Testing fuel pump delivery rate - Vehicles with 6-cylinder turbo engine .....	113
3.17 Testing fuel pump delivery rate - Vehicles with 8-cylinder normally aspirated engine (driven by toothed belt) .....	115
3.18 Testing fuel pump delivery rate - Vehicles with 8-cylinder normally aspirated engine (driven by timing chain) .....	117
3.19 Removing and installing fuel delivery unit .....	119
<b>4 Fuel pump system - Vehicles with 8-cylinder turbo engine</b> .....	<b>126</b>
4.1 Fuel pump system - Vehicles with 8-cylinder turbo engine .....	126



4.2	Function	126
4.3	Overview of components: fuel pump -G23	127
4.4	Testing fuel pump -G6 (pre-supply pump) (electrical test)	129
4.5	Testing fuel pump -G23 (electrical test)	132
4.6	Testing fuel pump control unit -J538	135
4.7	Testing fuel pump delivery rate - Vehicles with 8-cylinder turbo engine	142
4.8	Removing and installing fuel pump -G6	144
4.9	Removing and installing fuel pump -G23	144
<b>5</b>	<b>Fuel gauge senders - four-wheel drive</b>	<b>145</b>
5.1	Testing fuel gauge senders	145
5.2	Removing and installing fuel gauge sender I (-G)	147
5.3	Removing and installing fuel gauge sender II (-G169)	148
5.4	Removing and installing fuel gauge sender III (-G237)	152
<b>6</b>	<b>Servicing suction jet pump - four-wheel drive</b>	<b>155</b>
6.1	Servicing suction jet pump - four-wheel drive	155
6.2	Function of suction jet pump	155
6.3	Testing suction jet pump with connecting piece - Vehicles with 4-cylinder engine	157
6.4	Testing suction jet pump with connecting piece - Vehicles with 6-cylinder normally aspirated engine	159
6.5	Testing suction jet pump with connecting piece - Vehicles with 6-cylinder turbo engine	161
6.6	Testing suction jet pump with connecting piece - Vehicles with 8-cylinder normally aspirated engine (with toothed belt)	164
6.7	Testing suction jet pump with connecting piece - Vehicles with 8-cylinder normally aspirated engine (with timing chain)	166
6.8	Testing suction jet pump with connecting piece - Vehicles with 8-cylinder turbo engine	168
6.9	Removing and installing suction jet pump with connection piece	171
<b>7</b>	<b>Servicing fuel filter</b>	<b>182</b>
7.1	Servicing fuel filter	182
7.2	Fuel filter - Overview of components (except vehicles with 8-cylinder turbo engine)	183
7.3	Removing and installing fuel filter on vehicles with 8-cylinder turbo engine	184
<b>8</b>	<b>Servicing components of activated charcoal filter system - front-wheel drive and four-wheel drive</b>	<b>185</b>
8.1	Servicing components of activated charcoal filter system - front-wheel drive and four-wheel drive	185
<b>9</b>	<b>Servicing throttle mechanism - vehicles with mechanical accelerator linkage</b>	<b>187</b>
9.1	Servicing throttle mechanism - vehicles with mechanical accelerator linkage	187
9.2	Removing and installing throttle cable - Vehicles with 4-cylinder normally aspirated engine	187
9.3	Adjusting throttle cable - Vehicles with 4-cylinder normally aspirated engine	191
9.4	Removing and installing throttle cable - Vehicles with 4-cylinder turbo engine	191
9.5	Adjusting throttle cable - Vehicles with 4-cylinder turbo engine	195
9.6	Removing and installing throttle cable - Vehicles with 6-cylinder engine	195
9.7	Adjusting throttle cable - Vehicles with 6-cylinder engine	199
9.8	Testing adjustment of throttle cable on vehicles with automatic gearbox (testing kickdown switch)	200
<b>10</b>	<b>Servicing accelerator linkage - Vehicles with electronic throttle system (EPC)</b>	<b>202</b>
10.1	Servicing accelerator linkage - Vehicles with electronic throttle system (EPC)	202
10.2	Removing and installing accelerator pedal module with accelerator position sender	203