

Contents

20	Fuel supply system	1
1	Notes for working on fuel supply system	1
1.1	Safety precautions when working on the fuel supply system	1
1.2	Rules for cleanliness	1
2	Fuel tank - vehicles with front-wheel drive	3
2.1	Fuel tank with components - exploded view	3
2.2	Draining fuel tank	5
2.3	Removing and installing fuel tank with components	7
3	Fuel gauge sender - vehicles with front-wheel drive and 4-cylinder engine (distributor-type injection pump)	13
3.1	Fuel gauge sender - exploded view of components	13
3.2	Checking fuel gauge sender G	13
3.3	Removing and installing fuel gauge sender G	15
4	Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 4-cylinder engine (unit injector)	18
4.1	Fuel delivery unit and fuel gauge sender - exploded view of components	18
4.2	Checking fuel pump relay J17 and activation	19
4.3	Checking fuel pump (electrical test)	22
4.4	Removing and installing fuel delivery unit	25
4.5	Checking fuel gauge sender G	29
4.6	Removing and installing fuel gauge sender G	30
5	Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 6-cylinder engine up to vehicle identification no. 4B_2_109430	32
5.1	Fuel delivery unit and fuel gauge sender - exploded view of components	32
5.2	Checking fuel pump relay J17 and activation	34
5.3	Checking fuel pump (electrical test)	37
5.4	Checking low fuel level sender G210	40
5.5	Removing and installing fuel delivery unit	42
5.6	Checking fuel gauge sender G	48
5.7	Removing and installing fuel gauge sender G	50
6	Fuel delivery unit, fuel gauge sender - vehicles with front-wheel drive and 6-cylinder engine from vehicle identification no. 4B_2_109431	54
6.1	Fuel delivery unit and fuel gauge sender - exploded view of components	54
6.2	Suction-jet pump: operation	55
6.3	Checking fuel pump (electrical test)	56
6.4	Checking low fuel level sender G210	58
6.5	Removing and installing fuel delivery unit	60
6.6	Checking fuel gauge sender G	63
6.7	Removing and installing fuel gauge sender G	65
7	Fuel tank - vehicles with four-wheel drive	66
7.1	Fuel tank with components - exploded view	66
7.2	Draining fuel tank	67
7.3	Removing and installing fuel tank	70
7.4	Fuel filler neck with expansion chamber - exploded view of components	73
7.5	Removing and installing fuel filler neck with expansion chamber	75
7.6	Fuel delivery unit and fuel gauge senders - exploded view of components	78
7.7	Checking fuel pump relay J17 and activation	81
7.8	Checking fuel pump (electrical test)	84
7.9	Checking low fuel level sender G210	88
7.10	Removing and installing fuel delivery unit	89
7.11	Checking fuel gauge sender G	96
7.12	Removing and installing fuel gauge sender G	99
7.13	Removing and installing fuel gauge sender 2 G169	103



7.14	Removing and installing fuel gauge sender 3 G237	105
7.15	Suction-jet pump: operation	108
7.16	Checking suction-jet pump	109
7.17	Removing and installing suction jet pump with connecting piece	111
8	Servicing tandem pump - vehicles with 4-cylinder engine (unit injector)	116
8.1	Checking tandem pump	116
8.2	Removing and installing tandem pump	118
9	Servicing fuel filter	122
9.1	Fuel filter on vehicles with 4-cylinder engine (distributor-type injection pump) - exploded view of components	122
9.2	Removing and installing fuel filter - vehicles with 4-cylinder engine (distributor-type injection pump)	123
9.3	Fuel filter on vehicles with 4-cylinder engine (unit injector) - exploded view of components	124
9.4	Diagram of fuel hose and coolant hose connections - vehicles with 4-cylinder engine (unit injector)	126
9.5	Removing and installing fuel filter - vehicles with 4-cylinder engine (unit injector)	126
9.6	Fuel filter on vehicles with 6-cylinder engine - exploded view of components	127
9.7	Removing and installing fuel filter - vehicles with 6-cylinder engine	128
10	Bleeding fuel system	130
10.1	Vehicles with 4-cylinder engine (distributor-type injection pump)	130
10.2	Vehicles with 4-cylinder engine (unit injector)	131
10.3	Vehicles with 6-cylinder engine up to vehicle identification no. 4B_2_109430	131
10.4	Vehicles with 6-cylinder engine from vehicle identification no. 4B_2_109431 and A6 allroad	134
11	Checking fuel system for leaks	137
11.1	Vehicles with 4-cylinder engine (distributor-type injection pump)	137
11.2	Vehicles with 4-cylinder engine (unit injector)	138
11.3	Vehicles with 6-cylinder engine	140
12	Servicing accelerator mechanism	142
12.1	Accelerator mechanism on vehicles with accelerator position sender - exploded view of components	142
12.2	Checking accelerator position sender G79 - vehicles with 4-cylinder engine	143
12.3	Adjusting accelerator position sender G79 - vehicles with 4-cylinder engine	147
12.4	Checking accelerator position sender G79 - vehicles with 6-cylinder engine	149
12.5	Adjusting accelerator position sender G79 - vehicles with 6-cylinder engine	154
12.6	Vehicles with accelerator pedal module - exploded view of components	156
12.7	Checking accelerator position sender G79 - vehicles with 4-cylinder engine	158
12.8	Checking accelerator position sender G79 - vehicles with 6-cylinder engine	162
12.9	Removing and installing accelerator pedal module	167
12.10	Adapting kick-down function - vehicles with automatic gearbox	168