001 - 2,8 I fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 I fuel injection engine (121 kW - Motronic - 6-cylinder), Engine code ALW, Model year 1998	1-27
1. 2,8 I fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 I fuel injection engine (121 kW - Motronic - 6-cylinder), Engine code ALW, Model year 1998	1
2. 2,8 I fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 I fuel injection engine (121 kW - Motronic - 6-cylinder), Engine code ALW, Model year 1998	2
3. Earth connections	3
4. Battery, starter, alternator, starter inhibitor relay	4
 Battery, starter, alternator, starter inhibitor relay Motronic control unit, injectors, ignition coils 1 - 3, intake air temperature sender 	4 5
6. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant	6
temperature senders	-
7. Motronic control unit, automatic gearbox control unit, Hall senders	7
8. Motronic control unit, fuel pump relay, lambda probes, activated charcoal filter system solenoid	8
valve	
 Motronic control unit, air mass meter, inlet camshaft timing adjustment valves, intake manifold change-over valve, secondary air pump 	9
10. Fuel gauge sender, fuel pump, fuel pump relay, engine cooling	10
11. Dash panel insert, warning lamps, combi-processor in dash panel insert	11
12. Dash panel insert, combi-processor in dash panel insert, analogue clock, rev. counter,	12
speedometer, fuel gauge, coolant temperature gauge	
13. Dash panel insert, combi-processor in dash panel insert, warning lamps, brake pad wear warning	13
14. Dash panel insert, combi-processor in dash panel insert, immobilizer reading coil, diagnostic	14
connector 15. Janition/startor switch. X contact roliof roley	1 5
15. Ignition/starter switch, X contact relief relay	15
16. Lighting switch, left steering column switch, front and rear fog light switch	16
17. Switches and instruments - lighting control, headlight range control	17
18. Hazard warning light switch	18
19. Windscreen washer/wiper system, heated washer jets	19
20. Fuse box, number plate light, glove box light, fog light	20
21. Fuse box, headlights	21
22. Fuse box, brake light switch	22
23. Fuse box, horn, front and rear cigarette lighters, horn	23
24. Tail light, brake lights, turn signals rear, rear fog light, 12 V socket	24
25. Basic wiring for radio	25
26. Heater	26
20. Heated rear window, ambient temperature indicator, selector lever position indicator	20
27. Heated rear window, ambient temperature indicator, selector lever position indicator 002 - 1.8 I fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AEB, Model	27 28-37
	20-01
year 1998 1 1 8 I fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AEB. Model year	20
 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AEB, Model year 1998 	28
2. 1.8 I fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AEB, Model year	29
1998 2. Pattony starter, alternator, starter inhibitor relay	20
3. Battery, starter, alternator, starter inhibitor relay	30
4. Motronic control unit, injectors, Hall sender, coolant temperature sender, knock sensor 1	31
5. Motronic control unit, control valves, air mass meter, knock sensor 2, altitude sender, engine	32
speed sender, lambda probe	
6. Motronic control unit, throttle valve control unit	33
7. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender	34
8. Final output stage for ignition coils, ignition coil, spark plugs	35
9. Reversing light, engine cooling	36
10. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer	37
sender	
003 - Automatic gearbox (01V)	38-43
1. Automatic gearbox (01V)	38-39
2. Automatic gearbox control unit, solenoid valves, kick-down switch	40
3. Automatic gearbox control unit, multi-function switch, selector lever position indicator	40
4. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	41
5. Starter inhibitor relay, reversing light	42
004 - Central locking with anti-theft alarm system with interior monitoring	43 44-59
1. Central locking with anti-theft alarm system with interior monitoring	44-45
2. Central locking control unit, contact switch and horn anti-theft alarm system	46
3. Central locking control unit, interior locking switch, lock cylinder switch, driver's door	47
4. Central locking control unit, cylinder switch - front passenger's door, right door warning lamp	48
5. Central locking control unit, door warning lamp, left	49
C. Control looking control unit look sulinder switch, door, roor loft	50
 Central locking control unit, lock cylinder switch, door, rear left Central locking control unit, lock cylinder switch, door, rear right 	51

8. Central locking control unit, lock cylinder switch for tailgate/bootlid	52
9. Central locking control unit, tank filler flap release motor	53
10. Ultra-sonic sensor control unit, interior monitor switch, ultrasonic sensor	54 nger's 55
11. Entry light, door warning lamp, interior door handle lighting for driver's and front passe	igers 55
door 12. Entry lights, door warning lamps, interior door handle lighting for door, rear left and rig	nt, 56
ashtray illumination rear	II, 50
13. Footwell lights	57
14. Front interior light, interior light, rear reading lights	58
15. Front reading lights, vanity mirror contact switch	59
005 - Central locking without anti-theft alarm system	60-73
1. Central locking without anti-theft alarm system	60-61
2. Central locking control unit, aerial for central locking	62
3. Central locking control unit, interior locking switch, lock cylinder switch, driver's door	63
4. Central locking control unit, lock cylinder switch - front passenger's door	64
5. Central locking control unit, lock cylinder switch, door, rear left	65
6. Central locking control unit, lock cylinder switch, door, rear right	66
Central locking control unit, lock cylinder switch for tailgate/bootlid	67
8. Central locking control unit, tank filler flap release motor	68
9. Entry lights, door warning lamps and interior door handle lighting front, entry lights and	door 69
warning lamp, rear left	
10. Footwell lights front, interior door handle lighting rear, entry light and door warning lan	p, 70
rear right	
11. Footwell lights rear, luggage compartment lights	71
12. Front interior light, interior light, rear reading lights	72
13. Front reading lights, vanity mirror light	73
006 - Air conditioner with automatic control, Model year 1998	74-83
1. Air conditioner with automatic control, Model year 1998	74 75
 Air conditioner with automatic control, Model year 1998 Air conditioner 	75
4. Air conditioner, solar operation control unit, solar cell, fresh air blower control unit, fresh	
air blower	11
5. Air conditioner, ambient temperature sensor, sunlight penetration photo sensor, magne	ic coupling 78
relay	
6. Air conditioner, fresh air temperature sensor, vent temperature sender, air flow flap con	rol 79
motor and temperature flap, air quality sensor	
7. Air conditioner, temperature flap control motor, left, for defroster flap and central flap,	80
ambient temperature indicator	
8. Air conditioner, dash panel left vent illumination and rear vent	81
9. Air conditioner, engine cooling 6-cylinder-engine (ACK, ALG, AGA, AJG, ALF, ALW) ar	d 82
4-cylinder-engine (AEB, AJP)	
10. Air conditioner, engine cooling for diesel engines (AFB, AFN, AKN, AJM)	83
007 - Driver information system	84-89
1. Driver information system	84-85
2. Auto-check system, function selection switch, windscreen washer fluid warning contact	86
3. Auto-check system, bulb monitoring device	87
 Bulb monitoring device, side lights, dipped beam headlights Bulb monitoring device, tail lights, brake lights 	88 89
008 - Airbag	90-94
1. Airbag	90-91
2. Airbags and belt tensioners for driver and front passenger	92
3. Side airbags in front seats, rear belt tensioners	93
4. Rear side airbags	94
009 - Heated front seats and rear seat	95-99
1. Heated front seats and rear seat	95-96
2. Heated seat, driver's seat	97
3. Heated seat, front passenger's seat	98
4. Heated seat, rear seats	99
010 - 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine codes AJP, Model year	
1. 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine codes AJP, Model yea	
2. 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine codes AJP, Model yea	
3. Battery, starter, alternator, starter inhibitor and reversing light relay	102
4. Motronic control unit, injectors, Hall sender, coolant temperature sender, intake air temp	erature 103
sender, knock sensor 1	dor 404
5. Motronic control unit, control valves, air mass meter, knock sensor 2, engine speed ser lambda probe	der, 104

6. Motronic control unit, throttle valve control unit, spark plug connector, ignition coils, spark	105
plugs 7. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender	106
8. Reversing light, engine cooling	107
9. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer sender	108
011 - Automatic gearbox (01 N)	109-115
1. Automatic gearbox (01 N)	109-110
 Automatic gearbox control unit, solenoid valves, kick-down switch Automatic gearbox control unit, brake light switch,, gearbox speed sender, vehicle speed sender 	111 112
4. Automatic gearbox control unit, gear selector light bulb, starter inhibitor and reversing light	113
relay	
5. Automatic gearbox control unit, multi-function switch	114
6. Selector lever position indicator	115
012 - Taxi	116-123
1. Taxi 2. Taxi, alarm system control unit	116-117 118
3. Taxi, alarm system control unit	119
4. Taxi, taximeter	120
5. Taxi, two-way radio	121
6. Taxi, two-way radio	122
7. Taxi, data radio unit	123
013 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control	124-129
system (ASR) 1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system	124-125
(ASR)	121 120
2. ABS with EDL control unit, front speed sensor	126
ABS with EDL control unit, solenoid valve, rear speed sensor	127
4. ABS with EDL and TCS control unit, ABS warning lamp and traction control system	128
5. ABS with EDL control unit, brake light switch, traction control system switch 014 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system	129 130-136
(ASR/TCS) and electronic stability program (ESP)	130-130
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system	130-131
(ASR/TCS) and electronic stability program (ESP)	
2. ABS with EDL control unit, speed sensors	132
3. ABS with EDL control unit, ABS hydraulic unit, brake light switch, handbrake warning switch	133
ABS with EDL control unit, ABS hydraulic unit, return flow pump relay, relay for solenoid valves, electronic stability program hydraulic pump	134
5. ABS with EDS control unit, steering angle sender, lateral acceleration, brake pressure and yaw	135
rate	100
6. ABS with EDL control unit, dash panel insert	136
015 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or	137-145
without retraction function, Model year 1998	407
1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without	137
retraction function, Model year 1998 2. Memory operating unit, seat adjustment (with memory) control unit	138
3. Seat adjustment fuse and lumbar support adjustment for driver's seat	139
4. Seat adjustment with memory, driver's seat	140
5. Seat adjustment front passenger's seat	141
6. Mirror adjustment switches with or without retraction function	142
7. Mirror adjustment on driver's side, mirror memory control unit	143
 8. Mirror adjustment on front passenger's side, mirror memory control unit 9. Side airbags in front seats 	144 145
016 - Electrically adjustable mirrors, mirrors with and without retraction function, Model year 1998	146-148
1. Electrically adjustable mirrors, mirrors with and without retraction function, Model year 1998	146
2. Mirror adjustment, driver's side	147
3. Mirror adjustment, front passenger's side, seat adjustment fuse	148
017 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	149-153
 Daytime driving lights with front and rear fog lights (Norway/Sweden) Lighting switch, front and rear fog light switch, headlight dipper/flasher switch 	149-150 151
3. Ignition/starter switch, fog light, number plate light	152
4. Left and right headlight	153
018 - Window lifters, 4-door, Model year 1998	154-159
1. Window lifters, 4-door, Model year 1998	154
2. Electric window lifters, front left, fuses for window lifters	155
 Window lifters - front right Window lifters - rear left 	156 157
	101

5. Window lifters - rear right	158
6. Rear window lifter isolation switch	159
019 - 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AFN, Model year 1998	160-169
1. 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AFN, Model year 1998	160
2. 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AFN, Model year 1998	161
3. Battery, starter, alternator, starter inhibitor and reversing light relay	162
4. Glow plugs, relay for glow plugs	163
Diesel direct injection system control unit, diesel direct injection system relay, fuse, valves	164
6. Diesel direct injection system control unit, accelerator pedal position sender, brake light	165
switch, clutch pedal switch, injection pump	
7. Diesel direct injection system control unit, additional heater relay, fuses	166
8. Diesel direct injection system control unit, cruise control system switch, engine speed sender,	167
coolant temperature, intake manifold pressure, intake manifold temperature and needle lift	
9. Dash panel insert, warning lamps, speedometer sender, fuel gauge, oil temperature gauge, rev.	168
counter	
	169
10. Engine cooling	
020 - Auxiliary heater, Model year 1998	170-174
1. Auxiliary heater, Model year 1998	170
2. Auxiliary heater, Model year 1998	171
3. Auxiliary heater	172
	173
4. Auxiliary heater	
5. Auxiliary heater	174
021 - Auxiliary heater with radio-operated remote control and air conditioner	175-182
1. Auxiliary heater with radio-operated remote control and air conditioner	175-177
2. Heater control unit, auxiliary heater fuse, metering pump	178
	-
3. Control and display unit for air conditioner, fresh air blower, fresh air blower control unit	179
4. Auxiliary heater relay, solar cell isolation relay	180
5. Pre-selection clock, heater warning lamp	181
6. Auxiliary heating radio wave receiver, radio, telephone, auxiliary heater aerial	182
	183-187
022 - Trailer coupling	
1. Trailer coupling	183-184
2. Trailer coupling	185
3. Trailer coupling	186
4. Trailer coupling	187
023 - Servotronic	188-190
1. Servotronic	188-189
2. Servotronic	190
024 - Electrically operated rear roller blind	191-193
1. Electrically operated rear roller blind	191-192
2. Electrically operated rear roller blind	193
025 - 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1998	194-205
1. 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1998	194
2. 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1998	195
3. Battery, starter, alternator, starter inhibitor relay	196
4. Diesel direct injection system control unit, glow plugs relay, glow plugs	197
5. Diesel direct injection system control unit, air mass meter, injection pump control unit, diesel	198
direct injection system relay	
6. Diesel direct injection system control unit, cruise control system	199
7. Diesel direct injection system control unit, kick-down switch, idling switch, brake light switch,	200
	200
clutch pedal switch, low fuel level sender	
Diesel direct injection system control unit, engine speed sender, fuel pump relay	201
9. Diesel direct injection system control unit, reversing light	202
10. Relay and glow plugs for additional heater	203
11. Engine cooling	204
12. Dash panel insert, fuel pump, fuel gauge, rev. counter, oil temperature gauge, speedometer,	205
warning lamp	
026 - Radio Bose system Concert with and without CD changer	206-211
1. Radio Bose system Concert with and without CD changer	206-207
2. Radio Bose system Concert with and without CD changer	208
· · ·	
3. Radio Bose system Concert with and without CD changer	209
Radio Bose system Concert with and without CD changer	210
5. Radio Bose system Concert with and without CD changer	211
027 - Radio stereo system: Chorus, Concert	212-217
	212-217
1. Radio stereo system: Chorus, Concert	
2. Radio sound system Chorus and Concert	214
3. Radio sound system Chorus and Concert	215

4. Radio sound system Chorus and Concert	216
5. Radio sound system Chorus and Concert	217
028 - Ultrasonic parking aid	218-221
1. Ultrasonic parking aid	218-219
2. Ultrasonic parking aid	220
3. Ultrasonic parking aid	220
029 - Telephone AEG (D-network)	222-225
1. Telephone AEG (D-network)	222-223
2. Telephone AEG (D-network)	224
3. Telephone AEG (D-network)	225
030 - Mobile phone	226-229
1. Mobile phone	226-227
2. Mobile phone	228
3. Mobile phone	229
	230-236
031 - Navigation system	
1. Navigation system	230-231
2. Operating electronics control unit, navigation	232
3. Operating electronics control unit, navigation	233
Operating electronics control unit, navigation system operating unit	234
5. Operating electronics control unit, navigation control unit	235
Operating electronics control unit, navigation control unit	236
032 - Cruise control system petrol engines*	237-240
1. Cruise control system petrol engines*	237-238
2. Cruise control system	239
•	
3. Cruise control system	240
033 - Police vehicles, Model year 1998	241-252
1. Police vehicles, Model year 1998	241
2. Police vehicles, Model year 1998	242
3. Fuses, flasher relay for main beam headlight alarm system	243
4. Fuses, two-way radio switch	244
5. Roof signal system flashing blue light	245
6. Roof signal system flashing blue light, sender/receiver unit	246
7. Horn, connection for external equipment	247
	248
8. Tachograph, 12 V socket, external socket (220 V)	
9. Tachograph, weapons storage box	249
10. Two-way radio	250
11. Volume control	251
12. Alarm system switch, siren relay	252
034 - Electric sliding sunroof with automatic selection and convenient close feature	253-255
1. Electric sliding sunroof with automatic selection and convenient close feature	253-254
2. Electric sliding sunroof with automatic selection and convenient close feature	255
035 - Automatic anti-dazzle interior and exterior mirrors	256-258
1. Automatic anti-dazzle interior and exterior mirrors	256-257
2. Automatic anti-dazzle interior and exterior mirrors	258
036 - Headlight washer system	259-261
1. Headlight washer system	259-260
2. Headlight washer system	261
037 - Provision for radio	262-265
1. Provision for radio	262-263
2. Provision for radio, voltage supply, aerial	264
3. Provision for radio, loudspeakers	265
038 - Self-levelling suspension, Model year 1998	266-268
1. Self-levelling suspension, Model year 1998	266
2. Self-levelling suspension	267
3. Self-levelling suspension	268
039 - Avant models, rear, Model year 1998	269-274
1. Avant models, rear, Model year 1998	269
2. Number plate light, luggage compartment light, 12 V socket	270
Tailgate lock cylinder switch, glass breakage sensors, rear left side window	271
4. Heated rear window, rear fog light, high level brake light	272
5. Bulb monitoring device, left tail, brake light, rear turn signals	273
6. Reversing light switch, rear window washer/wiper system	274
040 - Headlights with gas discharge lamps and automatic headlight range control, Model year 1998	275-280
1. Headlights with gas discharge lamps and automatic headlight range control, Model year 1998	275-200
2. Ignition/starter switch, X contact relief relay	276
3. Liahtina switch. headliaht dipper switch	277

Fuses, gas discharge lamp, gas discharge lamp control unit	278
5. Control unit for headlight range control, vehicle level senders	279
6. Headlight range control motors	280
041 - Trailer coupling with driver information system, Model year 1998	281-284
1. Trailer coupling with driver information system, Model year 1998	281
2. Trailer coupling with driver information system	282
3. Trailer coupling with driver information system	283
4. Trailer coupling with driver information system	284
042 - Multi-function steering wheel, Model year 1998	285-287
1. Multi-function steering wheel, Model year 1998	285
2. Multi-function steering wheel	286
3. Multi-function steering wheel	287
043 - Heated steering wheel	288-290
1. Heated steering wheel	288-289
2. Heated steering wheel	290
•	290
044 - Electric seat adjustment front seats, without memory function	
1. Electric seat adjustment front seats, without memory function	291-292
2. Electric seat adjustment without memory function, front passenger's seat	293
3. Electric seat adjustment without memory function, driver's seat	294
4. Electric seat adjustment without memory function, earth connections, side airbag	295
045 - Electric seat adjustment sport seats	296-299
1. Electric seat adjustment sport seats	296-297
Electric seat adjustment sport seats, driver's seat	298
Electric seat adjustment sport seats, front passenger's seat	299
046 - Self-levelling suspension and automatic headlight range control, Model year 1998	300-304
1. Self-levelling suspension and automatic headlight range control, Model year 1998	300
2. Self-levelling suspension	301
3. Self-levelling suspension	302
4. Control unit for headlight range control, vehicle level senders	303
5. Headlight range control motors	304
047 - Provision for mobile phone	305-309
1. Provision for mobile phone	305-306
2. Provision for mobile phone	307
3. Provision for mobile phone	308
4. Provision for mobile phone	309
048 - Steering wheel with Tiptronic	310-313
1. Steering wheel with Tiptronic	310-311
2. Steering wheel with Tiptronic	312
3. Steering wheel with Tiptronic	313
049 - Radio navigation system (RNS)	314-322
1. Radio navigation system (RNS)	314-315
2. Radio navigation system	316
3. Radio navigation system	317
4. Radio navigation system	318
5. Radio navigation system	319
6. Radio navigation system	320
7. Radio navigation system, TV aerials saloon models	321
8. Radio navigation system, TV aerials Avant	322
050 - 2.8 I fuel injection (142 kW - Motronic - 6 cylinder), 2,4 I fuel injection (121 kW - Motronic	323-352
- 6 cylinder) engine codes AQD, Model year 1999	
1. 2.8 I fuel injection (142 kW - Motronic - 6 cylinder), 2,4 I fuel injection (121 kW - Motronic -	323
6 cylinder) engine codes AQD, Model year 1999	020
2. 2.8 I fuel injection (142 kW - Motronic - 6 cylinder), 2,4 I fuel injection (121 kW - Motronic -	324
6 cylinder) engine codes AQD, Model year 1999	524
3. Earth connections	325
4. Battery, starter, alternator, starter inhibitor relay	326
5. Motronic control unit, injectors, ignition coils 1 - 3, spark plugs	327
6. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant	328
temperature senders, intake air temperature sender	
7. Motronic control unit, automatic gearbox control unit, Hall senders	329
8. Motronic control unit, fuel pump relay, lambda probes, activated charcoal filter system solenoid	330
valve	
9. Motronic control unit, air mass meter, inlet camshaft timing adjustment valves, intake manifold	331
change-over valve	
10. Motronic control unit, cruise control system	332
11. Motronic control unit. secondarv air pump. pedal value sender	333

12. Fuel gauge sender, fuel pump, fuel pump relay, engine cooling	334
13. Dash panel insert, warning lamps, combi-processor in dash panel insert	335
14. Dash panel insert, analogue clock, radio wave controlled clock, rev. counter, speedometer, fuel	336
gauge, coolant temperature gauge	
15. Dash panel insert, combi-processor in dash panel insert, warning lamps, brake pad wear warning	337
16. Dash panel insert, combi-processor in dash panel insert, immobilizer reading coil, diagnostic	338
connector	
17. Ignition/starter switch, X contact relief relay	339
18. Lighting switch, left steering column switch, front and rear fog light switch	340
19. Switches and instruments - lighting control, headlight range control	341
20. Hazard warning light switch	342
21. Windscreen washer/wiper system, heated washer jets	343
22. Fuse box, number plate light, glove box light, fog light	344
23. Fuse box, headlights	345
24. Fuse box, brake light switch	346 347
25. Fuse box, horn, front and rear cigarette lighters, horn	347 348
26. Tail light, brake lights, turn signals rear, rear fog light, 12 V socket 27. Basic wiring for radio, illumination shelf and for cup holder	348 349
28. Heater	350
29. Heater	351
30. Heated rear window, Ambient temperature indicator, selector lever position indicator	352
051 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ARK, Model	353-363
year 1999	000-000
1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ARK, Model year	353
1999	000
2. Battery, starter, alternator	354
3. Motronic control unit, injectors, hall sender, intake manifold pressure sender, coolant	355
temperature sender, intake air temperature sender	000
4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender	356
5. Motronic control unit, lambda probe, air mass meter	357
6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch	358
7. Motronic control unit, accelerator pedal position sender, cruise control system	359
8. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender	360
9. Final output stage for ignition coils, ignition coil, spark plugs	361
10. Reversing light, engine cooling	362
11. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer	363
sender	
052 - 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine code AJP, Model year 1999	364-372
1. 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine code AJP, Model year 1999	364
2. 1.8 I fuel injection engine (92 kW - Motronic - 4-cylinder), engine code AJP, Model year 1999	365
3. Motronic control unit, control valves, air mass meter, knock sensor 2, engine speed sender,	366
lambda probe	
4. Motronic control unit, throttle valve control unit, spark plug connector, ignition coils, spark	367
plugs	
5. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender	368
6. Reversing light, engine cooling	369
7. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer sender	370
8. Reversing light, engine cooling	371
9. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer sender	372
053 - 1.8 I fuel injection engine (92 kW - Motronic - 4 cylinder) engine code ARH, Model year 1999	373-382
1. 1.8 I fuel injection engine (92 kW - Motronic - 4 cylinder) engine code ARH, Model year 1999	373
2. Battery, starter, alternator	374
3. Motronic control unit, injectors, hall sender, coolant temperature sender, intake air temperature	375
sender, engine speed sender	376
4. Motronic control unit, control valves, knock sensor 1, knock sensor 2	370
 Motronic control unit, lambda probe, air mass meter Motronic control unit, throttle valve control unit, spark plug connector, ignition coils, spark 	378
	570
plugs 7. Motronic control unit, accelerator pedal position sender, cruise control system	379
8. Motronic control unit, fuel pump relay, brake light switch, clutch pedal switch	379
9. Fuel pump, fuel gauge sender, reversing light, engine cooling	381
10. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedometer	382
sender	002
054 - 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AFN, Model year 1999	383-392
1. 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AFN, Model year 1999	383
2. 1.9 litre turbo-diesel engine (81 kW. 4-cvlinder), engine codes AFN. Model vear 1999	384

	3. Glow plugs, glow plug relay, reversing light	385
	4. Diesel direct injection system relay, diesel direct injection system control unit, fuse, valves	386
	5. Diesel direct injection system control unit, accelerator pedal position sender, brake light	387
	switch, clutch pedal switch, injection pump	
	6. Diesel direct injection system control unit, additional heater relay, additional heater fuse	388
	7. Diesel direct injection system control unit, cruise control system, engine speed sender, coolant	389
	temperature, intake manifold pressure, intake manifold temperature and needle lift	
	8. Dash panel insert, warning lamps, speedometer sender, fuel gauge, oil temperature gauge, rev.	390
	counter	
	9. Engine cooling	391
	10. Engine cooling	392
	5 - 1.4 I fuel injection engine (142 kW - Motronic - cylinder 6), 2.4 I fuel injection engine (121	393-402
k٧	/ - Motronic - cylinder 6) engine codes ALW, Model year 1999	
	1. 1.4 I fuel injection engine (142 kW - Motronic - cylinder 6), 2.4 I fuel injection engine (121 kW	393
	- Motronic - cylinder 6) engine codes ALW, Model year 1999	
	2. 1.4 I fuel injection engine (142 kW - Motronic - cylinder 6), 2.4 I fuel injection engine (121 kW	394
	- Motronic - cylinder 6) engine codes ALW, Model year 1999	005
	3. Battery, starter, alternator, starter inhibitor relay	395
	4. Motronic control unit, injectors, ignition coils 1 - 3, intake air temperature sender	396
	5. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant	397
	temperature senders	000
	6. Motronic control unit, Hall senders	398
	7. Motronic control unit, fuel pump relay, lambda probes, activated charcoal filter system solenoid	399
	valve	400
	8. Motronic control unit, air mass meter, inlet camshaft timing adjustment valves, intake manifold	400
	change-over valve, secondary air pump	404
	9. Fuel gauge sender, fuel pump, fuel pump relay, engine cooling	401
05	10. Dash panel insert, coolant and oil pressure control, speedometer sender	402
05	6 - 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1999	403-414
	1. 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1999	403
	2. 2,5 litre turbo-diesel engine (110 kW, 6-cylinder), engine codes AFB, Model year 1999	404 405
	 Battery, starter, alternator, starter inhibitor relay Diesel direct injection system control unit, glow plugs relay, glow plugs 	405
	5. Diesel direct injection system control unit, air mass meter, injection pump control unit, air	400
	mass meter, diesel direct injection system relay	407
	6. Diesel direct injection system control unit, cruise control system	408
	7. Diesel direct injection system control unit, kick-down switch, idling switch, brake light switch,	400
	clutch pedal switch, low fuel level sender	405
	8. Diesel direct injection system control unit, engine speed sender, fuel pump relay	410
	9. Diesel direct injection system control unit, reversing light	411
	10. Relay and glow plugs for additional heater	412
	11. Engine cooling	413
	12. Dash panel insert, fuel pump, fuel gauge, rev. counter, oil temperature gauge, speedometer,	414
	warning lamp	
05	7 - Automatic gearbox (01N)	415-421
	1. Automatic gearbox (01N)	415-416
	2. Automatic gearbox control unit, solenoid valves, kick-down switch	417
	3. Automatic gearbox control unit, brake light switch, gearbox speed sender, vehicle speed sender	418
	4. Automatic gearbox control unit, gear selector light bulb, starter inhibitor and reversing light	419
	relay	
	5. Automatic gearbox control unit, multi-function switch	420
	6. Selector lever position indicator	421
05	8 - Automatic gearbox (01V), (01L)	422-428
	1. Automatic gearbox (01V), (01L)	422-423
	2. Automatic gearbox control unit, solenoid valves, kick-down switch	424
	3. Automatic gearbox control unit, multi-function switch	425
	4. Automatic gearbox control unit, Tiptronic switch	426
	5. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, selector lever	427
	position indicator	
	6. Reversing light, starter inhibitor relay	428
05	9 - Central locking with anti-theft alarm system with interior monitoring	429-444
	1. Central locking with anti-theft alarm system with interior monitoring	429-430
	Central locking control unit, contact switch and horn anti-theft alarm system	431
	3. Central locking control unit, interior locking switch, lock cylinder switch, driver's door	432
	4. Central locking control unit, cylinder switch - front passenger's door, right door warning lamp	433
	5. Central locking control unit. door warning lamp. left	434

6. Central locking control unit, lock cylinder switch, door, rear left	435
7. Central locking control unit, lock cylinder switch, door, rear right	436
8. Central locking control unit, lock cylinder switch for tailgate/bootlid	437
9. Central locking control unit, tank filler flap release motor	438
10. Ultra-sonic sensor control unit, interior monitor switch, ultrasonic sensor	439
11. Ultra-sonic sensor, entry light, door warning lamp, interior door handle lighting for driver's	440
	440
and front passenger's door	444
12. Entry lights, door warning lamps, interior door handle lighting for door, rear left and right,	441
ashtray illumination rear	
13. Footwell lights	442
14. Front interior light, interior light, rear reading lights	443
15. Front reading lights, vanity mirror contact switch	444
060 - Central locking without anti-theft alarm system	445-458
1. Central locking without anti-theft alarm system	445-446
2. Central locking control unit, aerial for central locking	447
3. Central locking control unit, interior locking switch, lock cylinder switch, driver's door	448
4. Central locking control unit, lock cylinder switch - front passenger's door	449
5. Central locking control unit, lock cylinder switch, door, rear left	450
6. Central locking control unit, lock cylinder switch, door, rear right	451
7. Central locking control unit, lock cylinder switch for tailgate/bootlid	452
8. Central locking control unit and anti-theft alarm, tank filler flap release motor, release button	453
÷ .	400
for tailgate/bootlid lock cylinder	454
9. Entry lights, door warning lamps and interior door handle lighting front, entry lights and door	454
warning lamp, rear left	
10. Footwell lights front, interior door handle lighting rear, entry light and door warning lamp,	455
rear right	
11. Footwell lights rear, luggage compartment light Avant models	456
12. Luggage compartment lights, saloon models, front interior light, interior light, rear reading	457
lights	
13. Front reading lights, illuminated vanity mirrors	458
061 - Automatic anti-dazzle interior and exterior mirrors	459-461
1. Automatic anti-dazzle interior and exterior mirrors	459-460
2. Automatic anti-dazzle interior and exterior mirrors	461
062 - Driver information system	462-467
1. Driver information system	462-463
2. Auto-check system, function selection switch, windscreen washer fluid warning contact	464
3. Auto-check system, bulb monitoring device	465
4. Bulb monitoring device, side lights, dipped beam headlights	466
5. Bulb monitoring device, tail lights, brake lights	467
)63 - Auxiliary heater, Model year 1999	468-472
1. Auxiliary heater, Model year 1999	468
2. Auxiliary heater, Model year 1999	469
3. Auxiliary heater	470
4. Auxiliary heater	471
5. Auxiliary heater	472
064 - Airbag	473-477
1. Airbag	473-474
2. Airbags and belt tensioners for driver and front passenger	475
3. Curtain airbag and side airbags in front seats	476
4. Rear belt tensioner igniter, rear side airbags	477
065 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control	478-483
system (ASR)	
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system	478-479
(ASR)	
ABS with EDL control unit, speed sensor front, speed sensor rear right	480
3. ABS with EDL control unit, solenoid valve, rear left speed sensor	481
4. ABS with EDL and TCS control unit, ABS warning lamp and traction control system	482
5. ABS with EDL control unit, brake light switch, traction control system switch	483
066 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system	484-490
ASR/TCS) and electronic stability program (ESP)	
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system	484-485
(ASR/TCS) and electronic stability program (ESP)	
(ASR/TCS) and electronic stability program (ESP) 2. ABS with EDL control unit, speed sensors	486
(ASR/TCS) and electronic stability program (ESP)2. ABS with EDL control unit, speed sensors3. ABS with EDL control unit, ABS hydraulic unit, brake light switch, handbrake warning switch	486 487
(ASR/TCS) and electronic stability program (ESP) 2. ABS with EDL control unit, speed sensors	486

ABS with EDL control unit, steering angle sender and yaw rate	489
6. ABS with EDS control unit, senders lateral acceleration and brake pressure, dash panel inst	ert 490
067 - Air conditioner with automatic control, Model year 1999	491-500
1. Air conditioner with automatic control, Model year 1999	491
2. Air conditioner with automatic control, Model year 1999	492
3. Air conditioner	493
4. Air conditioner, solar operation control unit, solar cell, fresh air blower control unit, fresh	494
air blower	
5. Air conditioner, ambient temperature sensor, sunlight penetration photo sensor, magnetic co	oupling 495
relay	
6. Air conditioner, fresh air temperature sensor, vent temperature sender, air flow flap control	496
motor and temperature flap, air quality sensor	
7. Air conditioner, temperature flap control motor, left, for defroster flap and central flap,	497
ambient temperature indicator	
8. Air conditioner, dash panel left vent illumination and rear vent	498
9. Air conditioner, engine cooling petrol engines	499
10. Air conditioner, engine cooling diesel engines	500
068 - Avant models, rear, Model year 1999	501-508
1. Avant models, rear, Model year 1999	501
2. Number plate light, luggage compartment light, 12 V socket	502 503
 Tailgate lock cylinder switch, glass breakage sensors, rear left side window Heated rear window, rear fog light, high level brake light 	503
5. Bulb monitoring device, tail lights, brake lights, turn signals rear	505
6. Reversing light switch, rear window washer/wiper system	506
7. Aerials for radio, telephone/mobile phone, navigation system and radio-operated remote co	
for auxiliary heater	507
8. Aerials radio navigation system, TV	508
069 - Telephone	509-512
1. Telephone	509-510
2. Telephone	511
3. Telephone	512
070 - Trailer coupling with driver information system, Model year 1999	513-516
1. Trailer coupling with driver information system, Model year 1999	513
2. Trailer coupling with driver information system	514
3. Trailer coupling with driver information system	515
4. Trailer coupling with driver information system	516
071 - Trailer coupling	517-521
1. Trailer coupling	517-518
2. Trailer coupling	519
3. Trailer coupling	520
4. Trailer coupling	521
072 - Servotronic	522-524
1. Servotronic	522-523
2. Servotronic	524
073 - Cruise control system for petrol engines with manual electric throttle operation	525-528
1. Cruise control system for petrol engines with manual electric throttle operation	525-526
2. Cruise control system	527
 Cruise control system Electric sliding sunroof with automatic selection and convenient close feature 	528 529-531
1. Electric sliding sunroof with automatic selection and convenient close feature	529-530
2. Electric sliding surroof with automatic selection and convenient close feature	531
075 - Window lifter, 4-door, Model year 1999	532-537
1. Window lifter, 4-door, Model year 1999	532
2. Electric window lifter, front left, fuses for window lifter	533
3. Window lifter - front right	534
4. Window lifter - rear left	535
5. Window lifter - rear right	536
6. Rear window lifter isolation switch	537
076 - Auxiliary heater with radio-operated remote control and air conditioner, Model year 1999	538-544
1. Auxiliary heater with radio-operated remote control and air conditioner, Model year 1999	538
2. Auxiliary heater with radio-operated remote control and air conditioner, Model year 1999	539
3. Heater control unit, auxiliary heater fuse, metering pump	540
4. Control and display unit for air conditioner, fresh air blower, fresh air blower control unit	541
5. Auxiliary heater relay, solar cell isolation relay	542
6. Pre-selection clock, heater warning lamp	543
7. Auxiliarv heating radio wave receiver. radio. telephone. auxiliarv heater aerial	544

077 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	545-549
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	545-546
2. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	547
	548
3. Ignition/starter switch, fog light, number plate light	
4. Left and right headlight	549
078 - Headlights with gas discharge lamps and automatic headlight range control, Model year 1999	550-555
1. Headlights with gas discharge lamps and automatic headlight range control, Model year 1999	550
2. Ignition/starter switch, X contact relief relay	551
3. Lighting switch, headlight dipper switch	552
4. Fuses, gas discharge lamp, gas discharge lamp control unit	553
5. Control unit for headlight range control, vehicle level senders	554
• •	555
6. Headlight range control motors	
079 - Self-levelling suspension and automatic headlight range controlm, Model year 1999	556-560
1. Self-levelling suspension and automatic headlight range controlm, Model year 1999	556
2. Self-levelling suspension	557
3. Self-levelling suspension	558
4. Control unit for headlight range control, vehicle level senders	559
5. Headlight range control motors	560
080 - Navigation system	561-567
1. Navigation system	561-562
	563
2. Operating electronics control unit, navigation	
3. Operating electronics control unit, navigation	564
Operating electronics control unit, navigation system operating unit	565
Operating electronics control unit, navigation control unit	566
Operating electronics control unit, navigation control unit	567
081 - Mobile phone	568-572
1. Mobile phone	568-569
2. Mobile phone	570
3. Mobile phone	571
•	
4. Mobile phone	572
082 - Provision for mobile phone	573-576
1. Provision for mobile phone	573-574
2. Provision for mobile phone	575
3. Provision for mobile phone	576
083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or	577-585
083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999	577-585
083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without	
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 	577-585 577
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 	577-585 577 578
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 	577-585 577 578 579
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat 	577-585 577 578 579 580
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 	577-585 577 578 579
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat 	577-585 577 578 579 580
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment switches with or without retraction function 	577-585 577 578 579 580 581
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment switches with or without retraction function Mirror adjustment on driver's side, mirror memory control unit 	577-585 577 578 579 580 581 582 583
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit 	577-585 577 578 579 580 581 582 583 583 584
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 	577-585 577 578 579 580 581 582 583 583 584 585
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio 	577-585 577 578 579 580 581 582 583 584 585 584 585 586-589
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats Provision for radio Provision for radio 	577-585 577 578 579 580 581 582 583 584 585 584 585 586-589 586-589
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial 	577-585 577 578 579 580 581 582 583 584 585 584 585 586-589 586-587 588
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial 	577-585 577 578 579 580 581 582 583 584 585 584 585 586-589 586-587 588
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, CD changer 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Nerror adjustment on front passenger's side, mirror memory control unit Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, CD changer Radio, aerials 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, CD changer Radio, aerials Radio, aerials 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, cD changer Radio, aerials Radio, amplifier with bass loudspeaker Front and rear loudspeakers 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, cD changer Radio, aerials Radio, amplifier with bass loudspeaker Front and rear loudspeakers Aerials for radio Symphony (saloon models) 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 4. Seat adjustment front passenger's seat 6. Mirror adjustment on front passenger's seat 6. Mirror adjustment on driver's side, mirror memory control unit 8. Side airbags in front seats 084 - Provision for radio 1. Provision for radio 2. Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer 1. Radio Bose system Concert, Symphony with and without CD changer 3. Radio, aerials 4. Radio, amplifier with bass loudspeaker 5. Front and rear loudspeakers 6. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (Avant models) 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 4. Seat adjustment with memory, driver's seat 5. Seat adjustment front passenger's seat 6. Mirror adjustment on driver's side, mirror memory control unit 8. Mirror adjustment on front passenger's side, mirror memory control unit 9. Side airbags in front seats 084 - Provision for radio 1. Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer 1. Radio Bose system Concert, Symphony with and without CD changer 2. Radio, aerials 4. Radio, amplifier with bass loudspeaker 5. Front and rear loudspeakers 6. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (Avant models) 086 - Radio stereo system: Chorus, Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, acrials Radio, aerials Radio, amplifier with bass loudspeaker Front and rear loudspeakers Aerials for radio Symphony (saloon models) Aerials for radio Symphony (Avant models) 086 - Radio stereo system: Chorus, Concert Radio stereo system: Chorus, Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 4. Seat adjustment with memory, driver's seat 5. Seat adjustment front passenger's seat 6. Mirror adjustment on driver's side, mirror memory control unit 8. Mirror adjustment on front passenger's side, mirror memory control unit 9. Side airbags in front seats 084 - Provision for radio 1. Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer 1. Radio Bose system Concert, Symphony with and without CD changer 2. Radio, aerials 4. Radio, amplifier with bass loudspeaker 5. Front and rear loudspeakers 6. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (Avant models) 086 - Radio stereo system: Chorus, Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, acrials Radio, aerials Radio, amplifier with bass loudspeaker Front and rear loudspeakers Aerials for radio Symphony (saloon models) Aerials for radio Symphony (Avant models) 086 - Radio stereo system: Chorus, Concert Radio stereo system: Chorus, Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603 598-599
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 2. Memory operating unit, seat adjustment (with memory) control unit 3. Seat adjustment fuse and lumbar support adjustment for driver's seat 4. Seat adjustment with memory, driver's seat 5. Seat adjustment front passenger's seat 6. Mirror adjustment on driver's side, mirror memory control unit 8. Mirror adjustment on front passenger's side, mirror memory control unit 9. Side airbags in front seats 084 - Provision for radio 1. Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer 1. Radio, amplifier with bass loudspeaker 6. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (saloon models) 7. Aerials for radio Symphony (Avant models) 086 - Radio serve system: Chorus, Concert 1. Radio sound system Chorus and Concert 3. Radio sound system Chorus and Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603 598-599 600
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, loudspeakers Radio Bose system Concert, Symphony with and without CD changer Radio, CD changer Radio, CD changer Radio, aerials Radio, amplifier with bass loudspeakers Front and rear loudspeakers Aradia for radio Symphony (aloon models) Aerials for radio Symphony (aloon models) Aerials for radio Symphony (Avant models) O86 - Radio stereo system: Chorus, Concert Radio sound system Chorus and Concert Radio sound system Chorus and Concert Radio sound system Chorus and Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603 598-599 600 601 602
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment with memory, driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio, voltage supply, aerial Provision for radio, loudspeakers 085 - Radio Bose system Concert, Symphony with and without CD changer Radio, aerials Radio, aerials Radio, amplifier with bass loudspeaker Front and rear loudspeakers Aerials for radio Symphony (saloon models) Aerials for radio Symphony (saloon models) Aerials for radio Symphony (Avant models) 086 - Radio sourd system Chorus and Concert Radio sourd system Chorus and Concert Radio sourd system Chorus and Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603 598-599 600 601 602 603
 083 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, Model year 1999 Memory operating unit, seat adjustment (with memory) control unit Seat adjustment fuse and lumbar support adjustment for driver's seat Seat adjustment front passenger's seat Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on driver's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Mirror adjustment on front passenger's side, mirror memory control unit Side airbags in front seats 084 - Provision for radio Provision for radio Provision for radio, loudspeakers Radio Bose system Concert, Symphony with and without CD changer Radio, CD changer Radio, CD changer Radio, aerials Radio, amplifier with bass loudspeakers Front and rear loudspeakers Aradia for radio Symphony (aloon models) Aerials for radio Symphony (aloon models) Aerials for radio Symphony (Avant models) O86 - Radio stereo system: Chorus, Concert Radio sound system Chorus and Concert Radio sound system Chorus and Concert Radio sound system Chorus and Concert 	577-585 577 578 579 580 581 582 583 584 585 586-589 586-589 586-587 588 589 590-597 590-591 592 593 594 595 596 597 598-603 598-599 600 601 602

:	2. Radio navigation system	606
;	3. Radio navigation system	607
	Radio navigation system with and without CD changer	608
1	5. Radio navigation system	609
(Radio navigation system, radio Bose sound system connection	610
	7. Radio navigation system, radio Bose loudspeakers	611
1	8. Radio navigation system, loudspeakers	612
	9. Radio navigation system, loudspeakers	613
	10. Radio navigation system	614
	11. Radio navigation system	615
	12. Radio navigation system, TV aerials saloon models	616
	13. Radio navigation system, TV aerials Avant	617
	- Steering wheel with Tiptronic	618-621
	1. Steering wheel with Tiptronic	618-619
	2. Steering wheel with Tiptronic	620
	3. Steering wheel with Tiptronic	621
	- Multi-function steering wheel, Model year 1999	622-626
	1. Multi-function steering wheel, Model year 1999	622
	- · ·	623-624
	2. Multi-function steering wheel	
	3. Multi-function steering wheel	625
	4. Multi-function steering wheel	626
	- Electric seat adjustment front seats, without memory function	627-631
	1. Electric seat adjustment front seats, without memory function	627-628
	2. Electric seat adjustment without memory function, front passenger's seat	629
	Electric seat adjustment without memory function, driver's seat	630
	 Electric seat adjustment without memory function, earth connections, side airbag 	631
	- Taxi, From model year 1999	632-639
	1. Taxi, From model year 1999	632
	2. Taxi, From model year 1999	633
	3. Taxi, alarm system control unit	634
	4. Taxi, alarm system control unit	635
	5. Taxi, taximeter	636
	6. Taxi, two-way radio	637
	7. Taxi, data radio unit, two-way radio loudspeaker	638
	8. Taxi, data radio unit	639
	- Police vehicles, From model year 1999	640-651
	1. Police vehicles, From model year 1999	640
	2. Police vehicles, From model year 1999	641
	3. Fuses, flasher relay for main beam headlight alarm system	642
	4. Fuses, two-way radio switch	643
	5. Roof signal system flashing blue light	644
	6. Roof signal system flashing blue light, sender/receiver unit	645
	7. Horn, connection for external equipment	646
	8. Tachograph, 12 V socket, external socket (220 V)	647
	9. Tachograph, weapons storage box	648
	10. Two-way radio	649
	11. Volume control	650
	12. Alarm system switch, siren relay	651
093 -	- Headlight washer system	652-654
	1. Headlight washer system	652-653
	2. Headlight washer system	654
	- Radiator fan control 300 W with and without air conditioner for engine, 2.4 I, 121 kW, engine	655-657
	s APZ, Model year 1999	
	1. Radiator fan control 300 W with and without air conditioner for engine, 2.4 I, 121 kW, engine	655
	codes APZ, Model year 1999	
	2. Radiator fan control unit, radiator fan thermo-switches, air conditioner pressure switch	656
	3. Radiator fan control unit, radiator fan, continued coolant circulation pump	657
	- CAN bus wires	658-661
	1. CAN bus wires	658-659
	2. CAN bus wires, high bus connection	660
	3. CAN bus wires, low bus connection	661
	- 2.7 I fuel injection engine (195kW-bi-turbo engine) engine codes AJK, Model year 1999	662-674
	1. 2.7 I fuel injection engine (195kW-bi-turbo engine) engine codes AJK, Model year 1999	662
	2. 2.7 I fuel injection engine (195kW-bi-turbo engine) engine codes AJK, Model year 1999	663
	3. Battery, starter, alternator, starter inhibitor relay	664
	4. Motronic control unit. iniectors. ianition coils 1 - 3. spark pluas	665

5. Motronic control unit, throttle valve control unit, ignition coils 4 - 6, spark plugs	666
6. Motronic control unit, knock sensors, engine speed sender, coolant temperature sender	
air temperature sender	
7. Motronic control unit, Hall sender, charge air pressure sender	668
8. Motronic control unit, fuel pump relay, lambda probes, activated charcoal filter system	solenoid 669
valve	
9. Motronic control unit, air mass meter, charge pressure control solenoid valve, inlet car	nshaft 670
timing adjustment valves, exhaust gas temperature sender, by-pass air cut-off valve	
10. Motronic control unit, cruise control system, brake light switch	671
	672
11. Motronic control unit, pedal value sender, fuel pump, fuel gauge sender	
12. Engine cooling	673
13. Dash panel insert, coolant and oil pressure control, speedometer sender	674
097 - Ultrasonic parking aid	675-678
1. Ultrasonic parking aid	675-676
2. Ultrasonic parking aid	677
3. Ultrasonic parking aid	678
098 - 4.2 I-fuel injection engine (220 kW - Motronic - 8 cylinder), 3.7 I-fuel injection engine (19	
	079-095
kW - Motronic - 8 cylinder) engine codes ARS, Model year 1999	
1. 4.2 I-fuel injection engine (220 kW - Motronic - 8 cylinder), 3.7 I-fuel injection engine (1	91 kW 679
- Motronic - 8 cylinder) engine codes ARS, Model year 1999	
	91 kW 680
2. 4.2 I-fuel injection engine (220 kW - Motronic - 8 cylinder), 3.7 I-fuel injection engine (1	91 KVV 000
- Motronic - 8 cylinder) engine codes ARS, Model year 1999	
3. Battery, starter, alternator	681
4. Starter inhibitor relay	682
5. Injectors, ignition coils cylinder 1- 4	683
6. Injectors, ignition coils cylinder 5-8	684
7. Throttle valve control unit, accelerator pedal position senders, cruise control system su	vitch 685
8. Secondary air pump relay, secondary air pump motor, activated charcoal filter system	
	solellolu 000
valve 1 (pulsed)	
9. Lambda probe before catalyst	687
10. Air mass meter, lambda probes after catalyst	688
11. Fuel pump relay, Hall sender, temperature sender	689
12. Knock sensors, engine speed sender	690
13. Brake light switch, cruise control system brake pedal switch	691
14. Oil level thermo sender, fuel system diagnostic pump	692
15. Engine cooling	
16. Dash panel insert, fuel pump	693
TO. Dash parlet lisert, luci pullip	694
	694
17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coo	694
17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coo warning lamp	694 lant shortage 695
17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coo	694 lant shortage 695
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coo warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mod 	694 lant shortage 695
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coo warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Moo year 1999 	lant shortage 694 del 695
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 	lant shortage 694 del 695
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 	lant shortage 694 695 del 696-707 odel year 696
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 	lant shortage 694 del 695
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 	lant shortage 694 695 del 696-707 odel year 696 697
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature/code 	lant shortage 694 695 del 696-707 odel year 696 697
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature sender 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature/code 	lant shortage 694 695 del 696-707 odel year 696 697
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, accelerator pedal position sender, cruise control system 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 702
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701
 Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700 701 702 703
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 704
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mod year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mod 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, accelerator pedal position sender, cruise control system 8. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 Battery, starter, alternator Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch Motronic control unit, fuel system diagnostic pump, secondary air pump Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender Final output stage for ignition coils, ignition coil, spark plugs Reversing light, engine cooling Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707 708-713 708-713
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, accelerator pedal position sender, cruise control system 8. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temperature sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, accelerator pedal position sender, cruise control system 8. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 201Fitting Locations: Fitting Locations: 1998 Model Year 1. Position of fuses in fuse box, behind side cover of dash panel, left 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707 708-713 708
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel pump relay fuel pump, fuel gauge sender 8. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 201Fitting Locations: Fitting Locations: 1998 Model Year Position of fuses in fuse box, behind side cover of dash panel, left 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707 708-713 708 709 708
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 1. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. Topoint relay carrier, behind shelf on driver's side 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 697 698 699 700 701 702 703 704 705 706 707 705 706 707 708-713 708 709 710
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, trottle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 10. Fitting Locations: Fitting Locations: 1998 Model Year 11. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. 13-point relay carrier, behind shelf on driver's side 4. Micro-central electrics, behind shelf on driver's side, 8-point relay carrier, behind shelf 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 697 698 699 700 701 702 703 704 705 706 707 705 706 707 708-713 708 709 710
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel system diagnostic pump, secondary air pump 9. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 1. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. Topoint relay carrier, behind shelf on driver's side 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 697 698 699 700 701 702 703 704 705 706 707 705 706 707 708-713 708 709 710
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coowarning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Motyear 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 6. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 201Fitting Locations: Fitting Locations: 1998 Model Year 1. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. 13-point relay carrier, behind shelf on driver's side 4. Micro-central electrics, behind shelf on driver's side, 8-point relay carrier, behind shelf on driver's side 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707 on 708-713 on 711
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel pump relay, fuel pump, sender, cruise control system 8. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 201Fitting Locations: Fitting Locations: 1998 Model Year 1. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. 13-point relay carrier, behind shelf on driver's side 4. Micro-central electrics, behind shelf on driver's side, 8-point relay carrier, behind shelf driver's side, behind micro-central electrics 5. Relay carrier, driver's side, behind dash panel at central carrier, 3-pont relay carrier in 	lant shortage 694 695 del 696-707 odel year 696 rature 697 698 697 698 699 700 701 702 703 704 705 706 707 705 706 707 708-713 708 709 710
 Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 Battery, starter, alternator Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender Motronic control unit, lambda probes, air mass meter, lambda probe after catalyst Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch Motronic control unit, accelerator pedal position sender, cruise control system Motronic control unit, fuel system diagnostic pump, secondary air pump Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender Final output stage for ignition coils, ignition coil, spark plugs Reversing light, engine cooling Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender - Fitting Locations: Fitting Locations: 1998 Model Year Position of fuses in fuse box, behind side cover of dash panel, left Position of fuses in fuse box, behind side cover of dash panel, left To-pint relay carrier, behind shelf on driver's side, 8-point relay carrier, behind shelf driver's side, behind micro-central electrics Relay carrier, driver's side, behind dash panel at central carrier, 3-pont relay carrier in electronics box, plenum chamber 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 699 700 701 702 703 704 705 706 707 708-713 on 711 712 712
 17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/cool warning lamp 099 - 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot year 1999 1. 1.8 I fuel injection turbo engine (110 kW - Motronic - cylinder 4) engine codes ANB, Mot 1999 2. Battery, starter, alternator 3. Motronic control unit, injectors, hall sender, charge air pressure sender, coolant temper sender, intake air temperature sender 4. Motronic control unit, knock sensor 1, knock sensor 2, engine speed sender 5. Motronic control unit, throttle valve control unit, clutch pedal switch, brake light switch 7. Motronic control unit, fuel pump relay, fuel pump, sender, cruise control system 8. Motronic control unit, fuel pump relay, fuel pump, fuel gauge sender 10. Final output stage for ignition coils, ignition coil, spark plugs 11. Reversing light, engine cooling 12. Dash panel insert, immobilizer reading coil, coolant and oil pressure control, speedor sender 201Fitting Locations: Fitting Locations: 1998 Model Year 1. Position of fuses in fuse box, behind side cover of dash panel, left 2. Position of fuses in fuse box, behind side cover of dash panel, left 3. 13-point relay carrier, behind shelf on driver's side 4. Micro-central electrics, behind shelf on driver's side, 8-point relay carrier, behind shelf driver's side, behind micro-central electrics 5. Relay carrier, driver's side, behind dash panel at central carrier, 3-pont relay carrier in 	lant shortage 694 del 696-707 odel year 696 rature 697 698 699 700 701 702 703 704 705 706 707 on 708-713 on 711