

001 - Basic equipment, From model year 2000	1-26
1. Basic equipment, From model year 2000	1
2. Earth connections	2
3. Ignition/starter switch, X contact relief relay	3
4. Battery, starter, alternator, starter inhibitor relay	4
5. Lighting switch, left steering column switch, front and rear fog light switch	5
6. Switches and instruments-lighting control, headlight range control	6
7. Hazard warning light switch	7
8. Windscreen washer/wiper system	8
9. Fuse box, heated washer jets, front fog lights	9
10. Fuse box, number plate light, glove box light	10
11. Fuse box, heated exterior mirror, brake light switch	11
12. Fuse box, horn relay	12
13. Fuse box, front and rear cigarette lighters, horn	13
14. Fuse box, right headlight	14
15. Fuse box, left headlight	15
16. Left tail light, reversing light, high level brake light bulb	16
17. Right tail light, fuel pump, fuel gauge senders, heated rear window	17
18. Dash panel insert, warning lamp	18
19. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, speedometer	19
20. Dash panel insert, analogue clock, brake pad/lining wear warning, radio wave controlled clock	20
21. Dash panel insert, oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact	21
22. Dash panel insert, immobilizer reading coil, oil level/oil temperature sender	22
23. Dash panel insert, diagnosis connection	23
24. Basic wiring for radio, connection for switch illumination, shelf illumination	24
25. Heater, fresh air blower	25
26. Heater, control motors	26
002 - 2.8 litre fuel injection (142 kW - Motronic - 6 cylinder), 2.4 litre fuel injection (121 kW - Motronic - 6 cylinder) engine codes APS, From model year 2000	27-41
1. 2.8 litre fuel injection (142 kW - Motronic - 6 cylinder), 2.4 litre fuel injection (121 kW - Motronic - 6 cylinder) engine codes APS, From model year 2000	27
2. 2.8 litre fuel injection (142 kW - Motronic - 6 cylinder), 2.4 litre fuel injection (121 kW - Motronic - 6 cylinder) engine codes APS, From model year 2000	28
3. Battery, starter, alternator, starter inhibitor relay	29
4. Motronic control unit, injectors, ignition coils 1 - 3, spark plugs	30
5. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant temperature senders, intake air temperature sender	31
6. Motronic control unit, automatic gearbox control unit, Hall senders	32
7. Motronic control unit, fuel pump relay, lambda probes	33
8. Air mass meter, lambda probes downstream of catalytic converter	34
9. Motronic control unit, inlet camshaft timing adjustment valves, intake manifold change-over valve	35
10. Motronic control unit, cruise control system	36
11. Motronic control unit, secondary air pump, accelerator pedal position senders	37
12. Engine cooling	38
13. Dash panel insert, fuel pump	39
14. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	40
15. Brake light switch, cruise control system brake pedal switch	41
003 - 1.8 litre fuel injection turbo engine (110 kW / 132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2000	42-55
1. 1.8 litre fuel injection turbo engine (110 kW / 132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2000	42
2. 1.8 litre fuel injection turbo engine (110 kW / 132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2000	43
3. Battery, starter, alternator	44
4. Motronic control unit, Motronic current supply relay	45
5. Motronic control unit, injectors	46
6. Motronic control unit, knock sensors, engine speed sender	47
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	48
8. Motronic control unit, lambda probes, air mass meter	49
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor	50
10. Motronic control unit, fuel pump relay	51
11. Ignition coils, output stage, spark plugs	52
12. Ignition coil 4. reversing light switch	53

13. Engine cooling, dash panel insert, fuel pump	54
14. Dash panel insert	55
004 - Automatic gearbox (01V), (01L)	56-63
1. Automatic gearbox (01V), (01L)	56-57
2. Automatic gearbox control unit, solenoid valves, kick-down switch	58
3. Automatic gearbox control unit, multi-function switch	59
4. Automatic gearbox control unit, Tiptronic switch	60
5. Automatic gearbox control unit, Tiptronic switch	61
6. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, selector lever position indicator	62
7. Reversing light, starter inhibitor relay	63
005 - Automatic gearbox (01N)	64-70
1. Automatic gearbox (01N)	64-65
2. Automatic gearbox control unit, starter inhibitor and reversing light relay	66
3. Automatic gearbox control unit, solenoid valves	67
4. Automatic gearbox control unit, selector lever lock solenoid, gearbox speed sender	68
5. Automatic gearbox control unit, brake light switch, multi-function switch	69
6. Automatic gearbox control unit	70
006 - Airbags	71-76
1. Airbags	71-72
2. Airbags and belt tensioners for driver and front passenger	73
3. Side airbags in front seats, rear belt tensioners	74
4. Crash sensors, rear side airbags, curtain airbags	75
5. Rear belt tensioner igniter - centre, rear side airbags	76
007 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stabilisation program (ESP)	77-83
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stabilisation program (ESP)	77-78
2. ABS with EDL control unit, speed sensors	79
3. ABS with EDL control unit, brake light switch, handbrake warning switch	80
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	81
5. ABS with EDL control unit, steering angle sender, lateral acceleration sender, yaw rate sender	82
6. ABS with EDL control unit, brake pressure sender	83
008 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	84-90
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR)	84-85
2. ABS with EDL control unit, speed sensors	86
3. ABS with EDL control unit, solenoid valve	87
4. ABS with EDL control unit, CAN bus	88
5. ABS with EDL control unit, traction control system switch	89
6. Brake light switch	90
009 - 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine codes AKN*, From model year 2000	91-104
1. 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine codes AKN*, From model year 2000	91
2. 2.5 litre turbo-diesel engine (110 kW / 132 kW - 6-cylinder), engine codes AKN*, From model year 2000	92
3. Battery, starter, alternator, starter inhibitor relay	93
4. Glow plugs, relay for glow plugs	94
5. Diesel direct injection system control unit, diesel direct injection system relay	95
6. Diesel direct injection system control unit, injection pump control unit, air mass meter	96
7. Diesel direct injection system control unit, cruise control system switch, brake light switch	97
8. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender	98
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel cooling pump relay	99
10. Diesel direct injection system control unit, ambient temperature sensor	100
11. Additional heater	101
12. Engine cooling	102
13. Dash panel insert, fuel gauge senders	103
14. Dash panel insert, speedometer sender, oil pressure switch	104
010 - 1.9 litre turbo-diesel engine (81 kW - 4-cylinder), engine codes AVG, From model year 2000	105-116
1. 1.9 litre turbo-diesel engine (81 kW - 4-cylinder), engine codes AVG, From model year 2000	105
2. 1.9 litre turbo-diesel engine (81 kW - 4-cylinder). engine codes AVG. From model year 2000	106

3. Battery, starter, alternator, starter inhibitor and reversing light relay	107
4. Glow plug relay, glow plugs, reversing light	108
5. Diesel direct injection system control unit, diesel direct injection system relay, air mass meter	109
6. Diesel direct injection system control unit, accelerator pedal position sender, injection pump	110
7. Diesel direct injection system control unit, coolant temperature sender, engine speed	111
8. Diesel direct injection system control unit, cruise control system switch, brake light switch	112
9. Diesel direct injection system control unit, accelerator pedal position sender, additional heater	113
10. Engine cooling	114
11. Dash panel insert, fuel gauge senders	115
12. Dash panel insert, speedometer sender, oil pressure switch	116
011 - Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	117-137
1. Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	117-118
2. Central locking control unit, anti-theft alarm system contact switch (bonnet), anti-theft alarm system horn	119
3. Central locking control unit, interior locking switch on driver's side	120
4. Central locking control unit, door contact switch on driver's side	121
5. Central locking control unit, door contact switch on front passenger's side, interior locking switch on front passenger's side	122
6. Central locking control unit, left door warning lamp, right door warning lamp	123
7. Central locking control unit, rear left door contact switch, rear right door contact switch	124
8. Central locking control unit, electric window motors	125
9. Central locking control unit, lock cylinder switch for tailgate/boot lid	126
10. Central locking control unit, release button for tailgate/boot lid lock cylinder, tailgate/boot lid release motor, tank filler flap release motor	127
11. Central locking control unit, luggage compartment light, aerial for central locking	128
12. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	129
13. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	130
14. Front left entry light, front right entry light, door opening illumination on driver's side, door opening illumination on front passenger's side	131
15. Door warning lamps, door handle lighting, ashtray illumination	132
16. Footwell lights	133
17. Front interior light, rear reading lamps	134
18. Front reading lamps, illumination for vanity mirrors	135
19. Connection 58s	136
20. Luggage compartment lights	137
012 - Ultra-sonic parking aid, rear	138-141
1. Ultra-sonic parking aid, rear	138-139
2. Ultra-sonic parking aid	140
3. Ultra-sonic parking aid	141
013 - Ultra-sonic parking aid, front and rear	142-148
1. Ultra-sonic parking aid, front and rear	142-143
2. Parking aid control unit, rear parking aid warning buzzer	144
3. Parking aid control unit, ultra-sonic sensors in rear bumper	145
4. Parking aid control unit, ultra-sonic sensors in front bumper	146
5. Parking aid control unit, reversing light switch	147
6. Parking aid control unit, parking aid button	148
014 - Air conditioner with automatic control, From model year 2000	149-160
1. Air conditioner with automatic control, From model year 2000	149
2. Air conditioner with automatic control, From model year 2000	150
3. Control and display unit for air conditioner	151
4. Vent temperature sender, fresh air blower, solar roof	152
5. Air conditioning system magnetic coupling, magnetic coupling relay, ambient temperature sensor	153
6. Air flow flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor	154
7. Control motors, potentiometers	155
8. Control and display unit for air conditioner, fuses 3, 4	156
9. Illumination for dash panel vents	157
10. Engine cooling with radiator fan control unit for petrol engines	158
11. Engine cooling with radiator fan relay for petrol engines	159
12. Engine cooling for diesel engines	160
015 - Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	161-167
1. Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	161
2. Auxiliary heater with radio-operated remote control and air conditioner, From model year 2000	162
3. Batterv. heater control unit	163

4. Control and display unit for air conditioner, solar cell isolation relay, solar roof	164
5. Control and display unit for air conditioner, solar cells isolation relay 2	165
6. Dash panel insert, function selection switch II in centre console	166
7. Auxiliary heating radio wave receiver, radio/telephone/auxiliary heater aerial	167
016 - Auxiliary heater, From model year 2000	168-173
1. Auxiliary heater, From model year 2000	168
2. Auxiliary heater, From model year 2000	169
3. Battery, heater control unit	170
4. Thermotronic control unit, auxiliary heater relay, fresh air blower (auxiliary heater) relay	171
5. Thermotronic control unit, heated rear window switch	172
6. Dash panel insert, function selection switch II in centre console	173
017 - 1.8 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ARH, From model year 2000	174-187
1. 1.8 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ARH, From model year 2000	174
2. 1.8 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ARH, From model year 2000	175
3. Battery, starter, alternator	176
4. Motronic control unit, Motronic current supply relay	177
5. Motronic control unit, injectors	178
6. Motronic control unit, knock sensors, engine speed sender	179
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	180
8. Motronic control unit, lambda probes, air mass meter	181
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor	182
10. Motronic control unit, fuel pump relay	183
11. Motronic control unit, ignition coils, spark plugs	184
12. Starter inhibitor and reversing light relay, reversing lights	185
13. Engine cooling, dash panel insert, fuel pump	186
14. Dash panel insert	187
018 - Headlight washer system	188-190
1. Headlight washer system	188-189
2. Headlight washer system	190
019 - Servotronic	191-193
1. Servotronic	191-192
2. Servotronic	193
020 - Heated front seats and rear seat	194-198
1. Heated front seats and rear seat	194-195
2. Heated seat, driver's seat	196
3. Heated seat, front passenger's seat	197
4. Heated seat, rear seats	198
021 - Electrically operated rear roller blind	199-201
1. Electrically operated rear roller blind	199-200
2. Electrically operated rear roller blind	201
022 - Driver information system	202-208
1. Driver information system	202-203
2. Auto-check system, function selection switch	204
3. Dash panel insert, ambient temperature indicator, bulb monitoring device	205
4. Bulb monitoring device, side lights, dipped beam headlights	206
5. Bulb monitoring device, tail lights, brake lights	207
6. Ambient temperature sensor	208
023 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, From model year 2000	209-218
1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with or without retraction function, From model year 2000	209
2. Memory operating unit, light bulbs for memory operating unit	210
3. Seat adjustment (with memory) control unit, driver's seat front height adjustment motor, driver's seat rake adjustment sender	211
4. Ignition/starter switch, lumbar support adjustment switch, driver's seat, lumbar support longitudinal- and height adjustment motor, driver's seat	212
5. Seat adjustment (with memory) control unit, driver's seat height adjustment switches, longitudinal adjustment and height adjustment senders, driver's seat longitudinal adjustment motor	213
6. Front passenger's seat longitudinal adjustment and height adjustment switches, front passenger's seat longitudinal adjustment motors	214
7. Front passenger's seat lumbar support adjustment switch, front passenger's seat lumbar support adjustment motor	215

8. Mirror adjustment switches with or without retraction function	216
9. Mirror adjustment on driver's side, mirror memory control unit	217
10. Mirror adjustment on front passenger's side, mirror memory control unit	218
024 - Mobile phone	219-223
1. Mobile phone	219-220
2. Operating electronics control unit (telephone), microphone for telephone	221
3. Operating electronics control unit (telephone), telephone/navigation systems loudspeaker	222
4. Mobile phone	223
025 - Radio stereo system: Chorus, Concert	224-230
1. Radio stereo system: Chorus, Concert	224-225
2. Radio, rear window aerial, aerial motor	226
3. Radio, CD changer	227
4. Radio, amplifier with bass loudspeaker	228
5. Radio, front and rear loudspeakers	229
6. Rear loudspeakers	230
026 - 4,2 litre-fuel injection engine (220 kW, 250 kW - Motronic - 8 cylinder), 3,7 litre-fuel injection engine (191 kW - Motronic - 8 cylinder) engine code AQG, From model year 2000	231-247
1. 4,2 litre-fuel injection engine (220 kW, 250 kW - Motronic - 8 cylinder), 3,7 litre-fuel injection engine (191 kW - Motronic - 8 cylinder) engine code AQG, From model year 2000	231
2. 4,2 litre-fuel injection engine (220 kW, 250 kW - Motronic - 8 cylinder), 3,7 litre-fuel injection engine (191 kW - Motronic - 8 cylinder) engine code AQG, From model year 2000	232
3. Battery, starter, alternator	233
4. Motronic control unit, starter inhibitor relay	234
5. Motronic control unit, injectors and ignition coils for cylinders 1 - 4	235
6. Motronic control unit, injectors and ignition coils for cylinders 5 - 8	236
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders, cruise control system switch	237
8. Motronic control unit, knock sensor 1, engine speed sender, coolant temperature senders	238
9. Motronic control unit, Hall senders, brake light switch	239
10. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve 1 (pulsed)	240
11. Motronic control unit, lambda probes, air mass meter	241
12. Motronic control unit, fuel pump relay	242
13. Motronic control unit, CAN bus	243
14. Engine cooling with radiator fan relay	244
15. Engine cooling with radiator fan control unit	245
16. Dash panel insert, fuel pump, fuel gauge	246
17. Dash panel insert	247
027 - Provision for mobile phone	248-251
1. Provision for mobile phone	248-249
2. Provision for mobile phone, operating electronics control unit (telephone), microphone for telephone	250
3. Provision for mobile phone	251
028 - Radio Bose sound system: Concert, Symphony with or without CD changer	252-260
1. Radio Bose sound system: Concert, Symphony with or without CD changer	252-253
2. Radio, diagnosis connection	254
3. Radio, CD changer	255
4. Radio, aerials	256
5. Radio, amplifier with bass loudspeaker (luggage compartment, right)	257
6. Amplifier with bass loudspeaker (luggage compartment, right), front and rear loudspeakers	258
7. Radio aerials Symphony saloon models	259
8. Radio aerials Symphony Avant	260
029 - Avant models, rear, From model year 2000	261-270
1. Avant models, rear, From model year 2000	261
2. Luggage compartment light, 12 V socket	262
3. Tailgate lock cylinder switch, release button for tailgate lock cylinder	263
4. Number plate light, glass breakage sensors - rear side windows	264
5. Rear window washer/wiper system	265
6. Bulb monitoring device front, left tail light	266
7. Bulb monitoring device front, right tail light	267
8. Reversing light switch	268
9. Aerials for radio, telephone/mobile phone, navigation system and radio-operated remote control for auxiliary heater	269
10. Aerials radio navigation system, TV	270
030 - Telephone	271-275
1. Telephone	271-272

2. Telephone transmitter and receiver unit, telephone microphone, telephone handset	273
3. Telephone handset, telephone transmitter and receiver unit, radio/telephone/auxiliary heater aerial	274
4. Telephone transmitter and receiver unit, telephone/navigation systems loudspeaker	275
031 - Electric windows, 4-door, From model year 2000	276-282
1. Electric windows, 4-door, From model year 2000	276
2. Fuses for electric windows, electric windows-front left	277
3. Electric windows-front right	278
4. Electric windows-rear left	279
5. Electric windows-rear right	280
6. Rear electric window isolation switch	281
7. Connection (open), connection (closed)	282
032 - Electric sliding sunroof with	283-285
1. Electric sliding sunroof with	283-284
2. Electric sliding sunroof with	285
033 - Trailer coupling	286-291
1. Trailer coupling	286-287
2. Turn signal switch, hazard warning light switch	288
3. Trailer socket, tail light - left and right	289
4. Trailer socket, rear left fog light bulb, high level brake light bulb	290
5. Brake light switch, reversing light switch	291
034 - Trailer coupling with driver information system, From model year 2000	292-296
1. Trailer coupling with driver information system, From model year 2000	292
2. Hazard warning light switch, turn signal switch	293
3. Trailer socket, bulb monitoring device	294
4. Trailer socket, rear left fog light bulb, high level brake light bulb	295
5. Brake light switch, reversing light switch	296
035 - Steering wheel with Tiptronic	297-301
1. Steering wheel with Tiptronic	297-298
2. Operating unit in steering wheel, horn plate	299
3. Operating unit in steering wheel, airbag igniter - driver's side	300
4. Dual tone horn relay, high tone horn, low tone horn	301
036 - Multi-function steering wheel, From model year 2000	302-306
1. Multi-function steering wheel, From model year 2000	302
2. Operating unit in steering wheel	303
3. Multi-function steering wheel control unit, radio, multi-function steering wheel interface	304
4. Multi-function steering wheel control unit, multi-function steering wheel interface, telephone transmitter and receiver unit	305
5. Multi-function steering wheel control unit, dual tone horn relay, high tone horn, low tone horn	306
037 - Self-levelling suspension and automatic headlight range control, From model year 2000	307-313
1. Self-levelling suspension and automatic headlight range control, From model year 2000	307
2. Self-levelling suspension control unit	308
3. Self-levelling suspension control unit, self-levelling suspension compressor relay, self-levelling suspension sender	309
4. Automatic static headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	310
5. Headlight range control motor - left, headlight range control motor - right	311
6. Automatic dynamic headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	312
7. Headlight range control motor - left, headlight range control motor - right	313
038 - Automatic anti-dazzle interior and exterior mirrors	314-317
1. Automatic anti-dazzle interior and exterior mirrors	314-315
2. Automatic anti-dazzle interior and exterior mirrors	316
3. Automatic anti-dazzle interior and exterior mirrors	317
039 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	318-323
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	318-319
2. X contact relief relay, ignition/starter switch, number plate light	320
3. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	321
4. Left headlight, front fog lights	322
5. Headlight, right	323
040 - Heated steering wheel	324-326
1. Heated steering wheel	324-325
2. Heated steering wheel	326
041 - Electric seat adjustment front seats, without memory function	327-332
1. Electric seat adjustment front seats, without memory function	327-328
2. Electric seat adjustment without memory function. driver's seat	329

3. Lumbar support adjustment for driver's and front passenger's seat	330
4. Electric seat adjustment without memory function, front passenger's seat	331
5. Electric seat adjustment without memory function, earth connections, side airbag	332
042 - Headlights with gas discharge lamps and automatic static headlight range control, From model year 2000	333-339
1. Headlights with gas discharge lamps and automatic static headlight range control, From model year 2000	333
2. Ignition/starter switch, X contact relief relay	334
3. Lighting switch, headlight dipper switch	335
4. Headlight, right	336
5. Headlight, left	337
6. Control unit for headlight range control, vehicle level senders rear left and front left	338
7. Headlight range control motors left and right	339
043 - Provision for radio	340-343
1. Provision for radio	340-341
2. Provision for radio, voltage supply, aerial	342
3. Provision for radio, loudspeakers	343
044 - Radio navigation system (RNS)	344-357
1. Radio navigation system (RNS)	344-345
2. Navigation operating electronics control unit	346
3. Navigation operating electronics control unit	347
4. Operating electronics control unit, navigation, telephone/navigation systems loudspeaker, CD changer	348
5. Navigation operating electronics control unit	349
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	350
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	351
8. Navigation operating electronics control unit, multi-function steering wheel interface, multi-function steering wheel control unit	352
9. Navigation operating electronics control unit, amplifier with bass loudspeaker luggage compartment, right, rear loudspeakers	353
10. Navigation operating electronics control unit, navigation/TV tuner, radio/telephone/navigation aerial	354
11. Navigation operating electronics control unit, navigation/TV tuner	355
12. TV aerials saloon models	356
13. TV aerials Avant	357
045 - Navigation system "NS LOW"	358-363
1. Navigation system "NS LOW"	358-359
2. Navigation system with CD drive control unit	360
3. Navigation system with CD drive control unit, navigation aerial	361
4. Navigation system with CD drive control unit, radio, telephone/navigation systems loudspeaker	362
5. Combi-processor in dash panel insert, function selection switch II in centre console	363
046 - CAN bus wires	364-368
1. CAN bus wires	364-365
2. CAN bus wires, high bus connection	366
3. CAN bus wires, high bus connection, low bus connection	367
4. CAN bus wires, low bus connection	368
047 - Cruise control system for petrol engines with manual electric throttle operation	369-372
1. Cruise control system for petrol engines with manual electric throttle operation	369-370
2. Cruise control system	371
3. Cruise control system	372
048 - Taxi	373-380
1. Taxi	373-374
2. Taxi, alarm system control unit	375
3. Taxi, alarm system control unit	376
4. Taxi, taximeter	377
5. Taxi, two-way radio	378
6. Taxi, data radio unit, two-way radio loudspeaker	379
7. Taxi, data radio unit	380
049 - Police vehicles	381-393
1. Police vehicles	381-383
2. Fuses, flasher relay for main beam headlight alarm system	384
3. Fuses, two-way radio switch	385
4. Flashing blue light signal system	386
5. Flashing blue light signal system. transmitter and receiver unit	387

6. Horn, connection for external equipment	388
7. Tachograph, 12 V socket, external socket (220 V)	389
8. Tachograph, weapons storage box	390
9. Two-way radio	391
10. Volume control	392
11. Alarm system switch, siren relay	393
050 - Radiator fan control - 300W + 200 W (models with and without air conditioner), From model year 2000	394-396
1. Radiator fan control - 300W + 200 W (models with and without air conditioner), From model year 2000	394
2. Radiator fan control unit, radiator fan thermo-switches, air conditioner pressure switch	395
3. Radiator fan control unit, radiator fan, continued circulation of coolant pump	396
051 - Electrically adjustable mirrors, mirrors with and without retraction function	397-400
1. Electrically adjustable mirrors, mirrors with and without retraction function	397-398
2. Mirror adjustment, driver's side	399
3. Mirror adjustment, front passenger's side	400
052 - Electric seat adjustment sport seats	401-405
1. Electric seat adjustment sport seats	401-402
2. Electric seat adjustment sport seats, driver's seat	403
3. Electric seat adjustment sport seats, front passenger's seat	404
4. Lumbar support adjustment for driver's and front passenger's seat	405
053 - Electric steering column adjustment	406-409
1. Electric steering column adjustment	406-407
2. Steering column/belt height adjustment control unit, steering column adjustment switch, steering column adjustment motor	408
3. Steering column/belt height adjustment control unit	409
054 - 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2000	410-425
1. 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2000	410
2. 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2000	411
3. Battery, starter, alternator, ignition/starter switch	412
4. Motronic control unit, starter inhibitor relay	413
5. Motronic control unit, output stage 1, ignition coils	414
6. Motronic control unit, output stage 2, ignition coils	415
7. Motronic control unit, knock sensor 1, coolant temperature senders	416
8. Motronic control unit, Hall senders	417
9. Motronic control unit, fuel pump relay, lambda probes	418
10. Motronic control unit, air mass meter	419
11. Motronic control unit, activated charcoal filter system solenoid valve	420
12. Motronic control unit, brake light switch, throttle valve control unit, cruise control system brake pedal switch / diesel direct injection system	421
13. Motronic control unit, cruise control system switch	422
14. Radiator fan control unit, radiator fan, radiator fan thermo-switches	423
15. Combi-processor, fuel pump	424
16. Combi-processor, oil level thermo sender, oil pressure warning lamp	425
055 - Automatic gearbox: multitronic ® 01J	426-431
1. Automatic gearbox: multitronic ® 01J	426-427
2. Automatic gearbox control unit, fuses	428
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	429
4. Tiptronic switch, selector lever lock solenoid	430
5. Operating unit in steering wheel, Brake light switch, ABS with EDL control unit	431
056 - Electric seat adjustment / seat heating for Recaro sport seats	432-442
1. Electric seat adjustment / seat heating for Recaro sport seats	432-433
2. Driver's seat longitudinal adjustment	434
3. Longitudinal adjustment	435
4. Backrest adjustment and lumbar support adjustment for driver's seat, side airbag	436
5. Front passenger's seat longitudinal adjustment	437
6. switch, front passenger's seat	438
7. Backrest adjustment and lumbar support adjustment for front passenger's seat, side airbag	439
8. Adjuster for heated driver's seat and front passenger's seat	440
9. Seat heating for driver's seat	441
10. Seat heating for front passenger's seat	442
057 - Special vehicles, From model year 2000	443-454
1. Special vehicles, From model year 2000	443
2. Special vehicles, From model year 2000	444
3. Electric windows - front left and front right	445

4. Electric windows - front left and front right	446
5. Electric windows - front left and front right	447
6. Personal danger alarm system / intercom system	448
7. Personal danger alarm system / intercom system	449
8. Personal danger alarm system / siren alarm	450
9. Personal danger alarm system / siren alarm	451
10. Personal danger alarm system / intermittent main beam	452
11. Automatic door locking and manual release	453
12. Tailgate / boot lid release	454
058 - Radio navigation system (RNS-D)*	455-469
1. Radio navigation system (RNS-D)*	455-456
2. Navigation operating electronics control unit	457
3. Navigation operating electronics control unit	458
4. Operating electronics control unit, navigation, telephone/navigation systems loudspeaker, CD changer	459
5. Navigation operating electronics control unit	460
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	461
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	462
8. Navigation operating electronics control unit, bass loudspeakers, middle-high tone loudspeakers	463
9. Navigation operating electronics control unit, amplifier with bass loudspeaker luggage compartment, right, rear loudspeakers	464
10. Navigation operating electronics control unit, navigation/TV tuner, radio/telephone/navigation aerial	465
11. Navigation operating electronics control unit, navigation/TV tuner	466
12. Navigation operating electronics control unit, navigation/TV tuner, aerial selection control unit, navigation interface	467
13. Aerials for saloon models	468
14. Aerials for Avant models	469
059 - Basic equipment, From model year 2001	470-495
1. Basic equipment, From model year 2001	470
2. Earth connections	471
3. Ignition/starter switch, X contact relief relay	472
4. Battery, starter, alternator, starter inhibitor relay	473
5. Lighting switch, left steering column switch, front and rear fog light switch	474
6. Switches and instruments-lighting control, headlight range control	475
7. Hazard warning light switch	476
8. Windscreen washer/wiper system	477
9. Fuse box, heated washer jets, front fog lights	478
10. Fuse box, number plate light, glove box light	479
11. Fuse box, heated exterior mirror, brake light switch	480
12. Fuse box, horn relay	481
13. Fuse box, front and rear cigarette lighters, horn	482
14. Fuse box, right headlight	483
15. Fuse box, left headlight	484
16. Left tail light, reversing light, high level brake light bulb	485
17. Right tail light, fuel pump, fuel gauge senders, heated rear window	486
18. Dash panel insert, warning lamp	487
19. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, speedometer	488
20. Dash panel insert, analogue clock, brake pad/lining wear warning, radio controlled clock	489
21. Dash panel insert, oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact	490
22. Dash panel insert, immobilizer reading coil, oil level/oil temperature sender, function selection switch II in centre console	491
23. Dash panel insert, diagnosis connection	492
24. Basic wiring for radio, connection for switch illumination, shelf illumination	493
25. Heater, fresh air blower	494
26. Heater, control motors	495
060 - 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2001	496-511
1. 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2001	496
2. 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine code AJK, From model year 2001	497
3. Battery, starter, alternator, ignition/starter switch	498
4. Motronic control unit, starter inhibitor relay	499
5. Motronic control unit. output stage 1. ignition coils	500

6. Motronic control unit, output stage 2, ignition coils	501
7. Motronic control unit, knock sensor 1, coolant temperature senders	502
8. Motronic control unit, Hall senders	503
9. Motronic control unit, fuel pump relay, lambda probes	504
10. Motronic control unit, air mass meter	505
11. Motronic control unit, activated charcoal filter system solenoid valve	506
12. Motronic control unit, brake light switch, throttle valve control unit, cruise control system brake pedal switch	507
13. Motronic control unit, cruise control system switch	508
14. Radiator fan control unit, radiator fan, radiator fan thermo-switches	509
15. Combi-processor, fuel pump	510
16. Combi-processor, oil level thermo sender, oil pressure warning lamp	511
061 - 2.7 litre fuel injection engine (184 kW - bi-turbo engine), 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine codes ARE, From model year 2001	512-527
1. 2.7 litre fuel injection engine (184 kW - bi-turbo engine), 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine codes ARE, From model year 2001	512
2. 2.7 litre fuel injection engine (184 kW - bi-turbo engine), 2.7 litre fuel injection engine (169 kW - bi-turbo engine), engine codes ARE, From model year 2001	513
3. Battery, starter, alternator, ignition/starter switch	514
4. Motronic control unit, starter inhibitor relay	515
5. Motronic control unit, output stage 1, ignition coils	516
6. Motronic control unit, output stage 2, ignition coils	517
7. Motronic control unit, knock sensor 1, coolant temperature senders	518
8. Motronic control unit, Hall senders	519
9. Motronic control unit, fuel pump relay, lambda probes, brake servo relay, vacuum pump for brakes	520
10. Motronic control unit, air mass meter	521
11. Motronic control unit, activated charcoal filter system solenoid valve, fuse for hydraulic pump relay	522
12. Motronic control unit, brake light switch, throttle valve control unit, cruise control system brake pedal switch, clutch pedal switch	523
13. Motronic control unit, cruise control system switch	524
14. Radiator fan control unit, radiator fan, radiator fan thermo-switches	525
15. Combi-processor, fuel pump	526
16. Combi-processor, oil level thermo sender, oil pressure warning lamp	527
062 - 1.8 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ARH	528-543
1. 1.8 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ARH	528-531
2. Battery, starter, alternator	532
3. Motronic control unit, Motronic current supply relay	533
4. Motronic control unit, injectors	534
5. Motronic control unit, knock sensors, engine speed sender	535
6. Motronic control unit, throttle valve module, accelerator pedal position senders	536
7. Motronic control unit, lambda probes, air mass meter, brake servo relay	537
8. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor	538
9. Motronic control unit, fuel pump relay	539
10. Motronic control unit, ignition coils, spark plugs	540
11. Starter inhibitor and reversing light relay, reversing lights	541
12. Engine cooling, dash panel insert, fuel pump	542
13. Dash panel insert	543
063 - Automatic gearbox (01V), (01L)	544-551
1. Automatic gearbox (01V), (01L)	544-545
2. Automatic gearbox control unit, solenoid valves, kick-down switch	546
3. Automatic gearbox control unit, multi-function switch	547
4. Automatic gearbox control unit, Tiptronic switch	548
5. Automatic gearbox control unit, Tiptronic switch	549
6. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, selector lever position indicator	550
7. Reversing light, starter inhibitor relay	551
064 - Airbags	552-558
1. Airbags	552-553
2. Airbags and belt tensioners for driver and front passenger	554
3. Side airbags in front seats, rear belt tensioners	555
4. Crash sensors, rear side airbags, curtain airbags	556
5. Side airbag crash sensor on driver's side, side airbag crash sensor on front passenger's side, belt switch on driver's side, belt switch on front passenger's side	557
6. Rear belt tensioner igniter - centre. rear side airbags	558

065 - Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	559-579
1. Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	559-560
2. Central locking control unit, anti-theft alarm system contact switch (bonnet), anti-theft alarm system horn	561
3. Central locking control unit, interior locking switch on driver's side	562
4. Central locking control unit, door contact switch on driver's side	563
5. Central locking control unit, door contact switch on front passenger's side, interior locking switch on front passenger's side	564
6. Central locking control unit, left door warning lamp, right door warning lamp	565
7. Central locking control unit, rear left door contact switch, rear right door contact switch	566
8. Central locking control unit, electric window motors	567
9. Central locking control unit, lock cylinder switch for tailgate/boot lid	568
10. Central locking control unit, release button for tailgate/boot lid lock cylinder, tailgate/boot lid release motor, tank filler flap locking motor	569
11. Central locking control unit, luggage compartment light, aerial for central locking	570
12. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	571
13. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	572
14. Front left entry light, front right entry light, door opening illumination on driver's side, door opening illumination on front passenger's side	573
15. Door warning lamps, door handle lighting, ashtray illumination	574
16. Footwell lights	575
17. Front interior light, rear reading lamps	576
18. Front reading lamps, illumination for vanity mirrors	577
19. Connection 58s	578
20. Luggage compartment lights	579
066 - Electric windows, 4-door, From model year 2001	580-586
1. Electric windows, 4-door, From model year 2001	580
2. Fuses for electric windows, electric windows - front left	581
3. Electric windows - front right	582
4. Electric windows - rear left	583
5. Electric windows - rear right	584
6. Rear electric window isolation switch	585
7. Connection (open), connection (closed)	586
067 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	587-593
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (ASR/TCS)	587-588
2. ABS with EDL control unit, speed sensors	589
3. ABS with EDL control unit, solenoid valves	590
4. ABS with EDL control unit, CAN bus	591
5. ABS with EDL control unit, traction control system switch	592
6. Brake light switch	593
068 - Avant models, rear, From model year 2001	594-604
1. Avant models, rear, From model year 2001	594
2. Luggage compartment light, 12 V socket	595
3. Tailgate lock cylinder switch, release button for tailgate lock cylinder	596
4. Number plate light, glass breakage sensors - rear side windows	597
5. Rear window washer/wiper system	598
6. Bulb monitoring device front, left tail light	599
7. Bulb monitoring device front, right tail light	600
8. Reversing light switch	601
9. Aerials for radio, telephone/mobile phone, navigation system and radio-operated remote control for auxiliary heater	602
10. Aerials radio navigation system (RNS), TV	603
11. Aerials for radio navigation system (RNS-D)	604
069 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stabilisation program (ESP)	605-611
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (ASR/TCS) and electronic stabilisation program (ESP)	605-606
2. ABS with EDL control unit, speed sensors	607
3. ABS with EDL control unit, brake light switch, handbrake warning switch	608
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	609
5. ABS with EDL control unit. steering angle sender. lateral acceleration sender. yaw rate sender	610

6. ABS with EDL control unit, brake pressure sender	611
070 - Heated front seats and rear seat	612-616
1. Heated front seats and rear seat	612-613
2. Heated seat, driver's seat	614
3. Heated seat, front passenger's seat	615
4. Heated seat, rear seats	616
071 - Self-levelling suspension for Audi allroad models and automatic headlight range control, From model year 2001	617-624
1. Self-levelling suspension for Audi allroad models and automatic headlight range control, From model year 2001	617
2. Self-levelling suspension control unit, self-levelling suspension compressor relay	618
3. Adaptive suspension control unit, valve block, rear right vehicle level sender, front right vehicle level sender	619
4. Adaptive suspension control unit, adaptive suspension warning lamp	620
5. Adaptive suspension control unit, operating unit to control suspension height	621
6. Adaptive suspension control unit, operating unit to control suspension height	622
7. Control unit for headlight range control, headlight range control motors - left and right	623
8. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	624
072 - Electric seat and mirror adjustment - with memory, mirror with and without retraction function, From model year 2001	625-637
1. Electric seat and mirror adjustment - with memory, mirror with and without retraction function, From model year 2001	625
2. Memory operating unit, light bulbs for memory operating unit, driver's seat	626
3. Seat adjustment with memory control unit, front height adjustment motor, driver's seat, rake adjustment sender, driver's seat	627
4. Seat adjustment with memory control unit, driver's seat height adjustment switches, longitudinal adjustment and height adjustment senders, driver's seat longitudinal adjustment motor	628
5. Ignition/starter switch, lumbar support adjustment switch, driver's seat, lumbar support longitudinal- and height adjustment motor, driver's seat	629
6. Memory operating unit, front passenger's seat, light bulbs for memory operating unit, front passenger's seat	630
7. Seat adjustment with memory control unit, front passenger's seat front height adjustment motor, front passenger's seat front height adjustment sender	631
8. Seat adjustment with memory control unit, front passenger's seat height adjustment switches, longitudinal adjustment and height adjustment senders, front passenger's seat longitudinal adjustment motor	632
9. Longitudinal- and height adjustment switch, front passenger's seat, longitudinal adjustment motor, front passenger's seat	633
10. Lumbar support adjustment switch, front passenger's seat, lumbar support longitudinal adjustment motor, front passenger's seat	634
11. Mirror adjustment switches with and without retraction function	635
12. Mirror adjustment on driver's side, mirror memory control unit	636
13. Mirror adjustment, front passenger's side, mirror memory control unit	637
073 - Electric seat adjustment front seats, without memory function	638-643
1. Electric seat adjustment front seats, without memory function	638-639
2. Electric seat adjustment without memory function, driver's seat	640
3. Lumbar support adjustment for driver's and front passenger's seat	641
4. Electric seat adjustment without memory function, front passenger's seat	642
5. Electric seat adjustment without memory function, earth connections, side airbag	643
074 - Provision for radio	644-647
1. Provision for radio	644-645
2. Provision for radio, voltage supply, aerial	646
3. Provision for radio, loudspeakers	647
075 - Navigation system "NS LOW"	648-653
1. Navigation system "NS LOW"	648-649
2. Navigation system with CD drive control unit	650
3. Navigation system with CD drive control unit, navigation aerial	651
4. Navigation system with CD drive control unit, radio, telephone/navigation systems loudspeaker	652
5. Combi-processor in dash panel insert, function selection switch II in centre console	653
076 - Taxi	654-661
1. Taxi	654-655
2. Taxi, alarm system control unit	656
3. Taxi, alarm system control unit	657
4. Taxi, taximeter	658
5. Taxi. two-wav radio	659

6. Taxi, data radio unit, two-way radio loudspeaker	660
7. Taxi, data radio unit	661
077 - Police vehicles	662-674
1. Police vehicles	662-664
2. Fuses, flasher relay for main beam headlight alarm system	665
3. Fuses, two-way radio switch	666
4. Flashing blue light signal system	667
5. Flashing blue light signal system, transmitter and receiver unit	668
6. Horn, connection for external equipment	669
7. Tachograph, 12 V socket, external socket (220 V)	670
8. Tachograph, weapons storage box	671
9. Two-way radio	672
10. Volume control	673
11. Alarm system switch, siren relay	674
078 - Radiator fan control - 300 W + 200 W (with air conditioner) for 6- and 8-cylinder engines	675-679
From model year 2001	
1. Radiator fan control - 300 W + 200 W (with air conditioner) for 6- and 8-cylinder engines From model year 2001	675
2. Radiator fan control unit, radiator fan thermo-switches, air conditioner pressure switch (2.4 litre/2.8 litre engines)	676
3. Radiator fan control unit, radiator fan thermo-switches, air conditioner pressure switch (2.7 litre bi-turbo engines)	677
4. Radiator fan control unit, radiator fan thermo-switches, air conditioner pressure switch (3.7 litre/4.2 litre engines)	678
5. Radiator fan control unit, radiator fan, continued coolant circulation pump	679
079 - Electrically adjustable mirrors, mirrors with and without retraction function	680-683
1. Electrically adjustable mirrors, mirrors with and without retraction function	680-681
2. Mirror adjustment, driver's side	682
3. Mirror adjustment, front passenger's side	683
080 - Electric seat adjustment sport seats	684-688
1. Electric seat adjustment sport seats	684-685
2. Electric seat adjustment sport seats, driver's seat	686
3. Electric seat adjustment sport seats, front passenger's seat	687
4. Lumbar support adjustment for driver's and front passenger's seat	688
081 - Electric steering column adjustment	689-692
1. Electric steering column adjustment	689-690
2. Steering column/belt height adjustment control unit, steering column adjustment switch, steering column adjustment motor	691
3. Steering column/belt height adjustment control unit	692
082 - Automatic gearbox - multitronic ® 01J	693-698
1. Automatic gearbox - multitronic ® 01J	693-694
2. Automatic gearbox control unit, fuses	695
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	696
4. Tiptronic switch, selector lever lock solenoid	697
5. Operating unit in steering wheel, brake light switch, ABS with EDL control unit	698
083 - 4.2 litre fuel injection engine (220 kW, 250 kW - Motronic - 8-cylinder), engine codes ASG, ANK	699-716
1. 4.2 litre fuel injection engine (220 kW, 250 kW - Motronic - 8-cylinder), engine codes ASG, ANK	699-701
2. Battery, starter, alternator	702
3. Motronic control unit, starter inhibitor relay	703
4. Motronic control unit, injectors and ignition coils for cylinders 1-4	704
5. Motronic control unit, injectors and ignition coils for cylinders 5-8	705
6. Motronic control unit, throttle valve control unit, accelerator pedal position senders	706
7. Motronic control unit, knock sensor 1, engine speed sender, coolant temperature senders, Motronic current supply relay	707
8. Motronic control unit, Hall senders, brake light switch	708
9. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve	709
1 (pulsed), cruise control system switch	
10. Motronic control unit, lambda probes, air mass meter	710
11. Motronic control unit, fuel pump relay, lambda probes downstream of catalytic converter	711
12. Motronic control unit, CAN bus, oil level thermo sender (service interval)	712
13. Engine cooling with radiator fan relay	713
14. Engine cooling with radiator fan control unit	714
15. Dash panel insert, fuel pump, fuel gauge	715
16. Dash panel insert	716
084 - Driver information system	717-723

1. Driver information system	717-718
2. Auto-check system, function selection switch	719
3. Dash panel insert, ambient temperature indicator, bulb monitoring device, function selection switch II in centre console	720
4. Bulb monitoring device, side lights, dipped beam headlights	721
5. Bulb monitoring device, tail lights, brake lights	722
6. Ambient temperature sensor	723
085 - Auxiliary heater with or without radio-operated remote control and air conditioner, From model year 2001	724-730
1. Auxiliary heater with or without radio-operated remote control and air conditioner, From model year 2001	724
2. Auxiliary heater with or without radio-operated remote control and air conditioner, From model year 2001	725
3. Battery, heater control unit	726
4. Control and display unit for air conditioner, solar cell isolation relay, solar roof	727
5. Control and display unit for air conditioner, solar cells isolation relay 2	728
6. Dash panel insert, function selection switch II in centre console	729
7. Auxiliary heating radio wave receiver, radio/telephone/auxiliary heater aerial	730
086 - Air conditioner with automatic control, From model year 2001	731-742
1. Air conditioner with automatic control, From model year 2001	731
2. Air conditioner with automatic control, From model year 2001	732
3. Control and display unit for air conditioner	733
4. Vent temperature sender, fresh air blower, solar roof	734
5. Air conditioning system magnetic coupling, magnetic coupling relay, ambient temperature sensor	735
6. Air flow flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor	736
7. Control motors, potentiometers	737
8. Control and display unit for air conditioner, fuses 3 and 4	738
9. Illumination for dash panel vents	739
10. Engine cooling with radiator fan control unit for petrol engines	740
11. Engine cooling with radiator fan relay for petrol engines	741
12. Engine cooling for diesel engines	742
087 - Ultrasonic parking aid, front and rear	743-749
1. Ultrasonic parking aid, front and rear	743-744
2. Parking aid control unit, parking aid rear warning buzzer	745
3. Parking aid control unit, ultra-sonic sensors in rear bumper	746
4. Parking aid control unit, ultra-sonic sensors in front bumper	747
5. Parking aid control unit, reversing light switch	748
6. Parking aid control unit, parking aid button	749
088 - Trailer coupling	750-755
1. Trailer coupling	750-751
2. Turn signal switch, hazard warning light switch	752
3. Trailer socket, tail light - left and right	753
4. Trailer socket, rear left fog light bulb, high level brake light bulb	754
5. Brake light switch, reversing light switch	755
089 - Trailer coupling with driver information system, From model year 2001	756-760
1. Trailer coupling with driver information system, From model year 2001	756
2. Hazard warning light switch, turn signal switch	757
3. Trailer socket, bulb monitoring device	758
4. Trailer socket, rear left fog light bulb, high level brake light bulb	759
5. Brake light switch, reversing light switch	760
090 - Multi-function steering wheel, From model year 2001	761-766
1. Multi-function steering wheel, From model year 2001	761
2. Operating unit in steering wheel	762
3. Multi-function steering wheel control unit, radio	763
4. Multi-function steering wheel control unit, radio, CAN bus connection	764
5. Multi-function steering wheel control unit, telephone transmitter and receiver unit	765
6. Multi-function steering wheel control unit, dual tone horn relay, high tone horn, low tone horn	766
091 - 1.8 litre fuel injection turbo engine (132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2001	767-780
1. 1.8 litre fuel injection turbo engine (132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2001	767
2. 1.8 litre fuel injection turbo engine (132 kW - Motronic - 4-cylinder), engine code AJL, From model year 2001	768
3. Battery, starter, alternator	769
4. Motronic control unit. Motronic current supply relay	770

5. Motronic control unit, injectors	771
6. Motronic control unit, knock sensors, engine speed sender	772
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	773
8. Motronic control unit, lambda probes, air mass meter	774
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor, brake servo relay	775
10. Motronic control unit, fuel pump relay	776
11. Ignition coils, output stage, spark plugs	777
12. Ignition coil 4, reversing light switch	778
13. Engine cooling, dash panel insert, fuel pump	779
14. Dash panel insert	780
092 - 1.8 litre fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AWT, From model year 2001	781-794
1. 1.8 litre fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AWT, From model year 2001	781
2. 1.8 litre fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AWT, From model year 2001	782
3. Battery, starter, alternator	783
4. Motronic control unit, Motronic current supply relay	784
5. Motronic control unit, injectors	785
6. Motronic control unit, knock sensors, engine speed sender	786
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	787
8. Motronic control unit, lambda probes, air mass meter	788
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor, brake servo relay	789
10. Motronic control unit, fuel pump relay	790
11. Ignition coils with output stage, spark plugs	791
12. Ignition coil 4 with output stage, reversing light switch	792
13. Engine cooling, dash panel insert, fuel pump	793
14. Dash panel insert	794
093 - Manual gearbox 01E with low range gearing, From model year 2001	795-799
1. Manual gearbox 01E with low range gearing, From model year 2001	795
2. Low range gearing control unit	796
3. Low range gearing control unit, hydraulic actuator travel sender control unit, hydraulic actuator travel sender	797
4. Low range gearing control unit, low range gearing switch, clutch pedal switch	798
5. Low range gearing control unit, low range gearing hydraulic pump	799
094 - Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2000	800-806
1. Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2000	800
2. Ignition/starter switch, X contact relief relay	801
3. Lighting switch, headlight dipper switch	802
4. Headlight, right	803
5. Headlight, left	804
6. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	805
7. Headlight range control motor-left, headlight range control motor-right	806
095 - Self-levelling suspension and automatic headlight range control, From model year 2001	807-813
1. Self-levelling suspension and automatic headlight range control, From model year 2001	807
2. Self-levelling suspension control unit	808
3. Self-levelling suspension control unit, relay for compressor self-levelling suspension, self-levelling sender	809
4. Automatic static headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	810
5. Automatic static headlight range control: Headlight range control motor - left, headlight range control motor - right	811
6. Automatic dynamic headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	812
7. Automatic dynamic headlight range control: Headlight range control motor - left, headlight range control motor - right	813
096 - Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2001	814-820
1. Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2001	814
2. Ignition/starter switch. X contact relief relay	815

3. Lighting switch, headlight dipper switch	816
4. Headlight, right	817
5. Headlight, left	818
6. Control unit for headlight range control, vehicle level sender-rear left, vehicle level sender-front left	819
7. Headlight range control motor-left, headlight range control motor-right	820
097 - Ultra-sonic parking aid, rear	821-824
1. Ultra-sonic parking aid, rear	821-822
2. Ultra-sonic parking aid	823
3. Ultra-sonic parking aid	824
098 - Automatic anti-dazzle interior and exterior mirrors	825-828
1. Automatic anti-dazzle interior and exterior mirrors	825-826
2. Automatic anti-dazzle interior and exterior mirrors	827
3. Automatic anti-dazzle interior and exterior mirrors	828
099 - Electric sliding sunroof with	829-831
1. Electric sliding sunroof with	829-830
2. Electric sliding sunroof with	831
100 - 2.5 litre turbo-diesel engine (110 kW/132 kW - 6-cylinder), engine codes AKN*, From model year 2001	832-845
1. 2.5 litre turbo-diesel engine (110 kW/132 kW - 6-cylinder), engine codes AKN*, From model year 2001	832
2. 2.5 litre turbo-diesel engine (110 kW/132 kW - 6-cylinder), engine codes AKN*, From model year 2001	833
3. Battery, starter, alternator, starter inhibitor relay	834
4. Glow plugs, relay for glow plugs	835
5. Diesel direct injection system control unit, diesel direct injection system relay	836
6. Diesel direct injection system control unit, injection pump control unit, air mass meter	837
7. Diesel direct injection system control unit, cruise control system switch, brake light switch	838
8. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender	839
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel cooling pump relay	840
10. Diesel direct injection system control unit, ambient temperature sensor	841
11. Additional heater	842
12. Engine cooling	843
13. Dash panel insert, fuel gauge senders	844
14. Dash panel insert, speedometer sender, oil pressure switch	845
101 - 2.8 litre fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 litre fuel injection engine (121 kW - Motronic - 6-cylinder), Engine codes AMX, From model year 2001	846-861
1. 2.8 litre fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 litre fuel injection engine (121 kW - Motronic - 6-cylinder), Engine codes AMX, From model year 2001	846
2. 2.8 litre fuel injection engine (142 kW - Motronic - 6-cylinder), 2.4 litre fuel injection engine (121 kW - Motronic - 6-cylinder), Engine codes AMX, From model year 2001	847
3. Battery, starter, alternator, starter inhibitor relay	848
4. Motronic control unit, injectors, ignition coils 1-3, spark plugs	849
5. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant temperature senders, intake air temperature sender	850
6. Motronic control unit, automatic gearbox control unit, Hall senders	851
7. Motronic control unit, fuel pump relay, lambda probes	852
8. Air mass meter, lambda probes downstream of catalytic converter	853
9. Motronic control unit, air mass meter, inlet camshaft timing adjustment valves, intake manifold change-over valve	854
10. Motronic control unit, cruise control system	855
11. Motronic control unit, accelerator pedal position senders	856
12. Motronic control unit, secondary air pump, accelerator pedal position sender, brake servo relay, vacuum pump for brakes	857
13. Brake light switch, cruise control system brake pedal switch	858
14. Engine cooling	859
15. Dash panel insert, fuel pump	860
16. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	861
102 - Electrical tyre pressure monitoring for allroad	862-866
1. Electrical tyre pressure monitoring for allroad	862-863
2. Tyre pressure monitor control unit	864
3. Tyre pressure sensors, tyre pressure monitoring aerials	865
4. Function selection switch II. in centre console	866

103 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	867-872
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	867-868
2. X contact relief relay, ignition/starter switch, number plate light	869
3. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	870
4. Left headlight, front fog lights	871
5. Headlight, right	872
104 - 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AVG, From model year 2001	873-885
1. 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AVG, From model year 2001	873
2. 1.9 litre turbo-diesel engine (81 kW, 4-cylinder), engine codes AVG, From model year 2001	874
3. Battery, starter, alternator, starter inhibitor and reversing light relay	875
4. Glow plug relay, glow plugs, reversing light	876
5. Diesel direct injection system control unit, diesel direct injection system relay, air mass meter	877
6. Diesel direct injection system control unit, accelerator pedal position sender, injection pump	878
7. Diesel direct injection system control unit, coolant temperature senders, engine speed sender	879
8. Diesel direct injection system control unit, cruise control system switch, brake light switch	880
9. Diesel direct injection system control unit, accelerator pedal position sender	881
10. Additional heater	882
11. Engine cooling	883
12. Dash panel insert, fuel gauge senders	884
13. Dash panel insert, speedometer sender, oil pressure switch	885
105 - 1.9 l turbo-diesel engine (85 kW - 4-cylinder), engine codes AJM, From model year 2001	886-899
1. 1.9 l turbo-diesel engine (85 kW - 4-cylinder), engine codes AJM, From model year 2001	886
2. 1.9 l turbo-diesel engine (85 kW - 4-cylinder), engine codes AJM, From model year 2001	887
3. Battery, starter, alternator	888
4. Glow plugs, relay for glow plugs	889
5. Diesel direct injection system control unit, diesel direct injection system relay, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	890
6. Diesel direct injection system control unit, unit injector solenoid valves-cylinders No. 1-4, air mass meter	891
7. Diesel direct injection system control unit, cruise control system switch, brake light switch	892
8. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender	893
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel cooling pump relay, fuel temperature sender	894
10. Diesel direct injection system control unit, ambient temperature sensor	895
11. Additional heater	896
12. Engine cooling	897
13. Dash panel insert, fuel gauge senders	898
14. Dash panel insert, speedometer sender, oil pressure switch	899
106 - CAN bus wires	900-907
1. CAN bus wires	900-901
2. CAN bus wires, high bus connection	902
3. CAN bus wires, high bus connection, low bus connection	903
4. CAN bus wires, low bus connection	904
5. CAN bus wires (display)	905
6. CAN bus wires (display)	906
7. CAN bus wires (convenience features)	907
107 - Telephone	908-912
1. Telephone	908-909
2. Telephone transmitter and receiver unit, telephone microphone, telephone handset	910
3. Telephone handset, telephone transmitter and receiver unit, radio/telephone/auxiliary heater aerial	911
4. Telephone transmitter and receiver unit, telephone/navigation systems loudspeaker	912
108 - Radio stereo system: Chorus, Concert	913-919
1. Radio stereo system: Chorus, Concert	913-914
2. Radio, rear window aerial, aerial motor	915
3. Radio, CD changer	916
4. Radio, amplifier with bass loudspeaker	917
5. Radio, front and rear loudspeakers	918
6. Rear loudspeakers	919
109 - Special vehicles, From model year 2001	920-932
1. Special vehicles, From model year 2001	920
2. Special vehicles, From model year 2001	921
3. Electric windows - front left and front right	922
4. Electric windows - front left and front right	923
5. Electric windows - front left and front right	924

6. Personal danger alarm system / intercom system	925
7. Personal danger alarm system / intercom system	926
8. Personal danger alarm system / siren alarm	927
9. Personal danger alarm system / siren alarm	928
10. Personal danger alarm system / intermittent main beam	929
11. Automatic door locking and manual release	930
12. Tailgate / boot lid release	931
13. Tailgate / boot lid emergency release	932
110 - Radio navigation system (RNS-D)	933-946
1. Radio navigation system (RNS-D)	933
2. Navigation operating electronics control unit	934
3. Navigation operating electronics control unit	935
4. Navigation operating electronics control unit, telephone/navigation systems loudspeaker, CD changer	936
5. Navigation operating electronics control unit	937
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	938
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	939
8. Navigation operating electronics control unit, bass loudspeakers, mid-range/treble loudspeakers	940
9. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right), rear loudspeakers, radio/telephone/navigation aerial	941
10. Navigation operating electronics control unit, navigation/TV tuner, magnetic field sender (compass)	942
11. Navigation operating electronics control unit, navigation/TV tuner	943
12. Navigation operating electronics control unit, navigation/TV tuner, aerial selection control unit, navigation interface	944
13. Aerials for saloon models	945
14. Aerials for Avant models	946
111 - Steering wheel with Tiptronic	947-951
1. Steering wheel with Tiptronic	947-948
2. Operating unit in steering wheel, horn plate	949
3. Operating unit in steering wheel, airbag igniter - driver's side	950
4. Dual tone horn relay, high tone horn, low tone horn	951
112 - Electric seat adjustment / seat heating for Recaro sport seats	952-962
1. Electric seat adjustment / seat heating for Recaro sport seats	952-953
2. Driver's seat longitudinal adjustment	954
3. Longitudinal adjustment	955
4. Backrest adjustment and lumbar support adjustment for driver's seat, side airbag	956
5. Front passenger's seat longitudinal adjustment	957
6. Switch, front passenger's seat	958
7. Backrest adjustment and lumbar support adjustment for front passenger's seat, side airbag	959
8. Adjuster for heated driver's seat and front passenger's seat	960
9. Seat heating for driver's seat	961
10. Seat heating for front passenger's seat	962
113 - Mobile phone	963-967
1. Mobile phone	963-964
2. Operating electronics control unit (telephone), microphone for telephone	965
3. Operating electronics control unit (telephone), telephone/navigation systems loudspeaker	966
4. Mobile phone	967
114 - Provision for mobile phone	968-971
1. Provision for mobile phone	968-969
2. Provision for mobile phone, operating electronics control unit (telephone), microphone for telephone	970
3. Provision for mobile phone	971
115 - Radio Bose sound system: Concert, Symphony with or without CD changer	972-980
1. Radio Bose sound system: Concert, Symphony with or without CD changer	972-973
2. Radio, diagnosis connection	974
3. Radio, CD changer	975
4. Radio, aerials	976
5. Radio, amplifier with bass loudspeaker (luggage compartment, right)	977
6. Amplifier with bass loudspeaker (luggage compartment, right), front and rear loudspeakers	978
7. Aerials for radio Symphony (saloon models)	979
8. Aerials for radio Symphony (Avant models)	980
116 - Navigation system "NS LOW"	981-986
1. Navigation system "NS LOW"	981-982

2. Navigation system with CD drive control unit	983
3. Navigation system with CD drive control unit, navigation aerial	984
4. Navigation system with CD drive control unit, radio, telephone/navigation systems loudspeaker	985
5. Combi-processor in dash panel insert, function selection switch rear	986
201 - -Fitting Locations: Parking aid	987-993
1. -Fitting Locations: Parking aid	987
2. -Fitting Locations: Parking aid	988
3. Parking aid senders, front, Parking aid switch, Parking aid switch(allroad models)	989
4. Front parking aid warning buzzer, Rear parking aid warning buzzer (saloon models), Rear parking aid warning buzzer(Avant models)	990
5. Rear parking aid senders	991
6. -Fitting Locations: Parking aid	992
7. -Fitting Locations: Parking aid	993
202 - -Fitting Locations: Central locking	994-999
1. -Fitting Locations: Central locking	994
2. -Fitting Locations: Central locking	995
3. Anti-theft alarm/vermin repellent system contact switch, Anti-theft alarm ultra-sonic sensor, left, Anti-theft alarm ultra-sonic sensor, right, Fuel filler flap locking motor	996
4. Lock actuator for tailgate/boot lid, Anti-theft alarm horn (saloon models) Anti-theft alarm horn (Avant models)	997
5. -Fitting Locations: Central locking	998
6. -Fitting Locations: Central locking	999
203 - -Fitting Locations: Self-levelling suspension	1000-1002
1. -Fitting Locations: Self-levelling suspension	1000
2. Self-levelling suspension control unit (with compressor for self-levelling suspension), Self-levelling suspension compressor relay, Self-levelling suspension compressor motor, Pressure relief valve for self-levelling suspension, Suspension strut valve, r	1001
3. Self-levelling suspension sender, ESP (4-wheel drive), Self-levelling suspension warning lamp	1002
204 - -Fitting Locations: Headlight range control	1003-1007
1. -Fitting Locations: Headlight range control	1003
2. -Fitting Locations: Headlight range control	1004
3. Control unit for headlight range control (saloon and Avant models) from 08.98, Control unit for headlight range control (saloon models) up to 07.98, Control unit for headlight range control (Avant models) up to 07.98, Vehicle level sender RL (rear left, f	1005
4. -Fitting Locations: Headlight range control	1006
5. -Fitting Locations: Headlight range control	1007