

001 - Radio Bose sound system: Concert, Symphony with or without CD changer	1-10
1. Radio Bose sound system: Concert, Symphony with or without CD changer	1-2
2. Radio, diagnosis connection	3
3. Radio, CD changer	4
4. Radio, aerials	5
5. CAN bus connection	6
6. Radio, amplifier with bass loudspeaker (luggage compartment, right)	7
7. Amplifier with bass loudspeaker (luggage compartment, right), front and rear loudspeakers	8
8. Radio aerials Symphony saloon models	9
9. Radio aerials Symphony Avant	10
002 - Radio stereo system: Chorus, Concert	11-17
1. Radio stereo system: Chorus, Concert	11-12
2. Radio, rear window aerial, aerial motor	13
3. Radio, CD changer	14
4. Radio, amplifier with bass loudspeaker	15
5. Radio, front and rear loudspeakers	16
6. Radio, CAN bus connection	17
003 - Telematik	18-29
1. Telematik	18-19
2. Telephone/telematics control unit	20
3. Telephone/telematics control unit, telematics operating unit, breakdown help button, emergency call button	21
4. Telephone/telematics control unit, control unit for voice control	22
5. Telephone/telematics control unit, CAN bus wires, additional loudspeaker for telematics, language input control unit	23
6. Telephone/telematics control unit, language input control unit, fax unit	24
7. Telephone/telematics control unit, language input control unit, fax unit	25
8. Telephone/telematics control unit, control unit for voice control, telephone microphone	26
9. Telephone/telematics control unit, telephone microphone, telephone handset	27
10. Telephone/telematics control unit, navigation aerial, radio/telephone/navigation aerial, radio/telephone/auxiliary heater aerial, additional aerial for telematics	28
11. Combi-processor in dash panel insert, function selection switch II in centre console	29
004 - Telephone	30-39
1. Telephone	30-31
2. Telephone/telematics control unit	32
3. Telephone/telematics control unit, language input control unit	33
4. Telephone/telematics control unit, CAN bus wires, language input control unit	34
5. Telephone/telematics control unit, control unit for voice control, fax unit	35
6. Telephone/telematics control unit, control unit for voice control, fax unit	36
7. Telephone/telematics control unit, control unit for voice control, telephone microphone	37
8. Telephone/telematics control unit, telephone microphone, telephone handset	38
9. Telephone/telematics control unit, radio/telephone/auxiliary heater aerial	39
005 - Radiator fan control 300 W diesel engines (models with air conditioner)	40-43
1. Radiator fan control 300 W diesel engines (models with air conditioner)	40-41
2. Radiator fan run-on relay, radiator fan 2nd speed relay, radiator fan relay, radiator fan thermo-switches, radiator fan	42
3. Radiator fan thermo-switches, air conditioner pressure switch	43
006 - Radio navigation system (RNS-D)	44-58
1. Radio navigation system (RNS-D)	44
2. Navigation operating electronics control unit	45
3. Navigation operating electronics control unit	46
4. Operating electronics control unit, navigation, telephone/navigation systems loudspeaker, CD changer	47
5. Navigation operating electronics control unit	48
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	49
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	50
8. Navigation operating electronics control unit, bass loudspeakers, middle-high tone loudspeakers	51
9. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right), rear loudspeakers, radio/telephone/navigation aerial	52
10. Navigation operating electronics control unit, magnetic field sender (compass)	53
11. Navigation operating electronics control unit, navigation/TV tuner	54
12. Navigation operating electronics control unit, navigation/TV tuner	55
13. Navigation operating electronics control unit, navigation/TV tuner, aerial selection control unit. navigation interface	56

14. Aerials for saloon models	57
15. Aerials for Avant models	58
007 - Radiator fan control 300 W petrol engines (models with air conditioner)	59-62
1. Radiator fan control 300 W petrol engines (models with air conditioner)	59-60
2. Radiator fan relay, radiator fan 2nd speed relay, radiator fan thermo-switch, radiator fan	61
3. Radiator fan thermo-switches, air conditioner pressure switch	62
008 - Ultrasonic parking aid, front and rear allroad	63-69
1. Ultrasonic parking aid, front and rear allroad	63-64
2. Parking aid control unit, parking aid rear warning buzzer	65
3. Parking aid control unit, ultra-sonic sensors in rear bumper	66
4. Parking aid control unit, ultra-sonic sensors in front bumper	67
5. Parking aid control unit, reversing light switch	68
6. Parking aid control unit, parking aid button	69
009 - Basic equipment, From model year 2002	70-93
1. Basic equipment, From model year 2002	70
2. Earth connections	71
3. Ignition/starter switch, X contact relief relay	72
4. Battery, starter, alternator, starter inhibitor relay	73
5. Lighting switch, left steering column switch, front and rear fog light switch	74
6. Switches and instruments-lighting control, headlight range control	75
7. Hazard warning light switch	76
8. Windscreen washer/wiper system	77
9. Fuse box, heated washer jets, front fog lights	78
10. Fuse box, number plate light, glove box light	79
11. Fuse box, heated exterior mirror, brake light switch	80
12. Fuse box, horn relay	81
13. Fuse box, front and rear cigarette lighters, horn	82
14. Fuse box, right headlight	83
15. Fuse box, left headlight	84
16. Left tail light, reversing light, high level brake light bulb	85
17. Right tail light, fuel pump, fuel gauge senders, heated rear window	86
18. Dash panel insert, warning lamps	87
19. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, speedometer	88
20. Dash panel insert, analogue clock, brake pad/lining wear warning, radio controlled clock	89
21. Dash panel insert, oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact	90
22. Dash panel insert, immobilizer reading coil, oil level/oil temperature sender, function selection switch II in centre console	91
23. Dash panel insert, diagnosis connection	92
24. Basic wiring for radio, connection for switch illumination, shelf illumination	93
010 - 4.2 litre fuel injection engine (220 kW, 250 kW-Motronic-8-cylinder), engine codes ANK, From model year 2002	94-110
1. 4.2 litre fuel injection engine (220 kW, 250 kW-Motronic-8-cylinder), engine codes ANK, From model year 2002	94
2. 4.2 litre fuel injection engine (220 kW, 250 kW-Motronic-8-cylinder), engine codes ANK, From model year 2002	95
3. Battery, starter, alternator	96
4. Motronic control unit, starter inhibitor relay	97
5. Motronic control unit, injectors and ignition coils for cylinders 1-4	98
6. Motronic control unit, injectors and ignition coils for cylinders 5-8	99
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	100
8. Motronic control unit, knock sensor 1, engine speed sender, coolant temperature senders, Motronic current supply relay	101
9. Motronic control unit, Hall senders, brake light switch	102
10. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve 1 (pulsed), cruise control system switch	103
11. Motronic control unit, lambda probes, air mass meter	104
12. Motronic control unit, fuel pump relay, lambda probes downstream of catalytic converter	105
13. Motronic control unit, CAN bus, oil level thermo sender (service interval)	106
14. Engine cooling with radiator fan relay	107
15. Engine cooling with radiator fan control unit	108
16. Dash panel insert, fuel pump, fuel gauge	109
17. Dash panel insert	110
011 - 2.7 litre fuel injection engine (184 kW - bi-turbo engine), engine code ARE, From model year 2002	111-126
1. 2.7 litre fuel injection engine (184 kW - bi-turbo engine), engine code ARE, From model year 2002	111

2. 2.7 litre fuel injection engine (184 kW - bi-turbo engine), engine code ARE, From model year 2002	112
3. Battery, starter, alternator, ignition/starter switch	113
4. Motronic control unit, starter inhibitor relay	114
5. Motronic control unit, output stage 1, ignition coils	115
6. Motronic control unit, output stage 2, ignition coils	116
7. Motronic control unit, knock sensor 1, coolant temperature senders	117
8. Motronic control unit, Hall senders	118
9. Motronic control unit, fuel pump relay, lambda probes, brake servo relay, vacuum pump for brakes	119
10. Motronic control unit, air mass meter	120
11. Motronic control unit, activated charcoal filter system solenoid valve, fuse for hydraulic pump relay	121
12. Motronic control unit, brake light switch, throttle valve control unit, cruise control system brake pedal switch, clutch pedal switch	122
13. Motronic control unit, cruise control system switch	123
14. Radiator fan control unit, radiator fan, radiator fan thermo-switches	124
15. Dash panel insert, fuel pump	125
16. Dash panel insert, oil level thermo sender, oil pressure warning lamp	126
012 - 2.4 litre fuel injection engine (125 kW, 120 kW, 100 kW - Motronic - 6-cylinder), engine codes ASM, From model year 2002	127-143
1. 2.4 litre fuel injection engine (125 kW, 120 kW, 100 kW - Motronic - 6-cylinder), engine codes ASM, From model year 2002	127
2. 2.4 litre fuel injection engine (125 kW, 120 kW, 100 kW - Motronic - 6-cylinder), engine codes ASM, From model year 2002	128
3. Battery, starter, alternator, starter inhibitor relay	129
4. Motronic control unit, injectors, ignition coils 1 - 3, spark plugs	130
5. Motronic control unit, knock sensors, throttle valve control unit, engine speed sender, coolant temperature senders, intake air temperature sender	131
6. Motronic control unit, automatic gearbox control unit, Hall senders	132
7. Motronic control unit, fuel pump relay, lambda probes	133
8. Air mass meter, lambda probes downstream of catalytic converter	134
9. Motronic control unit, inlet camshaft timing adjustment valves, intake manifold change-over valve	135
10. Motronic control unit, cruise control system	136
11. Motronic control unit, accelerator pedal position senders	137
12. Motronic control unit, secondary air pump, brake servo relay, vacuum pump for brakes	138
13. Brake light switch, cruise control system brake pedal switch	139
14. Radiator fan, radiator fan control unit, high pressure sender	140
15. Radiator fan, radiator fan relay, radiator fan 2nd speed relay , radiator fan thermo-switch	141
16. Dash panel insert, fuel pump	142
17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	143
013 - 2.0 litre fuel injection engine (92 kW-Motronic-4-cylinder), engine code ALT, From model year 2002	144-157
1. 2.0 litre fuel injection engine (92 kW-Motronic-4-cylinder), engine code ALT, From model year 2002	144
2. 2.0 litre fuel injection engine (92 kW-Motronic-4-cylinder), engine code ALT, From model year 2002	145
3. Battery, starter, alternator	146
4. Motronic control unit, Motronic current supply relay	147
5. Motronic control unit, injectors	148
6. Motronic control unit, knock sensors, engine speed sender	149
7. Motronic control unit, lambda probe upstream of catalytic converter, throttle valve control unit, accelerator pedal position senders	150
8. Motronic control unit, lambda probes, air mass meter, brake servo relay	151
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed)	152
10. Motronic control unit, fuel pump relay	153
11. Motronic control unit, ignition coils, spark plugs	154
12. Starter inhibitor and reversing light relay, automatic gearbox control unit	155
13. Engine cooling, dash panel insert, fuel pump	156
14. Dash panel insert	157
014 - 2.5 litre turbo-diesel engine (114 kW / 132 kW - 6-cylinder), engine codes AKE, From model year 2002	158-171
1. 2.5 litre turbo-diesel engine (114 kW / 132 kW - 6-cylinder), engine codes AKE, From model year 2002	158
2. 2.5 litre turbo-diesel engine (114 kW / 132 kW - 6-cylinder), engine codes AKE, From model year 2002	159
3. Batterv. starter. alternator. starter inhibitor relav	160

4. Glow plugs, relay for glow plugs	161
5. Diesel direct injection system control unit, diesel direct injection system relay	162
6. Diesel direct injection system control unit, air mass meter, electro/hydraulic engine mounting solenoid valves	163
7. Diesel direct injection system control unit, cruise control system switch, brake light switch	164
8. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender, injection pump control unit	165
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel cooling pump relay, low fuel level sender	166
10. Diesel direct injection system control unit	167
11. Additional heater	168
12. Engine cooling	169
13. Dash panel insert, fuel gauge senders	170
14. Dash panel insert, speedometer sender, oil pressure switch	171
015 - 1.9 litre turbo-diesel engine (96 kW - 4-cylinder), engine codes AWX, From model year 2002	172-185
1. 1.9 litre turbo-diesel engine (96 kW - 4-cylinder), engine codes AWX, From model year 2002	172
2. 1.9 litre turbo-diesel engine (96 kW - 4-cylinder), engine codes AWX, From model year 2002	173
3. Battery, starter, alternator	174
4. Glow plugs, relay for glow plugs	175
5. Diesel direct injection system control unit, diesel direct injection system relay, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	176
6. Diesel direct injection system control unit, unit injector solenoid valves - cylinders No. 1 - 4, air mass meter	177
7. Diesel direct injection system control unit, cruise control system switch, brake light switch	178
8. Diesel direct injection system control unit, coolant temperature senders, accelerator pedal position sender	179
9. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel temperature sender	180
10. Diesel direct injection system control unit, fuel pump relay	181
11. Additional heater	182
12. Engine cooling	183
13. Dash panel insert, fuel gauge senders	184
14. Dash panel insert, speedometer sender, oil pressure switch	185
016 - 1.8 litre fuel injection turbo engine (110 kW-Motronic-4-cylinder), engine code AWT, From model year 2002	186-200
1. 1.8 litre fuel injection turbo engine (110 kW-Motronic-4-cylinder), engine code AWT, From model year 2002	186
2. 1.8 litre fuel injection turbo engine (110 kW-Motronic-4-cylinder), engine code AWT, From model year 2002	187
3. Battery, starter, alternator	188
4. Motronic control unit, Motronic current supply relay	189
5. Motronic control unit, injectors	190
6. Motronic control unit, knock sensors, engine speed sender	191
7. Motronic control unit, throttle valve control unit, accelerator pedal position senders	192
8. Motronic control unit, lambda probes, air mass meter	193
9. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor, brake servo relay	194
10. Motronic control unit, fuel pump relay	195
11. Ignition coils with output stage, spark plugs	196
12. Ignition coil 4 with output stage, reversing light switch	197
13. Radiator fan, radiator fan relay, radiator fan 2nd speed relay , radiator fan thermo-switch	198
14. Dash panel insert, fuel pump	199
15. Dash panel insert	200
017 - Avant models, rear, From model year 2002	201-210
1. Avant models, rear, From model year 2002	201
2. Luggage compartment light, 12 V socket	202
3. Tailgate lock cylinder switch, release button for tailgate lock cylinder	203
4. Number plate light, glass breakage sensors - rear side windows	204
5. Rear window washer/wiper system	205
6. Bulb monitoring device, left tail light	206
7. Bulb monitoring device, right tail light	207
8. Reversing light switch	208
9. Aerials for radio, telephone/mobile phone, navigation system and radio-operated remote control for auxiliary heater	209
10. Aerial selection control unit, navigation/TV tuner	210
018 - Trailer couplina	211-216

1. Trailer coupling	211-212
2. Turn signal switch, hazard warning light switch	213
3. Trailer socket, tail light-left and right	214
4. Trailer socket, rear left fog light bulb, high level brake light bulb	215
5. Brake light switch, reversing light switch	216
019 - CAN bus wires	217-224
1. CAN bus wires	217-218
2. CAN bus wires, high bus connection	219
3. CAN bus wires, high bus connection, low bus connection	220
4. CAN bus wires, low bus connection	221
5. CAN bus wires (display)	222
6. CAN bus wires (display)	223
7. CAN bus wires (convenience features)	224
020 - Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability program (ESP)	225-231
1. Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability program (ESP)	225-226
2. ABS with EDL control unit, speed sensors	227
3. ABS with EDL control unit, brake light switch, handbrake warning switch	228
4. ABS with EDL control unit, brake pressure sender	229
5. ABS with EDL control unit, steering angle sender, lateral acceleration sender, yaw rate sender	230
6. ABS with EDL control unit, ABS warning lamp	231
021 - Air conditioner with automatic control (externally controlled compressor) - 2.5 litre engine - AYM, From model year 2002	232-242
1. Air conditioner with automatic control (externally controlled compressor) - 2.5 litre engine - AYM, From model year 2002	232
2. Air conditioner with automatic control (externally controlled compressor) - 2.5 litre engine - AYM, From model year 2002	233
3. Control and display unit for air conditioner	234
4. Vent temperature sender, fresh air blower, solar roof	235
5. Ambient temperature sensor, fresh air intake duct temperature sensor, sunlight penetration photo sensor, compressor regulating valve for air conditioning system	236
6. Air recirculation flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor	237
7. Control motors, potentiometers	238
8. Control and display unit for air conditioner, engine cooling for 2.0 litre engines - ALT and 3.0 litre engines - ASN/BBJ	239
9. Illumination for dash panel vents	240
10. Radiator fan run-on relay, radiator fan 2nd speed relay, radiator fan relay, radiator fan thermo-switches, radiator fan	241
11. Radiator fan thermo-switches, high pressure sender	242
022 - Air conditioner with automatic control (internally controlled compressor) - 4.2 litre engine - ASG, From model year 2002	243-256
1. Air conditioner with automatic control (internally controlled compressor) - 4.2 litre engine - ASG, From model year 2002	243
2. Air conditioner with automatic control (internally controlled compressor) - 4.2 litre engine - ASG, From model year 2002	244
3. Control and display unit for air conditioner	245
4. Solar cell isolation relay, fresh air blower, solar roof	246
5. Air conditioning system magnetic coupling, magnetic coupling relay, ambient temperature sensor	247
6. Air recirculation flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor	248
7. Control motors, potentiometers	249
8. Control and display unit for air conditioner, air flow flap control motor, fuses 3 and 4	250
9. Illumination for dash panel vents	251
10. Engine cooling for petrol engines - 2.7 litre bi-turbo engine, ARE	252
11. Engine cooling with radiator fan control unit for petrol engines - 4.2 litre engine, ASG/ANK	253
12. Engine cooling with radiator fan relay for petrol engines - 2.4 litre engine, ASM, BDV	254
13. Engine cooling for diesel engines 2.5 litre TDI engine, AKE (allroad models)	255
14. Engine cooling for petrol engines - 1.8 litre engine, AWT	256
023 - Manual gearbox 01E with low range gearing, From model year 2002	257-261
1. Manual gearbox 01E with low range gearing, From model year 2002	257
2. Low range gearing control unit	258
3. Low range gearing control unit, hydraulic actuator travel sender control unit, hydraulic actuator travel sender	259
4. Low range gearina control unit. low range gearina switch. clutch pedal switch	260

5. Low range gearing control unit, low range gearing hydraulic pump	261
024 - Automatic gearbox (01V), (01L)	262-268
1. Automatic gearbox (01V), (01L)	262-263
2. Automatic gearbox control unit, solenoid valves, oil temperature sender	264
3. Automatic gearbox control unit, multi-function switch	265
4. Automatic gearbox control unit, Tiptronic switch	266
5. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid, gearbox output speed sender	267
6. Reversing light, starter inhibitor relay	268
025 - Automatic gearbox: multitronic 01J, From model year 2002	269-274
1. Automatic gearbox: multitronic 01J, From model year 2002	269
2. Automatic gearbox control unit, fuses	270
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	271
4. Tiptronic switch, selector lever lock solenoid	272
5. Operating unit in steering wheel, brake light switch	273
6. Ignition cut-off delay relay	274
026 - Trailer coupling with driver information system, from September 2002	275-279
1. Trailer coupling with driver information system, from September 2002	275
2. Hazard warning light switch, turn signal switch	276
3. Trailer socket, bulb monitoring device	277
4. Trailer socket, rear left fog light bulb, high level brake light bulb	278
5. Brake light switch, reversing light switch	279
027 - Driver information system	280-286
1. Driver information system	280-281
2. Dash panel insert, function selection switch	282
3. Dash panel insert, ambient temperature indicator, bulb monitoring device, function selection switch II in centre console	283
4. Bulb monitoring device, side lights, dipped beam headlights	284
5. Bulb monitoring device, tail lights, brake lights	285
6. Ambient temperature sensor	286
028 - Multi-function steering wheel, From model year 2002	287-291
1. Multi-function steering wheel, From model year 2002	287
2. Operating unit in steering wheel	288
3. Multi-function steering wheel control unit, radio, CAN bus connection	289
4. Multi-function steering wheel control unit	290
5. Multi-function steering wheel control unit, dual tone horn relay, high tone horn, low tone horn	291
029 - Steering wheel with Tiptronic	292-296
1. Steering wheel with Tiptronic	292-293
2. Operating unit in steering wheel, horn plate	294
3. Operating unit in steering wheel, airbag igniter - driver's side	295
4. Dual tone horn relay, high tone horn, low tone horn	296
030 - Ultra-sonic parking aid, front and rear	297-303
1. Ultra-sonic parking aid, front and rear	297-298
2. Parking aid control unit, rear parking aid warning buzzer	299
3. Parking aid control unit, parking aid senders - rear bumper	300
4. Parking aid control unit, parking aid senders - front bumper	301
5. Parking aid control unit, reversing light switch	302
6. Parking aid control unit, parking aid button	303
031 - Ultra-sonic parking aid, rear	304-306
1. Ultra-sonic parking aid, rear	304
2. Ultra-sonic parking aid	305
3. Ultra-sonic parking aid	306
032 - Ultra-sonic parking aid, front and rear (allroad models)	307-313
1. Ultra-sonic parking aid, front and rear (allroad models)	307-308
2. Parking aid control unit, rear parking aid warning buzzer	309
3. Parking aid control unit, parking aid senders - rear bumper	310
4. Parking aid control unit, parking aid senders - front bumper	311
5. Parking aid control unit, reversing light switch	312
6. Parking aid control unit, parking aid button	313
033 - Automatic anti-dazzle interior and exterior mirrors, from September 2002	314-316
1. Automatic anti-dazzle interior and exterior mirrors, from September 2002	314
2. Automatic anti-dazzle interior and exterior mirrors	315
3. Automatic anti-dazzle interior and exterior mirrors	316
034 - Electric windows, 4-door, From model year 2002	317-323
1. Electric windows, 4-door, From model year 2002	317
2. Fuses for electric windows. electric windows - front left	318

3. Electric windows - front right	319
4. Electric windows - rear left	320
5. Electric windows - rear right	321
6. Rear electric window isolation switch	322
7. Connection (open), connection (closed)	323
035 - Special vehicles, From model year 2002	324-336
1. Special vehicles, From model year 2002	324
2. Special vehicles, From model year 2002	325
3. Electric windows - front left and front right	326
4. Electric windows-front left and front right	327
5. Electric windows-front left and front right	328
6. Personal danger alarm system / intercom system	329
7. Personal danger alarm system / intercom system	330
8. Personal danger alarm system / siren alarm	331
9. Personal danger alarm system / siren alarm	332
10. Personal danger alarm system / intermittent main beam	333
11. Automatic door locking and manual release	334
12. Tailgate / boot lid release	335
13. Tailgate / boot lid emergency release	336
036 - Navigation system "NS LOW"	337-342
1. Navigation system "NS LOW"	337-338
2. Navigation system with CD drive control unit	339
3. Navigation system with CD drive control unit, navigation aerial	340
4. Navigation system with CD drive control unit, radio, telephone/navigation systems loudspeaker	341
5. Dash panel insert, function selection switch II in centre console	342
037 - Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2002	343-349
1. Headlights with gas discharge lamps and automatic dynamic headlight range control, From model year 2002	343
2. Ignition/starter switch, X contact relief relay	344
3. Lighting switch, headlight dipper switch	345
4. Headlight, right	346
5. Headlight, left	347
6. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	348
7. Headlight range control motor - left, headlight range control motor - right	349
038 - Daytime driving lights with front and rear fog lights (Norway/Sweden)	350-355
1. Daytime driving lights with front and rear fog lights (Norway/Sweden)	350-351
2. X contact relief relay, ignition/starter switch, number plate light	352
3. Lighting switch, front and rear fog light switch, headlight dipper/flasher switch	353
4. Left headlight, front fog lights	354
5. Headlight, right	355
039 - Self-levelling suspension and automatic headlight range control, From model year 2002	356-360
1. Self-levelling suspension and automatic headlight range control, From model year 2002	356
2. Self-levelling suspension control unit	357
3. Self-levelling suspension control unit, self-levelling suspension compressor relay, self-levelling suspension sender	358
4. Automatic dynamic headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	359
5. Automatic dynamic headlight range control: Headlight range control motor - left, headlight range control motor - right	360
040 - Electric adjustment of seats and mirrors with memory function - exterior mirrors with and without retraction function	361-375
1. Electric adjustment of seats and mirrors with memory function - exterior mirrors with and without retraction function	361-363
2. Memory operating unit, light bulbs for memory operating unit, driver's seat	364
3. Seat adjustment with memory control unit, driver's seat front height adjustment motor, driver's seat rake adjustment sender	365
4. Seat adjustment with memory control unit, driver's seat height adjustment switches, longitudinal adjustment and height adjustment senders, driver's seat longitudinal adjustment motor	366
5. Ignition/starter switch, driver's seat lumbar support adjustment switch, motors for driver's seat lumbar support longitudinal adjustment and lumbar support height adjustment	367
6. Memory operating unit - front passenger's seat, light bulbs for memory operating unit	368
7. Seat adjustment with memory control unit, front passenger's seat front height adjustment motor, front passenger's seat front height adjustment sender	369
8. Seat adjustment with memory control unit. front passenger's seat height adjustment switches.	370

longitudinal adjustment and height adjustment senders, front passenger's seat longitudinal adjustment motor	
9. Front passenger's seat longitudinal adjustment and height adjustment switches, front passenger's seat longitudinal adjustment motors	371
10. Front passenger's seat lumbar support adjustment switch, front passenger's seat lumbar support adjustment motor	372
11. Mirror adjustment switches with and without retraction function	373
12. Mirror adjustment on driver's side, mirror memory control unit	374
13. Mirror adjustment on front passenger's side, mirror memory control unit	375
041 - Provision for radio	376-379
1. Provision for radio	376-377
2. Provision for radio, voltage supply, aerial	378
3. Provision for radio, loudspeakers	379
042 - Radio navigation system (RNS-D)	380-394
1. Radio navigation system (RNS-D)	380
2. Navigation operating electronics control unit	381
3. Navigation operating electronics control unit	382
4. Navigation operating electronics control unit, CD changer	383
5. Navigation operating electronics control unit	384
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	385
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	386
8. Navigation operating electronics control unit, bass loudspeakers, mid-range/treble loudspeakers	387
9. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right), rear loudspeakers, radio/telephone/navigation aerial	388
10. Navigation operating electronics control unit, magnetic field sender (compass)	389
11. Navigation operating electronics control unit, navigation/TV tuner	390
12. Navigation operating electronics control unit, navigation/TV tuner	391
13. Navigation operating electronics control unit, navigation/TV tuner, aerial selection control unit, navigation interface	392
14. Aerials for saloon models	393
15. Aerials for Avant models	394
043 - Radio Bose sound system: Concert, Symphony with or without CD changer	395-404
1. Radio Bose sound system: Concert, Symphony with or without CD changer	395-396
2. Radio, diagnosis connection	397
3. Radio, CD changer	398
4. Radio, aerials	399
5. CAN bus connection	400
6. Radio, amplifier with bass loudspeaker (luggage compartment, right)	401
7. Amplifier with bass loudspeaker (luggage compartment, right), front and rear loudspeakers	402
8. Aerials for radio Symphony (saloon models)	403
9. Aerials for radio Symphony (Avant models)	404
044 - Radio stereo system: Chorus, Concert	405-411
1. Radio stereo system: Chorus, Concert	405-406
2. Radio, rear window aerial	407
3. Radio, CD changer	408
4. Radio, amplifier with bass loudspeaker	409
5. Radio, front and rear loudspeakers	410
6. Radio, CAN bus connection	411
045 - Telephone	412-421
1. Telephone	412-413
2. Telephone/telematics control unit	414
3. Telephone/telematics control unit, control unit for voice control	415
4. Telephone/telematics control unit, CAN bus wires, control unit for voice control	416
5. Telephone/telematics control unit, control unit for voice control, fax unit	417
6. Telephone/telematics control unit, control unit for voice control, fax unit	418
7. Telephone/telematics control unit, control unit for voice control, telephone microphone	419
8. Telephone/telematics control unit, telephone microphone, telephone handset	420
9. Telephone/telematics control unit, radio/telephone/auxiliary heater aerial	421
046 - Telematics	422-433
1. Telematics	422-423
2. Telephone/telematics control unit	424
3. Telephone/telematics control unit, telematics operating unit, breakdown help button, emergency call button	425
4. Telephone/telematics control unit. control unit for voice control	426



5. Telephone/telematics control unit, CAN bus wires, control unit for voice control	427
6. Telephone/telematics control unit, control unit for voice control, fax unit	428
7. Telephone/telematics control unit, control unit for voice control, fax unit, additional loudspeaker for telematics	429
8. Telephone/telematics control unit, control unit for voice control, telephone microphone	430
9. Telephone/telematics control unit, telephone microphone, telephone handset	431
10. Telephone/telematics control unit, navigation aerial, radio/telephone/navigation aerial, radio/telephone/auxiliary heater aerial, additional aerial for telematics	432
11. Dash panel insert, function selection switch II in centre console	433
047 - Airbags	434-440
1. Airbags	434-435
2. Airbags and belt tensioners for driver and front passenger	436
3. Side airbags in front seats, rear belt tensioners	437
4. Crash sensors, rear side airbags, curtain airbags	438
5. Side airbag crash sensor - driver's side, side airbag crash sensor - front passenger's side, belt switch - driver's side, belt switch - front passenger's side	439
6. Rear belt tensioner - centre, rear side airbags	440
048 - Auxiliary heater with or without radio-operated remote control and air conditioner	441-450
1. Auxiliary heater with or without radio-operated remote control and air conditioner	441-444
2. Battery, heater control unit	445
3. Control and display unit for air conditioner, solar cell isolation relay, solar roof	446
4. Control and display unit for air conditioner, solar cells isolation relay 2	447
5. Dash panel insert, function selection switch II in centre console	448
6. Auxiliary heating radio wave receiver, radio/telephone/auxiliary heater aerial	449
7. Coolant shut-off valve relay, small cooling circuit	450
049 - Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	451-471
1. Central locking with radio-operated remote control (models with or without anti-theft alarm system and interior monitoring)	451-452
2. Central locking control unit, anti-theft alarm system contact switch (bonnet), anti-theft alarm system horn	453
3. Central locking control unit, interior locking switch on driver's side	454
4. Central locking control unit, door contact switch on driver's side	455
5. Central locking control unit, door contact switch - front passenger's side	456
6. Central locking control unit, left door warning lamp, right door warning lamp	457
7. Central locking control unit, rear left door contact switch, rear right door contact switch	458
8. Central locking control unit, electric window motors	459
9. Central locking control unit, lock cylinder switch for tailgate/boot lid	460
10. Central locking control unit, release button for tailgate/boot lid lock cylinder, tailgate/boot lid release motor, tank filler flap locking motor	461
11. Central locking control unit, aerial for central locking	462
12. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	463
13. Ultra-sonic sensor control unit, left and right ultra-sonic sensors for anti-theft alarm system	464
14. Front left entry light, front right entry light, door opening illumination on driver's side, door opening illumination on front passenger's side	465
15. Door warning lamps, door handle lighting, ashtray illumination	466
16. Footwell lights	467
17. Front interior light, rear reading lamps	468
18. Front reading lamps, illumination for vanity mirrors	469
19. Connection 58s	470
20. Luggage compartment lights	471
050 - Self-levelling suspension for Audi allroad models and automatic dynamic headlight range control, From model year 2002	472-479
1. Self-levelling suspension for Audi allroad models and automatic dynamic headlight range control, From model year 2002	472
2. Self-levelling suspension control unit, self-levelling suspension compressor relay	473
3. Self-levelling suspension control unit, valve block, rear right vehicle level sender, front right vehicle level sender	474
4. Self-levelling suspension control unit, self-levelling suspension warning lamp	475
5. Self-levelling suspension control unit, operating unit to control suspension height	476
6. Self-levelling suspension control unit, operating unit to control suspension height	477
7. Control unit for headlight range control, headlight range control motors - left and right	478
8. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	479
051 - Anti-lock brake system 5.3 (ABS) with electronic stability program (ESP), allroad models	480-486
1. Anti-lock brake system 5.3 (ABS) with electronic stability program (ESP). allroad models	480-481

2. ABS with EDL control unit, speed sensors	482
3. ABS with EDL control unit, brake light switch, handbrake warning switch	483
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	484
5. ABS with EDL control unit, steering angle sender, lateral acceleration sender, yaw rate sender	485
6. ABS with EDL control unit, brake pressure sender	486
052 - 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN, From model year 2002	487-503
1. 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN, From model year 2002	487
2. 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN, From model year 2002	488
3. Battery, starter, alternator, starter inhibitor relay	489
4. Motronic control unit, injectors for cylinders 1 - 6, ignition coils 1 - 4	490
5. Motronic control unit, knock sensors, throttle valve control unit, ignition coils 5 and 6	491
6. Motronic control unit, engine speed sender, coolant temperature senders, Hall senders	492
7. Motronic control unit, Motronic current supply relay, Hall senders	493
8. Motronic control unit, fuel pump relay, lambda probes	494
9. Motronic control unit, air mass meter, lambda probes downstream of catalytic converter	495
10. Motronic control unit, camshaft timing adjustment valves, intake manifold change-over valve, clutch pedal switch	496
11. Motronic control unit, cruise control system, compressor regulating valve, oil level thermo sender-service interval	497
12. Motronic control unit, accelerator pedal position senders	498
13. Motronic control unit, secondary air pump, brake servo relay, vacuum pump for brakes	499
14. Brake light switch, cruise control system brake pedal switch	500
15. Engine cooling	501
16. Dash panel insert, fuel pump	502
17. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	503
053 - Mobile phone, provision for mobile phone	504-508
1. Mobile phone, provision for mobile phone	504-505
2. Operating electronics control unit (telephone), microphone for telephone	506
3. Operating electronics control unit (telephone), telephone/navigation systems loudspeaker	507
4. Mobile phone	508
054 - Electronic logbook (chip card reader unit)	509-511
1. Electronic logbook (chip card reader unit)	509-510
2. Chip card reader unit (electronic logbook)	511
055 - Card system for Italy (telepass)	512-513
1. Card system for Italy (telepass)	512
2. Card system for Italy (telepass)	513
202 - -Fitting Locations: Position of components in: electronics box in plenum chamber	514-573
1. Position of components in: connector point, electronics box in plenum chamber	514
2. Position of components in: connector point, A pillar, left	515
3. Position of components in: connector point, A pillar, left	516
4. Position of components in: connector point, A pillar, right	517
5. Position of components in: connector point, A pillar, right	518
6. Position of components in: connector point, A pillar, right	519
7. List of earth points	520
8. Fitting locations of individual control units	521
9. -Fitting Locations: Position of components in: electronics box in plenum chamber	522
10. -Fitting Locations: Position of components in: electronics box in plenum chamber	523
11. -Fitting Locations: Position of components in: electronics box in plenum chamber	524
12. -Fitting Locations: Position of components in: electronics box in plenum chamber	525
13. -Fitting Locations: Position of components in: electronics box in plenum chamber	526
14. -Fitting Locations: Position of components in: electronics box in plenum chamber	527
15. -Fitting Locations: Position of components in: electronics box in plenum chamber	528
16. -Fitting Locations: Position of components in: electronics box in plenum chamber	529
17. Fitting locations of individual components for radio sound system and telephone - saloon models	530
18. -Fitting Locations: Position of components in: electronics box in plenum chamber	531
19. -Fitting Locations: Position of components in: electronics box in plenum chamber	532
20. -Fitting Locations: Position of components in: electronics box in plenum chamber	533
21. -Fitting Locations: Position of components in: electronics box in plenum chamber	534
22. -Fitting Locations: Position of components in: electronics box in plenum chamber	535
23. -Fitting Locations: Position of components in: electronics box in plenum chamber	536
24. -Fitting Locations: Position of components in: electronics box in plenum chamber	537

25. -Fitting Locations: Position of components in: electronics box in plenum chamber	538
26. -Fitting Locations: Position of components in: electronics box in plenum chamber	539
27. Fitting locations of individual components for radio sound system and telephone - Avant models	540
28. -Fitting Locations: Position of components in: electronics box in plenum chamber	541
29. -Fitting Locations: Position of components in: electronics box in plenum chamber	542
30. -Fitting Locations: Position of components in: electronics box in plenum chamber	543
31. -Fitting Locations: Position of components in: electronics box in plenum chamber	544
32. -Fitting Locations: Position of components in: electronics box in plenum chamber	545
33. -Fitting Locations: Position of components in: electronics box in plenum chamber	546
34. -Fitting Locations: Position of components in: electronics box in plenum chamber	547
35. -Fitting Locations: Position of components in: electronics box in plenum chamber	548
36. Fitting locations of individual components for navigation systems I, II and III - saloon models	549
37. -Fitting Locations: Position of components in: electronics box in plenum chamber	550
38. -Fitting Locations: Position of components in: electronics box in plenum chamber	551
39. -Fitting Locations: Position of components in: electronics box in plenum chamber	552
40. -Fitting Locations: Position of components in: electronics box in plenum chamber	553
41. -Fitting Locations: Position of components in: electronics box in plenum chamber	554
42. -Fitting Locations: Position of components in: electronics box in plenum chamber	555
43. -Fitting Locations: Position of components in: electronics box in plenum chamber	556
44. -Fitting Locations: Position of components in: electronics box in plenum chamber	557
45. Fitting locations of individual components for navigation systems I, II and III - Avant models	558
46. -Fitting Locations: Position of components in: electronics box in plenum chamber	559
47. -Fitting Locations: Position of components in: electronics box in plenum chamber	560
48. -Fitting Locations: Position of components in: electronics box in plenum chamber	561
49. -Fitting Locations: Position of components in: electronics box in plenum chamber	562
50. -Fitting Locations: Position of components in: electronics box in plenum chamber	563
51. -Fitting Locations: Position of components in: electronics box in plenum chamber	564
52. -Fitting Locations: Position of components in: electronics box in plenum chamber	565
53. Fitting locations of individual components for telematics and voice control system - saloon models and Avant models	566
54. -Fitting Locations: Position of components in: electronics box in plenum chamber	567
55. -Fitting Locations: Position of components in: electronics box in plenum chamber	568
56. -Fitting Locations: Position of components in: electronics box in plenum chamber	569
57. -Fitting Locations: Position of components in: electronics box in plenum chamber	570
58. -Fitting Locations: Position of components in: electronics box in plenum chamber	571
59. -Fitting Locations: Position of components in: electronics box in plenum chamber	572
60. -Fitting Locations: Position of components in: electronics box in plenum chamber	573
203 - -Fitting Locations: Position of fuses in fuse box, behind left dash panel side cover	574-582
1. -Fitting Locations: Position of fuses in fuse box, behind left dash panel side cover	574
2. Position of fuses in fuse box, behind left dash panel side cover	575
3. Position of fuses in fuse box, behind left dash panel side cover, 13-point relay carrier, behind driver's storage compartment	576
4. 13-point relay carrier, behind driver's storage compartment	577
5. Micro-central electrics, behind driver's storage compartment, 8-point relay carrier, behind driver's storage compartment, behind micro-central electrics	578
6. 8-point relay carrier, behind driver's storage compartment, behind micro-central electrics	579
7. 8-point relay carrier, behind driver's storage compartment, behind micro-central electrics	580
8. Relay carrier, driver's side, behind dash panel at central carrier, 3-point relay carrier in electronics box, plenum chamber	581
9. 3-point relay carrier in electronics box, plenum chamber	582