

001 - Basic equipment	1-26
1. Basic equipment	1-3
2. Earth connections	4
3. Ignition/starter switch, X contact relief relay, starter inhibitor and reversing light relay	5
4. Battery, starter, alternator, starter inhibitor relay	6
5. Lighting switch, left steering column switch, front and rear fog light switch	7
6. Switches and instruments light regulator, headlight range control	8
7. Hazard warning light switch	9
8. Windscreen washer/wiper system	10
9. Fuse box, heated washer jets, front fog lights	11
10. Fuse box, number plate light, glove box light	12
11. Fuse box, heated exterior mirror, brake light switch	13
12. Fuse box, horn relay	14
13. Fuse box, front and rear cigarette lighters, horn	15
14. Fuse box, right headlight	16
15. Fuse box, left headlight	17
16. Left tail light, reversing light, high level brake light bulb	18
17. Right tail light, fuel pump, fuel gauge senders, heated rear window	19
18. Dash panel insert, warning lamps	20
19. Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, speedometer	21
20. Dash panel insert, analogue clock, brake pad/lining wear warning, radio controlled clock	22
21. Dash panel insert, oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact	23
22. Dash panel insert, immobilizer reading coil, oil level/oil temperature sender, function selection switch II in centre console	24
23. Dash panel insert, diagnosis connection	25
24. Basic wiring for radio, connection for switch illumination, shelf illumination	26
002 - 1.8 litre fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AWT	27-43
1. 1.8 litre fuel injection turbo engine (110 kW - Motronic - 4-cylinder), engine code AWT	27-30
2. Battery, starter, alternator	31
3. Motronic control unit, Motronic current supply relay	32
4. Motronic control unit, injectors	33
5. Motronic control unit, knock sensors, engine speed sender	34
6. Motronic control unit, throttle valve module, accelerator pedal position senders	35
7. Motronic control unit, lambda probes, air mass meter	36
8. Motronic control unit, activated charcoal filter system solenoid valve 1 (pulsed), secondary air pump motor, brake servo relay	37
9. Motronic control unit, fuel pump relay	38
10. Ignition coils with output stage, spark plugs	39
11. Ignition coil 4 with output stage, reversing light switch	40
12. Radiator fan, radiator fan relay, radiator fan 2nd speed relay , radiator fan thermo-switches	41
13. Dash panel insert, fuel pump	42
14. Dash panel insert	43
003 - 1.9 litre turbo-diesel engine (96 kW - 4-cylinder), engine codes AWX, AVF	44-60
1. 1.9 litre turbo-diesel engine (96 kW - 4-cylinder), engine codes AWX, AVF	44-48
2. Battery, starter, alternator	49
3. Glow plugs, relay for glow plugs	50
4. Diesel direct injection system control unit, diesel direct injection system relay, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle butterfly valve	51
5. Diesel direct injection system control unit, unit injector solenoid valves - cylinders No. 1 - 4, air mass meter	52
6. Diesel direct injection system control unit, cruise control system switch, brake light switch	53
7. Diesel direct injection system control unit, coolant temperature senders, accelerator pedal position sender	54
8. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel temperature sender	55
9. Diesel direct injection system control unit, fuel pump relay	56
10. Additional heater	57
11. Engine cooling	58
12. Dash panel insert, fuel gauge senders	59
13. Dash panel insert, speedometer sender, oil pressure switch	60
004 - 2.0 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ALT	61-76
1. 2.0 litre fuel injection engine (92 kW - Motronic - 4-cylinder), engine code ALT	61-64
2. Battery, starter, alternator	65
3. Motronic control unit, Motronic current supply relay	66
4. Motronic control unit. injectors	67

5. Motronic control unit, knock sensors, engine speed sender	68
6. Motronic control unit, lambda probe upstream of catalytic converter, throttle valve module, accelerator pedal position senders	69
7. Motronic control unit, lambda probes, air mass meter, brake servo relay	70
8. Motronic control unit, activated charcoal filter solenoid valve 1	71
9. Motronic control unit, fuel pump relay	72
10. Motronic control unit, ignition coils, spark plugs	73
11. Starter inhibitor and reversing light relay, reversing light switch	74
12. Engine cooling, dash panel insert, fuel pump	75
13. Dash panel insert	76
005 - 2.4 litre fuel injection engine (125 kW, 120 kW, 100 kW - Motronic - 6-cylinder), engine codes BDV/AMM/ASM	77-96
1. 2.4 litre fuel injection engine (125 kW, 120 kW, 100 kW - Motronic - 6-cylinder), engine codes BDV/AMM/ASM	77-81
2. Battery, starter, alternator, starter inhibitor relay	82
3. Motronic control unit, injectors, ignition coils 1 - 3, spark plugs	83
4. Motronic control unit, knock sensors, throttle valve module, engine speed sender, coolant temperature senders, intake air temperature sender	84
5. Motronic control unit, automatic gearbox control unit, Hall senders	85
6. Motronic control unit, fuel pump relay, lambda probes	86
7. Air mass meter, lambda probes downstream of catalytic converter	87
8. Motronic control unit, inlet camshaft timing adjustment valves, intake manifold change-over valve	88
9. Motronic control unit, cruise control system	89
10. Motronic control unit, accelerator pedal position senders	90
11. Motronic control unit, secondary air pump, brake servo relay, vacuum pump for brakes	91
12. Brake light switch, cruise control system brake pedal switch	92
13. Radiator fan, radiator fan control unit, high pressure sender	93
14. Radiator fan, radiator fan relay, radiator fan 2nd speed relay , radiator fan thermo-switches	94
15. Dash panel insert, fuel pump	95
16. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	96
006 - 2.5 litre turbo-diesel engine (114 kW/121 kW/132 kW - 6-cylinder), engine codes AYM/BFC, BCZ, BDG/AKE, BAU, BDH	97-114
1. 2.5 litre turbo-diesel engine (114 kW/121 kW/132 kW - 6-cylinder), engine codes AYM/BFC, BCZ, BDG/AKE, BAU, BDH	97-102
2. Battery, starter, alternator, starter inhibitor relay, starter inhibitor and reversing light relay	103
3. Glow plugs, relay for glow plugs	104
4. Diesel direct injection system control unit, diesel direct injection system relay	105
5. Diesel direct injection system control unit, air mass meter, electro/hydraulic engine mounting solenoid valves	106
6. Diesel direct injection system control unit, cruise control system switch, brake light switch	107
7. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender, injection pump control unit	108
8. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, low fuel level sender	109
9. Diesel direct injection system control unit, fuel pump relay, throttle valve positioner	110
10. Additional heater	111
11. Engine cooling	112
12. Dash panel insert, fuel gauge senders	113
13. Dash panel insert, speedometer sender, oil pressure switch	114
007 - 2.5 litre turbo-diesel engine (121 kW/132 kW - 6-cylinder), engine codes BCZ/AKE, BAU (allroad models)	115-131
1. 2.5 litre turbo-diesel engine (121 kW/132 kW - 6-cylinder), engine codes BCZ/AKE, BAU (allroad models)	115-119
2. Battery, starter, alternator, starter inhibitor relay	120
3. Glow plugs, relay for glow plugs	121
4. Diesel direct injection system control unit, diesel direct injection system relay	122
5. Diesel direct injection system control unit, air mass meter, electro/hydraulic engine mounting solenoid valves	123
6. Diesel direct injection system control unit, cruise control system switch, brake light switch	124
7. Diesel direct injection system control unit, coolant temperature senders, oil temperature sender, accelerator pedal position sender, injection pump control unit	125
8. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, fuel cooling pump relay, low fuel level sender	126
9. Diesel direct injection system control unit. fuel pump relay	127

10. Additional heater	128
11. Engine cooling	129
12. Dash panel insert, fuel gauge senders	130
13. Dash panel insert, speedometer sender, oil pressure switch	131
008 - 2.7 litre fuel injection engine (184 kW - bi-turbo engine), engine code BES	132-149
1. 2.7 litre fuel injection engine (184 kW - bi-turbo engine), engine code BES	132-135
2. Battery, starter, alternator, ignition/starter switch	136
3. Motronic control unit, starter inhibitor relay	137
4. Motronic control unit, ignition coils 1 - 3 with output stage	138
5. Motronic control unit, ignition coils 4 - 6 with output stage	139
6. Motronic control unit, knock sensor 1, coolant temperature senders	140
7. Motronic control unit, Hall senders, inlet camshaft timing adjustment valves, charge air pressure sender, Motronic current supply relay	141
8. Motronic control unit, fuel pump relay, lambda probes, brake servo relay, vacuum pump for brakes	142
9. Motronic control unit, air mass meter, exhaust gas temperature senders, lambda probes downstream of catalytic converter	143
10. Motronic control unit, activated charcoal filter solenoid valve, hydraulic pump relay fuse, secondary air pump motor	144
11. Motronic control unit, brake light switch, throttle valve module, cruise control system brake pedal switch, clutch pedal switch	145
12. Motronic control unit, cruise control system switch	146
13. Radiator fan control unit, radiator fan, radiator fan thermo-switches	147
14. Dash panel insert, fuel pump	148
15. Dash panel insert, oil level thermo sender, oil pressure warning lamp	149
009 - 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN / BBJ	150-168
1. 3.0 litre fuel injection engine (162 kW / 160 kW - Motronic - 6-cylinder), engine codes ASN / BBJ	150-153
2. Battery, starter, alternator, starter inhibitor relay	154
3. Motronic control unit, injectors for cylinders 1 - 6, ignition coils 1 - 4	155
4. Motronic control unit, knock sensors, throttle valve module, ignition coils 5 and 6	156
5. Motronic control unit, engine speed sender, coolant temperature senders, Hall senders	157
6. Motronic control unit, Motronic current supply relay, Hall senders	158
7. Motronic control unit, fuel pump relay, lambda probes	159
8. Motronic control unit, air mass meter, lambda probes downstream of catalytic converter	160
9. Motronic control unit, camshaft timing adjustment valves, intake manifold change-over valve, clutch pedal switch	161
10. Motronic control unit, cruise control system, compressor regulating valve, oil level thermo sender - service interval	162
11. Motronic control unit, accelerator pedal position senders	163
12. Motronic control unit, secondary air pump, brake servo relay, vacuum pump for brakes	164
13. Brake light switch, cruise control system brake pedal switch	165
14. Engine cooling	166
15. Dash panel insert, fuel pump	167
16. Dash panel insert, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	168
010 - 4.2 litre fuel injection engine (331 kW - Motronic - 8-cylinder), engine code BCY (RS6)	169-189
1. 4.2 litre fuel injection engine (331 kW - Motronic - 8-cylinder), engine code BCY (RS6)	169-173
2. Battery, starter, alternator	174
3. Motronic control unit, starter inhibitor relay	175
4. Motronic control unit, injectors and ignition coils for cylinders 1 - 4, electro/hydraulic engine mounting solenoid valve	176
5. Motronic control unit, injectors and ignition coils for cylinders 5 - 8, inlet camshaft timing adjustment valve -1-	177
6. Motronic control unit, throttle valve module, accelerator pedal position senders, cruise control system switch	178
7. Motronic control unit, knock sensors 1, 2 and 3, engine speed sender, Motronic current supply relay, intake air temperature sender	179
8. Motronic control unit, Hall senders, coolant temperature senders, charge air pressure sender	180
9. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve 1 (pulsed), air mass meter	181
10. Motronic control unit, lambda probes, exhaust gas temperature senders, turbocharger air recirculation valve	182
11. Motronic control unit, fuel pump relay, lambda probes downstream of catalytic converter	183
12. Motronic control unit, brake light switch, continued coolant circulation pump	184
13. Motronic control unit, CAN bus, oil level thermo sender (service interval)	185
14. Engine cooling. radiator fan control unit. radiator fan control unit -2-. high pressure sender	186

15. Fuel pump control unit, fuel pump (pre-supply pump), fuel gauge senders	187
16. Dash panel insert, fuel gauge	188
17. Dash panel insert, oil pressure switch, coolant shortage indicator switch, speedometer sender (Hall sender, on gearbox)	189
011 - 4.2 litre fuel injection engine (221 kW - Motronic - 8-cylinder), engine code BAS (allroad models)	190-209
1. 4.2 litre fuel injection engine (221 kW - Motronic - 8-cylinder), engine code BAS (allroad models)	190-194
2. Battery, starter, alternator	195
3. Motronic control unit, starter inhibitor relay	196
4. Motronic control unit, injectors and ignition coils for cylinders 1 - 4	197
5. Motronic control unit, injectors and ignition coils for cylinders 5 - 8	198
6. Motronic control unit, throttle valve control unit, accelerator pedal position senders, knock sensor 1, knock sensor 2, inlet camshaft timing adjustment valves	199
7. Motronic control unit, knock sensor 3, knock sensor 4, engine speed sender, coolant temperature senders, Motronic current supply relay	200
8. Motronic control unit, Hall senders, brake light switch, brake servo pressure sensor	201
9. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve 1 (pulsed), cruise control system switch	202
10. Motronic control unit, lambda probes, air mass meter	203
11. Motronic control unit, fuel pump relay, lambda probes downstream of catalytic converter	204
12. Motronic control unit, CAN bus, brake servo relay, vacuum pump for brakes	205
13. Engine cooling, radiator fan control unit, radiator fan control unit -2-, high pressure sender	206
14. Engine cooling, radiator fan relay, continued coolant circulation relay, radiator fan - right, continued coolant circulation pump, oil level thermo sender (service interval)	207
15. Dash panel insert, fuel pump, fuel gauge	208
16. Dash panel insert	209
012 - 4.2 litre fuel injection engine (220 kW / 250 kW - Motronic - 8-cylinder), engine codes ASG / ANK	210-228
1. 4.2 litre fuel injection engine (220 kW / 250 kW - Motronic - 8-cylinder), engine codes ASG / ANK	210-213
2. Battery, starter, alternator	214
3. Motronic control unit, starter inhibitor relay	215
4. Motronic control unit, injectors and ignition coils for cylinders 1 - 4	216
5. Motronic control unit, injectors and ignition coils for cylinders 5 - 8	217
6. Motronic control unit, throttle valve module, accelerator pedal position senders	218
7. Motronic control unit, knock sensor 1, engine speed sender, coolant temperature senders, Motronic current supply relay	219
8. Motronic control unit, Hall senders, brake light switch	220
9. Motronic control unit, secondary air pump relay, activated charcoal filter system solenoid valve 1 (pulsed), cruise control system switch	221
10. Motronic control unit, lambda probes, air mass meter	222
11. Motronic control unit, fuel pump relay, lambda probes downstream of catalytic converter	223
12. Motronic control unit, CAN bus, oil level and oil temperature sender	224
13. Engine cooling with radiator fan relay	225
14. Engine cooling with radiator fan control unit	226
15. Dash panel insert, fuel pump, fuel gauge	227
16. Dash panel insert	228
013 - Airbags	229-234
1. Airbags	229
2. Airbags and belt tensioners for driver and front passenger	230
3. Side airbags in front seats, rear belt tensioners	231
4. Crash sensors, rear side airbags, curtain airbags	232
5. Side airbag crash sensor - driver's side, side airbag crash sensor - front passenger's side, belt switch - driver's side, belt switch - front passenger's side	233
6. Rear belt tensioner - centre, rear side airbags	234
014 - Anti-lock brake system 5.3 (ABS) with electronic stability program (ESP), allroad models	235-241
1. Anti-lock brake system 5.3 (ABS) with electronic stability program (ESP), allroad models	235-236
2. ABS with EDL control unit, speed sensors	237
3. ABS with EDL control unit, brake light switch, handbrake warning switch	238
4. ABS with EDL control unit, ABS hydraulic unit, ABS return flow pump relay, relay for ABS solenoid valves	239
5. ABS with EDL control unit, steering angle sender, lateral acceleration sender, yaw rate sender	240
6. ABS with EDL control unit, brake pressure sender	241
015 - Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability program (ESP)	242-248
1. Anti-lock brake system 5.7 (ABS) with traction control system (ASR/TCS) and electronic stability	242-243

program (ESP)	
2. ABS with EDL control unit, speed sensors	244
3. ABS with EDL control unit, brake light switch, handbrake warning switch	245
4. ABS with EDL control unit, brake pressure sender	246
5. ABS with EDL control unit, steering angle sender, lateral acceleration sender, yaw rate sender	247
6. ABS with EDL control unit, ABS warning lamp	248
016 - Automatic gearbox: multitronic® 01J	249-256
1. Automatic gearbox: multitronic® 01J	249-251
2. Automatic gearbox control unit, fuses	252
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	253
4. Tiptronic switch, selector lever lock solenoid	254
5. Operating unit in steering wheel, brake light switch	255
6. Ignition cut-off delay relay	256
017 - Automatic gearbox (01V), (01L)	257-263
1. Automatic gearbox (01V), (01L)	257-258
2. Automatic gearbox control unit, solenoid valves, oil temperature sender	259
3. Automatic gearbox control unit, multi-function switch, gearbox input speed sender, gearbox output speed sender	260
4. Automatic gearbox control unit, tiptronic switch	261
5. Automatic gearbox control unit, tiptronic switch, selector lever lock solenoid	262
6. Reversing light, starter inhibitor relay	263
018 - Avant models, rear	264-275
1. Avant models, rear	264-266
2. Luggage compartment light, 12 V socket	267
3. Tailgate lock cylinder switch, release button for tailgate lock cylinder	268
4. Number plate light, glass breakage sensors - rear side windows	269
5. Rear window washer/wiper system	270
6. Bulb monitoring device, left tail light	271
7. Bulb monitoring device, right tail light	272
8. Reversing light switch	273
9. Aerials for radio, telephone/mobile phone, navigation system and radio-operated remote control for auxiliary heater	274
10. Aerial selection control unit, navigation/TV tuner	275
019 - CAN bus wires	276-282
1. CAN bus wires	276
2. CAN bus wires, high bus connection	277
3. CAN bus wires, high bus connection, low bus connection	278
4. CAN bus wires, low bus connection	279
5. CAN bus wires (display)	280
6. CAN bus wires (display)	281
7. CAN bus wires (convenience features)	282
020 - Electrical tyre pressure monitoring for allroad models	283-286
1. Electrical tyre pressure monitoring for allroad models	283
2. Tyre pressure monitor control unit	284
3. Tyre pressure sensors, tyre pressure monitoring aerials	285
4. Function selection switch II, in centre console	286
021 - Electronic logbook (chip card reader unit)	287-288
1. Electronic logbook (chip card reader unit)	287
2. Chip card reader unit (electronic logbook)	288
022 - Driver information system	289-295
1. Driver information system	289-290
2. Dash panel insert, function selection switch	291
3. Dash panel insert, ambient temperature indicator, bulb monitoring device, function selection switch II in centre console	292
4. Bulb monitoring device, side lights, dipped beam headlights	293
5. Bulb monitoring device, tail lights, brake lights	294
6. Ambient temperature sensor	295
023 - Mobile phone, provision for mobile phone	296-299
1. Mobile phone, provision for mobile phone	296
2. Mobile phone operating electronics control unit, telephone microphone	297
3. Mobile phone operating electronics control unit	298
4. Mobile phone	299
024 - Air conditioner with automatic control (externally controlled compressor) - 1.9 litre engine - AWX/AVF, 2.0 litre engine - ALT, 2.5 litre engine - AYM/AKE/BFC/BCZ/BDG/BAU/BDH, 3.0 litre engine - ASN/BBJ	300-312
1. Air conditioner with automatic control (externally controlled compressor) - 1.9 litre engine -	300-303

AWX/AVF, 2.0 litre engine - ALT, 2.5 litre engine - AYM/AKE/BFC/BCZ/BDG/BAU/BDH, 3.0 litre engine - ASN/BBJ	
2. Control and display unit for air conditioner	304
3. Vent temperature sender, fresh air blower, solar roof	305
4. Ambient temperature sensor, fresh air intake duct temperature sensor, sunlight penetration photo sensor, air conditioning system compressor regulating valve	306
5. Air recirculation flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor	307
6. Control motors, potentiometers	308
7. Control and display unit for air conditioner, engine cooling for 2.0 litre engines - ALT and 3.0 litre engines - ASN/BBJ	309
8. Illumination for dash panel vents	310
9. Radiator fan run-on relay, radiator fan 2nd speed relay, radiator fan relay, radiator fan thermo-switches, radiator fan	311
10. Radiator fan thermo-switches, high pressure sender	312
025 - Air conditioning system with automatic control (internally controlled compressor) 1.8 litre engine (AWT), 2.4 litre engine (BDV / AMM / ASM), 2.5 litre engine (AKE) allroad models, (BAU, BDH), 2.7 litre engine (ARE / BES), 4.2 litre engine (ASG / ANK / BCY)	313-328
026 - Multi-function steering wheel	329-334
1. Multi-function steering wheel	329-330
2. Operating unit in steering wheel	331
3. Multi-function steering wheel control unit, radio, CAN bus connection	332
4. Multi-function steering wheel control unit	333
5. Multi-function steering wheel control unit, dual tone horn relay, high tone horn, low tone horn	334
027 - Navigation system "NS LOW"	335-339
1. Navigation system "NS LOW"	335
2. Navigation system with CD drive control unit	336
3. Navigation system with CD drive control unit, navigation aerial	337
4. Navigation system with CD drive control unit, radio	338
5. Dash panel insert, function selection switch II in centre console	339
028 - Self-levelling suspension for allroad models and automatic dynamic headlight range control	340-348
1. Self-levelling suspension for allroad models and automatic dynamic headlight range control	340-341
2. Self-levelling suspension control unit, self-levelling suspension compressor relay	342
3. Self-levelling suspension control unit, valve block, rear right vehicle level sender, front right vehicle level sender	343
4. Self-levelling suspension control unit, self-levelling suspension warning lamp	344
5. Self-levelling suspension control unit, operating unit to control suspension height	345
6. Self-levelling suspension control unit, operating unit to control suspension height	346
7. Control unit for headlight range control, headlight range control motors - left and right	347
8. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	348
029 - Self-levelling suspension and automatic headlight range control	349-354
1. Self-levelling suspension and automatic headlight range control	349-350
2. Self-levelling suspension control unit	351
3. Self-levelling suspension control unit, self-levelling suspension compressor relay, self-levelling suspension sender	352
4. Automatic dynamic headlight range control: Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	353
5. Automatic dynamic headlight range control: Headlight range control motor - left, headlight range control motor - right	354
030 - Police vehicles	355-367
1. Police vehicles	355-357
2. Fuses, flasher relay for main beam headlight alarm system	358
3. Fuses, two-way radio switch	359
4. Flashing blue light signal system	360
5. Flashing blue light signal system, transmitter and receiver unit	361
6. Horn, connection for external equipment	362
7. Tachograph, 12 V socket, external socket (220 V)	363
8. Tachograph, weapons storage box	364
9. Two-way radio	365
10. Volume control	366
11. Alarm system switch, siren relay	367
031 - Radio Bose sound system: Concert I, Concert II, Symphony with and without CD changer	368-376
1. Radio Bose sound system: Concert I, Concert II, Symphony with and without CD changer	368
2. Radio, diagnosis connection	369
3. Radio. CD changer	370

4. Radio, aerials	371
5. CAN bus connection	372
6. Radio, amplifier with bass loudspeaker (luggage compartment, right)	373
7. Amplifier with bass loudspeaker (luggage compartment, right), front and rear loudspeakers	374
8. Aerials for radio Concert II, Symphony (saloon models)	375
9. Aerials for radio Concert II, Symphony (Avant models)	376
032 - Radio stereo system: Chorus, Concert	377-384
1. Radio stereo system: Chorus, Concert	377
2. Radio, rear window aerial	378
3. Radio, CD changer	379
4. Radio, amplifier with bass loudspeaker	380
5. Radio, front and rear loudspeakers	381
6. Radio, CAN bus connection	382
7. Aerials for radio Concert II (saloon models)	383
8. Aerials for radio Concert II (Avant models)	384
033 - Radio navigation system (RNS-D)	385-398
1. Radio navigation system (RNS-D)	385
2. Navigation operating electronics control unit	386
3. Navigation operating electronics control unit	387
4. Navigation operating electronics control unit, CD changer	388
5. Navigation operating electronics control unit	389
6. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	390
7. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right)	391
8. Navigation operating electronics control unit, bass loudspeakers, middle-high tone loudspeakers	392
9. Navigation operating electronics control unit, amplifier with bass loudspeaker (luggage compartment, right), rear loudspeakers, radio/telephone/navigation aerial	393
10. Navigation operating electronics control unit, navigation/TV tuner	394
11. Navigation operating electronics control unit, navigation/TV tuner	395
12. Navigation operating electronics control unit, navigation/TV tuner, aerial selection control unit, navigation interface	396
13. Aerials for saloon models	397
14. Aerials for Avant models	398
034 - Provision for radio	399-401
1. Provision for radio	399
2. Provision for radio, voltage supply, aerial amplifier, heated rear window with window aerial	400
3. Provision for radio, loudspeakers	401
035 - Manual gearbox 01E with low range gearing	402-407
1. Manual gearbox 01E with low range gearing	402-403
2. Low range gearing control unit	404
3. Low range gearing control unit, hydraulic actuator travel sender control unit, hydraulic actuator travel sender	405
4. Low range gearing control unit, low range gearing switch, clutch pedal switch	406
5. Low range gearing control unit, low range gearing hydraulic pump	407
036 - Headlights with gas discharge lamps and automatic dynamic headlight range control	408-415
1. Headlights with gas discharge lamps and automatic dynamic headlight range control	408-409
2. Ignition/starter switch, X contact relief relay	410
3. Lighting switch, headlight dipper switch	411
4. Headlight, right	412
5. Headlight, left	413
6. Control unit for headlight range control, vehicle level sender - rear left, vehicle level sender - front left	414
7. Headlight range control motor - left, headlight range control motor - right	415
037 - Special vehicles	416-429
1. Special vehicles	416-418
2. Electric windows - front left and front right	419
3. Electric windows - front left and front right	420
4. Electric windows - front left and front right	421
5. Personal danger alarm system / intercom system	422
6. Personal danger alarm system / intercom system	423
7. Personal danger alarm system / siren alarm	424
8. Personal danger alarm system / siren alarm	425
9. Personal danger alarm system / intermittent main beam	426
10. Automatic door locking and manual release	427
11. Tailgate/boot lid release	428

12. Tailgate/boot lid emergency release	429
038 - Taxi vehicles	430-438
1. Taxi vehicles	430-432
2. Taxi, alarm system control unit	433
3. Taxi, alarm system control unit	434
4. Taxi, taximeter	435
5. Taxi, two-way radio	436
6. Taxi, radio data unit, two-way radio loudspeaker	437
7. Taxi, radio data unit	438
039 - Telephone	439-447
1. Telephone	439
2. Telephone/telematics control unit	440
3. Telephone/telematics control unit, control unit for voice control	441
4. Telephone/telematics control unit, CAN bus wires, control unit for voice control	442
5. Telephone/telematics control unit, control unit for voice control, fax unit	443
6. Telephone/telematics control unit, control unit for voice control, fax unit	444
7. Telephone/telematics control unit, control unit for voice control, telephone microphone	445
8. Telephone/telematics control unit, telephone microphone, telephone handset	446
9. Telephone/telematics control unit, radio/ telephone/auxiliary heater aerial	447
040 - Telematics	448-458
1. Telematics	448
2. Telephone/telematics control unit	449
3. Telephone/telematics control unit, telematics operating unit, breakdown help button, emergency call button	450
4. Telephone/telematics control unit, control unit for voice control	451
5. Telephone/telematics control unit, CAN bus wires, control unit for voice control	452
6. Telephone/telematics control unit, control unit for voice control, fax unit	453
7. Telephone/telematics control unit, control unit for voice control, fax unit, additional loudspeaker for telematics	454
8. Telephone/telematics control unit, control unit for voice control, telephone microphone	455
9. Telephone/telematics control unit, telephone microphone, telephone handset	456
10. Telephone/telematics control unit, navigation aerial, radio/telephone/navigation aerial, additional aerial for telematics	457
11. Dash panel insert, function selection switch II in centre console	458
041 - Ultra-sonic parking aid, front and rear	459-464
1. Ultra-sonic parking aid, front and rear	459
2. Parking aid control unit, rear parking aid warning buzzer	460
3. Parking aid control unit, parking aid senders - rear bumper	461
4. Parking aid control unit, parking aid senders - front bumper	462
5. Parking aid control unit, reversing light switch	463
6. Parking aid control unit, parking aid button	464
042 - Ultra-sonic parking aid, front and rear (allroad models)	465-470
1. Ultra-sonic parking aid, front and rear (allroad models)	465
2. Parking aid control unit, rear parking aid warning buzzer	466
3. Parking aid control unit, parking aid senders - rear bumper	467
4. Parking aid control unit, parking aid senders - front bumper	468
5. Parking aid control unit, reversing light switch	469
6. Parking aid control unit, parking aid button	470
043 - Central locking with radio-operated remote control (models with and without anti-theft alarm system and interior monitoring)	471-490
1. Central locking with radio-operated remote control (models with and without anti-theft alarm system and interior monitoring)	471
2. Central locking control unit, anti-theft alarm system contact switch (bonnet), anti-theft alarm system horn	472
3. Central locking control unit, interior locking switch on driver s side, interior locking switch on front passenger s side	473
4. Central locking control unit, door contact switch - driver s side	474
5. Central locking control unit, door contact switch - front passenger s side	475
6. Central locking control unit, left door warning lamp, right door warning lamp	476
7. Central locking control unit, rear left door contact switch, rear right door contact switch	477
8. Central locking control unit, electric window motors	478
9. Central locking control unit, lock cylinder switch for rear lid	479
10. Central locking control unit, release button for rear lid lock cylinder, rear lid release motor, tank filler flap locking motor	480
11. Central locking control unit, aerial for central locking	481
12. Ultra-sonic sensor control unit. left and right ultra-sonic sensors for anti-theft alarm svstem	482

13. Ultra-sonic sensor control unit, glass breakage sensors - rear side windows	483
14. Front left entry light, front right entry light, door opening illumination on driver s side, door opening illumination on front passenger s side	484
15. Door warning lamps, door handle lighting, ashtray illumination	485
16. Footwell lights	486
17. Front interior light, rear reading lights	487
18. Front reading lights, illumination for vanity mirrors	488
19. Connection 58s	489
20. Luggage compartment lights	490
044 - Automatic gearbox: multitronic® 01J	491-498
1. Automatic gearbox: multitronic® 01J	491-493
2. Automatic gearbox control unit, fuses	494
3. Automatic gearbox control unit, starter inhibitor and reversing light relay	495
4. Tiptronic switch, selector lever lock solenoid	496
5. Operating unit in steering wheel, brake light switch	497
6. Ignition cut-off delay relay	498
045 - Radio and navigation system (RNS-E)	499-510
1. Radio and navigation system (RNS-E)	499
2. Navigation operating electronics control unit, fuse	500
3. Navigation operating electronics control unit, diagnosis	501
4. Navigation operating electronics control unit, CD changer	502
5. Navigation operating electronics control unit	503
6. Navigation operating electronics control unit, rear left and right bass loudspeaker, rear left and right bass loudspeaker, amplifier with bass loudspeaker, on right in luggage compartment	504
7. Navigation operating electronics control unit, front left and right bass loudspeaker, front left and right bass loudspeaker, radio, telephone and navigation system aerial	505
8. Navigation operating electronics control unit, amplifier with bass loudspeaker, on right in luggage compartment, front left bass loudspeaker, front left mid-range and treble loudspeaker	506
9. Navigation operating electronics control unit, amplifier with bass loudspeaker, on right in luggage compartment, loudspeaker	507
10. Navigation operating electronics control unit, navigation system tuner for TV	508
11. Navigation operating electronics control unit, navigation system tuner for TV, aerial selection control unit	509
12. Navigation system tuner for TV, aerial selection control unit, aerial amplifier, aerials	510
046 - CD changer	511-512
1. CD changer	511
2. CD changer, radio	512
201 - -Fitting Locations: Position of relays and fuses - 3	513-535
1. Position of relays and fuses	513-535
1.1 Position of fuses in fuse box, dash panel, left	513-519
1.2 13-point relay carrier, behind driver's storage compartment	520-522
1.3 Micro-central electrics, behind driver's storage compartment	523-524
1.4 8-point relay carrier, behind driver's storage compartment, behind micro-central electrics (left-hand drive vehicles)	525-527
1.5 8-point relay carrier, behind driver's storage compartment, behind micro-central electrics (right-hand drive vehicles)	528-529
1.6 Relay carrier, driver's side, behind dash panel at central carrier (left-hand drive vehicles)	530
1.7 Relay carrier, driver's side, behind dash panel at central carrier (right-hand drive vehicles)	531
1.8 3-point relay carrier in electronics box, plenum chamber	532-535
202 - -Fitting Locations: Earth points - 3	536-542
1. Earth points	536-542
1.1 List of all earth points in engine compartment	536-542
203 - -Fitting Locations: Fitting locations of individual control units - 3	543-556
1. Fitting locations of individual control units	543-556
1.1 Fitting locations of individual control units	543-556
204 - -Fitting Locations: Fitting locations of individual components for radio sound system and telephone - saloon models - 3	557-572
1. Fitting locations of individual components for radio sound system and telephone - saloon models	557-572
1.1 Fitting locations of individual components for radio sound system and telephone - saloon models	557-572
205 - -Fitting Locations: Fitting locations of individual components for radio sound system and telephone - Avant models - 3	573-586
1. Fitting locations of individual components for radio sound system and telephone - Avant models	573-586
1.1 Fitting locations of individual components for radio sound system and telephone - Avant models	573-586
206 - -Fitting Locations: Fitting locations of individual components for navigation systems I, II III and IV - saloon models - 3	587-602
1. Fitting locations of individual components for navigation systems I, II III and IV - saloon	587-602

models	
1.1 Fitting locations of individual components for navigation systems I, II III and IV - saloon models	587-602
207 - -Fitting Locations: Fitting locations of individual components for navigation systems I, II III and IV <i>f</i> Avant models - 3	603-615
1. Fitting locations of individual components for navigation systems I, II III and IV - Avant models	603-615
1.1 Fitting locations of individual components for navigation systems I, II III and IV - Avant models	603-615
208 - -Fitting Locations: Fitting locations of individual components for telematics and voice control system <i>f</i> saloon models and Avant models - 3	616-628
1. Fitting locations of individual components for telematics and voice control system - saloon models and Avant models	616-628
1.1 Fitting locations of individual components for telematics and voice control system - saloon models and Avant models	616-628
209 - -Fitting Locations: Position of components in: electronics box, plenum chamber - 3	629-642
1. Position of components in: electronics box, plenum chamber	629-642
1.1 Connector point, electronics box, plenum chamber (left-hand drive vehicles)	630
1.2 Connector point, electronics box, plenum chamber (right-hand drive vehicles)	631
1.3 Position of components in: connector point, A pillar, right	632-633
1.4 Position of components in: connector point, A pillar, left	634-635
1.5 Connections at connector points in engine compartment	636-637
1.6 Connections at connector points in engine compartment (RS6 models)	638
1.7 Connector points, on power-assisted steering reservoir	639-640
1.8 Connector point, under front seats	641
1.9 Connector point, under rear seats	642