

## Contents

<b>01 - Self-diagnosis, Electrical check</b> .....	<b>1</b>
<b>1 Basic Notes on ABS and ESP self-diagnosis</b> .....	<b>1</b>
1.1 Basic Notes on ABS and ESP self-diagnosis .....	1
1.2 Connecting fault reader V.A.G 1551 and selecting address word .....	2
1.3 Selecting functions .....	4
1.4 Safety precautions and basic notes on fault finding with ABS and ESP .....	6
1.5 Technical publications required .....	7
<b>2 CAN bus</b> .....	<b>8</b>
2.1 CAN bus .....	8
2.2 Function of CAN-Bus .....	8
2.3 CAN bus for ESP .....	8
2.4 Checking a "two-wire bus system" .....	9
2.5 CAN-terminating resistances .....	13
<b>3 ABS/EDL and ABS/EDL/TCS Bosch 5.3</b> .....	<b>13</b>
3.1 ABS/EDL and ABS/EDL/TCS Bosch 5.3 .....	13
3.2 Function of Bosch ABS/EDL 5.3 Series .....	13
3.3 Table of warning lamp functions .....	15
3.4 Function of self- diagnosis .....	18
3.5 Interrogating control unit version .....	19
3.6 ABS,EDL control unit versions .....	19
3.7 ABS, EDL, TCS control unit versions .....	20
3.8 Encoding control unit .....	21
3.9 ABS/EDL/TCS coding table .....	22
3.10 Reading measured value block .....	23
3.11 Final control diagnosis .....	26
3.12 Electrical check .....	35
<b>4 Fault memory ABS,EDL and ABS,EDL,TCS</b> .....	<b>44</b>
4.1 Fault memory ABS,EDL and ABS,EDL,TCS .....	44
4.2 Fault table .....	44
<b>5 ESP, Electronic-Stability-Program Bosch 5.3</b> .....	<b>53</b>
5.1 ESP, Electronic-Stability-Program Bosch 5.3 .....	53
5.2 Function of ESP .....	54
5.3 Additional components for ABS/EDL .....	56
5.4 Table of warning lamp functions .....	60
<b>6 Self-diagnosis</b> .....	<b>64</b>
6.1 Self-diagnosis .....	64
6.2 Function of self-diagnosis .....	64
6.3 Interrogating control unit version .....	65
6.4 Encoding control unit .....	66
6.5 ESP login code table .....	66
6.6 ESP login code table /A6 allroad quattro .....	67
6.7 ESP coding table .....	68
6.8 ESP coding table/A6 allroad quattro .....	68
6.9 Brake caliper type (front) .....	70
6.10 Reading measured value block .....	71
6.11 Final control diagnosis .....	79
6.12 Zero position compensation of steering angle sender -G85 .....	89
6.13 Actuation of ESP hydraulic pump -V156 .....	90
6.14 ESP - system test .....	91
<b>7 Electrical check</b> .....	<b>92</b>
7.1 Electrical check .....	92
<b>8 ESP fault memory</b> .....	<b>111</b>
8.1 ESP fault memory .....	111



8.2	Fault table; fault codes 00000 to 00526 . . . . .	112
8.3	Fault table; fault codes 00532 to 01421 . . . . .	117
8.4	Fault table; fault codes from 01422 to 01425 . . . . .	122
8.5	Fault table; fault codes from 01435 to 01542 . . . . .	130
8.6	Fault table; fault codes from 18031 to 65535 . . . . .	138