

Contents

00 - Technical data	1
1 Technical data	1
1.1 Allocation of PR number (factory code) to brake components	1
1.2 Brakes, technical data	1
2 Assessment of ceramic brake discs	6
2.1 Visible features of ceramic brake discs	6
2.2 Superficial cracks in cooling channel lands	7
2.3 Cracks in area of bolted connection on ceramic brake discs	7
2.4 Edge fractures	8
2.5 Chipping on ceramic brake discs	8
2.6 Cracks extending into cooling channels	9
3 Assessing degree of wear on ceramic brake discs	10
3.1 Wear assessment by checking thickness of brake disc	13
3.2 Wear assessment by checking thickness of brake disc	13
3.3 Wear assessment according to wear indicators	14
3.4 Wear assessment by weighing brake disc	15
3.5 Wear assessment of ceramic brake disc with tester VAS 6813	16
4 Brake test	23
4.1 General notes	23
4.2 Vehicles with front-wheel drive	23
4.3 Vehicles with four-wheel drive	23
4.4 Electromechanical parking brake on brake test equipment	24
5 Brake fluid	25
5.1 General notes	25
45 - Anti-lock brake system	26
1 General information on the anti-lock brake system	26
1.1 Notes for repair work on the ABS	26
2 Connecting vehicle diagnostic, testing and information system VAS 5051B or VAS 5052 and selecting functions	28
3 Exploded view - ABS/ESP components	30
4 Anti-lock brake system (ABS) Bosch 8.0	35
4.1 Hydraulic unit and brake lines	35
4.2 Removing and installing hydraulic control unit	36
4.3 Removing and installing hydraulic control unit - S6 and RS 6	40
5 Removing and installing parts of ABS system on front and rear axles	46
5.1 Removing and installing parts of ABS system on front axle	46
5.2 Removing and installing front wheel speed sensor	46
5.3 Removing and installing parts of ABS system on rear axle	47
5.4 Removing and installing rear wheel speed sensor	49
6 Removing and installing parts of ESP system	50
6.1 Removing and installing brake light switch	50
6.2 Removing and installing brake light sensor	51
6.3 Removing and installing ESP sensor unit G419	52
6.4 Removing and installing steering angle sender G85	53
6.5 Removing and installing parking brake contact switch F321	54
6.6 Removing and installing brake pressure sender G518 and brake pressure sender G519	54
46 - Brakes - mechanism	56
1 Front brakes FN3 (PR 1LT)	56
1.1 Servicing front brakes (PR 1LT)	56



1.2	Removing and installing brake pads (1LT)	58
2	Front brakes FNR G60 (PR 1LG/1LD/1LH/1LV/1ZL)	62
2.1	Servicing front brakes (PR 1LG/1LD/1LH/1LV/1ZL)	62
2.2	Removing and installing brake pads (PR 1LG/1LD/1LH/1LV/1ZL)	64
3	Front brakes (PR 1LJ/1LL)	70
3.1	Servicing front brakes (PR 1LJ/1LL)	70
3.2	Removing and installing brake pads (PR 1LJ/1LL)	72
4	Front brakes (steel version) - RS 6	77
4.1	Servicing front brakes (steel version) - RS 6	77
4.2	Detaching and attaching front brake caliper - RS 6	78
4.3	Renewing front brake caliper (RS 6)	79
4.4	Removing and installing front brake pads - RS 6	81
4.5	Detaching and attaching front brake disc - RS 6	85
4.6	Renewing front brake disc - RS 6	86
5	Ceramic front brakes	88
5.1	Servicing ceramic front brakes	88
5.2	Detaching and attaching front brake caliper (ceramic brakes)	90
5.3	Renewing front brake caliper (ceramic brakes)	92
5.4	Removing and installing front brake pads (ceramic brakes)	95
5.5	Detaching and attaching front brake disc (ceramic brakes)	100
5.6	Renewing front brake disc (ceramic brakes)	101
6	Rear brakes, electronic parking brake and handbrake (EPB)	104
6.1	Servicing rear brakes (including ceramic brakes) - all models	104
6.2	Removing and installing brake pads	107
7	Exploded view - brake pedal, left-hand drive vehicles with manual gearbox	113
7.1	Removing and installing brake pedal - left-hand drive vehicles	114
8	Exploded view - brake pedal, left-hand drive vehicles with automatic gearbox	115
9	Exploded view - brake pedal, right-hand drive vehicles	116
9.1	Removing and installing brake pedal - right-hand drive vehicles	117
9.2	Separating brake pedal from brake servo	118
10	Removing and installing mounting bracket	120
10.1	Removing and installing mounting bracket	120
11	Overview of components - electronic parking brake and handbrake (EPB)	124
11.1	Removing and installing electric park and handbrake control unit J540	125
11.2	Removing and installing actuator motor for electronic parking brake and handbrake	126
47 - Brakes - hydraulics		129
1	Pressurised leak test	129
1.1	Pressurised leak test	129
1.2	High-pressure and low-pressure tests	129
2	Brake caliper FN3	130
2.1	Servicing brake calipers	130
2.2	Removing and installing piston for front brake caliper	131
3	Brake caliper FNR G60	134
3.1	Servicing brake calipers	134
3.2	Removing and installing piston for front brake caliper	135
4	Brake calipers 2FNR 42 AL	138
4.1	Servicing brake calipers	138
4.2	Removing and installing piston for front brake caliper	139
5	Servicing brake calipers (steel version) - RS 6	142
5.1	Removing and installing piston for front brake caliper	142
6	Servicing front brake calipers (ceramic brakes) - RS 6	146
6.1	Removing and installing pistons for front brake caliper (ceramic brakes)	147

7	Rear brake calipers for electronic parking brake and handbrake (EPB)	149
7.1	Servicing brake calipers	149
7.2	Removing and installing piston for rear brake caliper	150
8	Bleeding brake system	154
8.1	Bleeding hydraulic system with brake filling and bleeding equipment	155
8.2	Bleeding hydraulic system without brake filling and bleeding equipment	157
8.3	Changing brake fluid	159
9	Exploded view - brake servo / brake master cylinder	160
10	Removing and installing brake master cylinder	162
10.1	Removing and installing brake master cylinder	162
11	Brake servo	165
11.1	Removing and installing brake servo	165
12	Vacuum pumps for brake servo	168
12.1	Exploded view - vacuum pump for brake servo	168
12.2	Removing and installing vacuum pump	169
12.3	Removing and installing vacuum pump - vehicles with 2.0 ltr. petrol engine	170
12.4	Removing and installing vacuum pump - vehicles with 2.4 ltr. petrol engine	173
12.5	Removing and installing vacuum pump - vehicles with 2.8 ltr. petrol engine	174
12.6	Removing and installing vacuum pump - vehicles with 3.0 ltr. petrol engine	175
12.7	Removing and installing vacuum pump - vehicles with 3.2 ltr. petrol engine	176
12.8	Exploded view - vacuum pump, RS 6	177
12.9	Removing and installing vacuum pump - RS 6	178
12.10	Removing and installing vacuum pump - vehicles with diesel engine	179
12.11	Removing and installing vacuum pump - vehicles with 2.7 ltr. TDI and 3.0 ltr. TDI diesel engine	181
13	Checking electric vacuum pump for brakes V192	183
13.1	Exploded view - electric vacuum pump for brakes V192	185
13.2	Removing and installing electric vacuum pump	185
13.3	Removing and installing electric vacuum pump - S6	188
13.4	Brake servo pressure sensor G294	189
13.5	Removing and installing pressure sensor	189
13.6	Checking non-return valve	190
13.7	Checking non-return valve - S6	190
14	Brake hoses and brake lines	191
14.1	Routing of brake hoses/lines	191