

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 Battery - general notes	2
2.2 Maintenance-free batteries	2
2.3 Disconnecting and connecting battery	2
2.4 Removing and installing earth cable with battery monitor control unit J367	4
2.5 Removing and installing battery	5
2.6 Removing and installing reinforcement for battery box	10
2.7 Checking battery	10
2.8 Preparations before measuring no-load voltage	10
2.9 Charging battery	11
2.10 Preparations before charging battery	11
2.11 Preparations for back-up power supply of battery	12
2.12 Removing and installing battery cut-off relay J655 - vehicles up to approx. 06.2004	13
2.13 Removing and installing battery isolation igniter N253 - vehicles from approx. 07.2004 onwards	13
2.14 Removing and installing retainer for battery cut-off relay J655 or battery isolation igniter N253	13
2.15 Removing and installing energy management control unit J644	14
3 Removing and installing alternator	17
3.1 Vehicles with 2.0 ltr. TFSI engine	17
3.2 Vehicles with 2.4 ltr. MPI engine	18
3.3 Vehicles with 2.8 ltr. FSI, 3.0 ltr. TFSI and 3.2 ltr. FSI engine	21
3.4 Vehicles with 3.0 ltr. MPI engine	22
3.5 Vehicles with 4.2 ltr. MPI engine	24
3.6 Vehicles with 4.2 ltr. FSI engine	28
3.7 Vehicles with 5.0 ltr. TFSI engine	31
3.8 Vehicles with 5.2 ltr. FSI engine	33
3.9 Vehicles with 4-cylinder unit injector TDI engine	35
3.10 Vehicles with 4-cylinder common rail TDI engine	38
3.11 Vehicles with 6-cylinder TDI engine	41
4 Checking and servicing alternator	48
4.1 Checking alternator	48
4.2 Servicing alternator	48
5 Removing and installing starter	49
5.1 Vehicles with 2.0 ltr. TFSI engine (manual gearbox)	49
5.2 Vehicles with 2.0 ltr. TFSI engine (automatic gearbox)	50
5.3 Vehicles with 2.4 ltr. MPI engine (manual gearbox)	51
5.4 Vehicles with 2.4 ltr. MPI engine (automatic gearbox)	51
5.5 Vehicles with 2.8 ltr. FSI, 3.0 ltr. MPI, 3.0 ltr. TFSI and 3.2 ltr. FSI engine	52
5.6 Vehicles with 4.2 ltr. MPI engine	53
5.7 Vehicles with 4.2 ltr. FSI engine	57
5.8 Vehicles with 5.0 ltr. TFSI engine	62
5.9 Vehicles with 5.2 ltr. FSI engine	64
5.10 Vehicles with 4-cylinder unit injector TDI engine	65
5.11 Vehicles with 4-cylinder common rail TDI engine	67
5.12 Vehicles with 6-cylinder TDI engine	68
90 - Gauges, instruments	70
1 Instrument cluster	70
1.1 Removing and installing instrument cluster	70
1.2 Pin assignment at multi-pin connectors on instrument cluster	74

1.3	Pin assignment on fuel gauge senders	74
1.4	Pin assignment at coolant temperature sender G62	75
1.5	Removing and installing ambient temperature sensor G17 (Audi A6, Audi S6)	85
1.6	Removing and installing ambient temperature sensor G17 - Audi RS 6	85
1.7	Removing and installing radio-controlled clock receiver J489 (saloon)	85
1.8	Removing and installing radio-controlled clock receiver J489 (Avant)	86
2	Cigarette lighter, socket	87
2.1	Removing and installing cigarette lighter U1	87
2.2	Removing and installing flashing blue light socket - Audi A6 Security	88
2.3	Removing and installing rear cigarette lighter U9	88
2.4	Removing and installing 12 V socket 2 U18	90
3	Horns	91
3.1	Removing and installing treble horn H2 / bass horn H7 - Audi A6, Audi S6	91
3.2	Removing and installing treble horn H2 / bass horn H7 - Audi RS 6	91
3.3	Removing and installing horn and dual tone horn H1 - Audi A6 Security	92
3.4	Removing and installing horn for special signals/loudspeaker - Audi A6 Security	92
4	Data bus diagnostic interface	94
4.1	Data bus diagnostic interface J533	94
4.2	Data bus diagnostic interface J533 in conjunction with MMI basic / MMI basic plus - layout	94
4.3	Data bus diagnostic interface J533 in conjunction with MMI - layout	95
4.4	Removing and installing data bus diagnostic interface J533	96
4.5	Connector at data bus diagnostic interface J533 - vehicles up to model year 2008	97
4.6	Connector at data bus diagnostic interface J533 - vehicles from model year 2009 onwards	98
92	Windscreen wash/wipe system	100
1	Contact corrosion	100
2	Windscreen wiper system	101
2.1	Moving windscreen wipers to service position	101
2.2	Renewing wiper blade	101
2.3	Removing and installing wiper arms	102
2.4	Adjusting wiper arms	103
2.5	Removing and installing wiper motor V with wiper motor control unit J400	104
2.6	Renewing wiper motor V with wiper motor control unit J400	105
3	Windscreen washer system	107
3.1	Removing and installing filler neck for washer fluid reservoir	107
3.2	Removing and installing washer fluid reservoir	107
3.3	Removing and installing washer fluid level sender G33	108
3.4	Removing and installing washer pump V5	109
3.5	Removing and installing washer jets - vehicles up to 01.2007	110
3.6	Removing and installing washer jets - vehicles from 02.2007 onwards	110
3.7	Adjusting washer jets	111
4	Rear window wiper and washer system (Avant)	112
4.1	Exploded view of rear window wiper	112
4.2	Renewing wiper blade	112
4.3	Removing and installing wiper arm	113
4.4	Adjusting wiper arm	114
4.5	Removing and installing washer jet	114
4.6	Adjusting washer jet	115
4.7	Exploded view of rear window wiper motor	115
4.8	Removing and installing rear window wiper motor V12	116
4.9	Removing and installing washer fluid reservoir	117
4.10	Removing and installing windscreen and rear window washer pump V59	117
5	Headlight washer system	118

5.1	Removing and installing headlight washer jets	118
5.2	Adjusting washer jets	119
5.3	Removing and installing washer fluid reservoir	119
5.4	Removing and installing headlight washer system pump V11	120
6	Washer fluid hoses	121
94	Lights, bulbs, switches - exterior	122
1	Halogen headlights - up to 05.2008	122
1.1	Exploded view of halogen headlight	122
1.2	Removing and installing headlights (to renew components on front end of vehicle)	123
1.3	Removing and installing headlights (old headlight is fitted again)	125
1.4	Adjusting headlights	127
1.5	Preparations before working on headlights	129
1.6	Renewing headlight dipped beam bulb M29 / M31	137
1.7	Renewing headlight main beam bulb M30 / M32	138
1.8	Renewing side light bulb M1 / M3	139
1.9	Renewing front turn signal bulb M5 / M7	140
1.10	Removing and installing headlight range control motor V48 / V49	141
1.11	Installing repair kit for headlight housing	142
1.12	Adapting headlights for driving on the left side of the road	142
1.13	Adapting headlights for driving on the right side of the road	143
2	Halogen headlights - from 06.2008 onwards	145
2.1	Exploded view of halogen headlight	145
2.2	Removing and installing headlights (to renew components on front end of vehicle)	146
2.3	Removing and installing headlights (old headlight is fitted again)	148
2.4	Adjusting headlights	150
2.5	Preparations before working on headlights	152
2.6	Renewing headlight dipped beam bulb M29 / M31	160
2.7	Renewing bulb for main beam headlights/daytime running lights M30 / M32 , L174 / L175	161
2.8	Renewing side light bulb M1 / M3	162
2.9	Renewing front turn signal bulb M5 / M7	163
2.10	Removing and installing headlight range control motor V48 / V49	164
2.11	Installing repair kit for headlight housing	165
2.12	Adapting headlights for driving on the left side of the road	165
2.13	Adapting headlights for driving on the right side of the road	166
3	Halogen headlights (USA vehicles)	168
3.1	Exploded view of halogen headlight	168
3.2	Removing and installing headlights (to renew components on front end of vehicle)	169
3.3	Removing and installing headlights (old headlight is fitted again)	170
3.4	Adjusting headlights	173
3.5	Preparations before working on headlights	175
3.6	Renewing headlight dipped beam bulb M29 / M31	180
3.7	Renewing headlight main beam bulb M30 / M32	181
3.8	Renewing front turn signal bulb M5 / M7	182
3.9	Installing repair kit for headlight housing	183
4	Gas discharge headlights or gas discharge headlights with dynamic cornering lights (adaptive light) - Audi A6 up to 05.2008, Audi S6	184
4.1	Safety precautions when handling gas discharge bulbs	184
4.2	Exploded view of gas discharge headlight	184
4.3	Removing and installing headlights (to renew components on front end of vehicle)	186
4.4	Removing and installing headlights (old headlight is fitted again)	188
4.5	Adjusting headlights	191
4.6	Preparations before working on headlights	194
4.7	Renewing gas discharge bulb L13 / L14	204
4.8	Renewing daytime running light bulb L174 / L175	206

4.9	Renewing side light bulb M1 / M3	207
4.10	Removing and installing left/right headlight screen adjustment solenoid N395 / N396	208
4.11	Removing and installing swivel module position sensor G474 / G475	208
4.12	Renewing front turn signal bulb M5 / M7	209
4.13	Removing and installing dynamic cornering light control motor V318 / V319	209
4.14	Removing and installing headlight range control motor V48 / V49	210
4.15	Removing and installing gas discharge bulb control unit J343 / J344	211
4.16	Removing and installing output module for headlight J667 / J668	212
4.17	Removing and installing starter unit for gas discharge bulb	213
4.18	Installing repair kit for headlight housing	214
4.19	Adapting headlights for driving on the left or right side of the road - vehicles with adjustment lever	215
4.20	Adapting headlights for driving on the left or right side of the road - vehicles without adjustment lever	217
5	Gas discharge headlights or gas discharge headlights with dynamic cornering lights (adaptive light) - Audi A6 from 06.2008 onwards	219
5.1	Safety precautions when handling gas discharge bulbs	219
5.2	Exploded view of gas discharge headlight	219
5.3	Removing and installing headlights (to renew components on front end of vehicle)	221
5.4	Removing and installing headlights (old headlight is fitted again)	223
5.5	Adjusting headlights	226
5.6	Preparations before working on headlights	228
5.7	Renewing gas discharge bulb L13 / L14	237
5.8	Removing and installing adapter cable for gas discharge bulb	239
5.9	Renewing bulb for additional main beam/cornering light M67 / M68 , L148 / L149	240
5.10	Renewing LED module for daytime running light and side light L176 / L177 , M1 / M3	241
5.11	Removing and installing left/right headlight screen adjustment solenoid N395 / N396	241
5.12	Removing and installing swivel module position sensor G474 / G475	241
5.13	Renewing front turn signal bulb M5 / M7	242
5.14	Removing and installing dynamic cornering light control motor V318 / V319	242
5.15	Removing and installing headlight range control motor V48 / V49	243
5.16	Removing and installing gas discharge bulb control unit J343 / J344	244
5.17	Removing and installing output module for headlight J667 / J668	245
5.18	Installing repair kit for headlight housing	245
5.19	Adapting headlights for driving on the left or right side of the road	246
6	Gas discharge headlights or gas discharge headlights with dynamic cornering lights (adaptive light) - USA vehicles; Audi A6, Audi S6	247
6.1	Safety precautions when handling gas discharge bulbs	247
6.2	Exploded view of gas discharge headlight	247
6.3	Removing and installing headlights (to renew components on front end of vehicle)	249
6.4	Removing and installing headlights (old headlight is fitted again)	251
6.5	Adjusting headlights	254
6.6	Preparations before working on headlights	257
6.7	Renewing gas discharge bulb L13 / L14	263
6.8	Renewing daytime running light bulb L174 / L175	265
6.9	Removing and installing left/right headlight screen adjustment solenoid N395 / N396	266
6.10	Removing and installing swivel module position sensor G474 / G475	266
6.11	Renewing front turn signal bulb M5 / M7	267
6.12	Removing and installing dynamic cornering light control motor V318 / V319	268
6.13	Removing and installing headlight range control motor V48 / V49	268
6.14	Removing and installing gas discharge bulb control unit J343 / J344	269
6.15	Removing and installing output module for headlight J667 / J668	270
6.16	Removing and installing starter unit for gas discharge bulb	271
6.17	Installing repair kit for headlight housing	272
7	Gas discharge headlights with dynamic cornering lights (adaptive light) - Audi RS 6	274
7.1	Safety precautions when handling gas discharge bulbs	274

7.2	Exploded view of gas discharge headlight	274
7.3	Removing and installing headlights (to renew components on front end of vehicle)	275
7.4	Removing and installing headlights (old headlight is fitted again)	278
7.5	Adjusting headlights	281
7.6	Renewing gas discharge bulb L13 / L14	283
7.7	Renewing daytime running light bulb	284
7.8	Removing and installing left/right headlight screen adjustment solenoid N395 / N396	285
7.9	Removing and installing swivel module position sensor G474 / G475	285
7.10	Renewing front turn signal bulb M5 / M7	285
7.11	Removing and installing dynamic cornering light control motor V318 / V319	285
7.12	Removing and installing headlight range control motor V48 / V49	286
7.13	Removing and installing gas discharge bulb control unit J343 / J344	287
7.14	Removing and installing output module for headlight J667 / J668	287
7.15	Removing and installing starter unit for gas discharge bulb	288
7.16	Installing repair kit for headlight housing	289
7.17	Adapting headlights for driving on the left or right side of the road	289
8	Side marker light (USA vehicles)	291
8.1	Removing and installing front side marker light	291
8.2	Renewing front side marker light bulb M33 / M34	291
9	Daytime running lights - Audi S6	293
9.1	Removing and installing daytime running light	293
10	Fog lights	294
10.1	Removing and installing fog lights - Audi A6 up to 05.2008	294
10.2	Renewing fog light bulb L22 / L23 - Audi A6 up to 05.2008	294
10.3	Removing and installing fog lights - Audi A6 from 06.2008 onwards	295
10.4	Renewing fog light bulb L22 / L23 - Audi A6 from 06.2008 onwards	296
10.5	Removing and installing fog lights - Audi S6/Audi RS 6	296
10.6	Renewing fog light bulb L22 / L23 - Audi S6/Audi RS 6	296
10.7	Adjusting fog lights	297
11	Turn signal repeater in wing	299
11.1	Removing and installing turn signal repeater bulb M18 / M19	299
12	Turn signal repeater in exterior mirror	300
12.1	Exploded view - lane change assist warning lamp	300
12.2	Removing and installing exterior mirror turn signal bulb L131 / L132	300
13	Entry light in exterior mirror - version 1	303
13.1	Removing and installing entry light in exterior mirror W52 / W53	303
14	Entry light in exterior mirror - version 2	305
14.1	Exploded view of entry light in exterior mirror	305
14.2	Removing and installing entry light in exterior mirror W52 / W53	305
15	Rear lights - Saloon - up to 05.2008	309
15.1	Exploded view of tail light cluster	309
15.2	Removing and installing tail light and bulb carrier	310
15.3	Aligning tail light cluster with body contour	312
16	Tail light cluster - Saloon - from 06.2008 onwards	313
16.1	Exploded view of outer tail light cluster	313
16.2	Removing and installing tail light and bulb carrier	313
16.3	Aligning tail light cluster with body contour	315
16.4	Exploded view of inner tail light cluster	315
16.5	Removing and installing inner tail light cluster	316
17	Tail light cluster - Avant - up to 05.2008	317
17.1	Exploded view of outer tail light cluster	317
17.2	Removing and installing tail light cluster and outer bulb carrier	318
17.3	Aligning tail light cluster with body contour	319
17.4	Exploded view of standard inner rear light	319

17.5	Exploded view of LED inner rear light	321
17.6	Removing and installing inner tail light cluster	321
17.7	Removing and installing reversing light bulb M16 / M17 , rear fog light bulb L46 / L47 , tail light bulb M2 / M4	323
18	Tail light cluster - Avant - from 06.2008 onwards	324
18.1	Exploded view - outer LED tail light cluster	324
18.2	Removing and installing tail light cluster and outer bulb carrier	324
18.3	Aligning tail light cluster with body contour	325
18.4	Exploded view of LED inner rear light	326
18.5	Removing and installing inner tail light cluster	327
18.6	Removing and installing bulb holder for reversing light bulb M16 / M17 , rear fog light bulb L46 / L47	328
19	High-level brake light - Saloon	330
19.1	Removing and installing high-level brake light - Audi A6	330
19.2	Removing and installing high-level brake light - Audi A6 Security	330
20	High-level brake light - Avant	332
20.1	Removing and installing high-level brake light	332
20.2	Preparing high-level brake light for installation	333
21	Number plate light	334
21.1	Removing and installing number plate light X	334
22	Steering column switch module	335
22.1	Steering column switch module	335
22.2	Exploded view - steering column switch module	335
22.3	Removing and installing steering column switch module	336
22.4	Removing and installing return ring with slip ring	337
22.5	Removing and installing steering angle sender G85	339
22.6	Removing and installing steering column electronics control unit J527	339
22.7	Pin assignment at steering column electronics control unit J527 (front)	340
22.8	Pin assignment at steering column electronics control unit J527 (reverse side)	342
22.9	Removing and installing turn signal switch E2	343
22.10	Removing and installing cruise control system switch E45	344
22.11	Removing and installing intermittent wiper switch E22	344
23	Entry and start authorisation switch E415	346
23.1	Removing and installing entry and start authorisation switch E415	346
23.2	Pin assignment at entry and start authorisation switch E415	347
24	Parking aid	348
24.1	Overview of parking aid	348
24.2	Removing and installing parking aid control unit J446 (saloon)	349
24.3	Removing and installing parking aid control unit J446 (Avant)	349
24.4	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	351
24.5	Removing and installing rear parking aid warning buzzer H15 on belt guide (left-side) - Saloon up to model year 2006	351
24.6	Removing and installing rear parking aid warning buzzer H15 on belt guide (right-side) - Saloon from model year 2007 onwards	352
24.7	Removing and installing rear parking aid warning buzzer H15 on belt guide (left-side) - Avant up to model year 2005	352
24.8	Removing and installing rear parking aid warning buzzer H15 on belt guide (right-side) - Avant from model year 2006 onwards	352
24.9	Removing and installing senders for parking aid (front)	353
24.10	Removing and installing rear parking aid senders	353
25	Automatic headlight range control	355
25.1	Overview of automatic headlight range control	355
25.2	Removing and installing control unit J431 / J745	355
96	Lights, bulbs, switches - interior	357
1	Lights and switches in dash panel	357

1.1	Removing and installing light switch	357
1.2	Removing and installing steering column adjustment switch E167	357
1.3	Removing and installing alarm switch in driver's footwell - Audi A6 Security	358
1.4	Removing and installing switch panel for instrument cluster	359
1.5	Removing and installing glove compartment button E316 and display unit button E506	359
1.6	Removing and installing headlight range control regulator E102	361
1.7	Removing and installing hazard warning light switch E3	361
1.8	Removing and installing warning lamp for airbag deactivated on front passenger side K145	362
1.9	Removing and installing switches in dash panel	362
1.10	Removing and installing front heated seat regulator E94 / E95	362
1.11	Removing and installing glove compartment light switch E26	363
1.12	Removing and installing glove compartment light	363
1.13	Removing and installing footwell light (front)	364
2	Lights and switches in front doors	365
2.1	Removing and installing mirror adjustment switch	365
2.2	Removing and installing operating unit for window regulator in driver door E512	366
2.3	Removing and installing window regulator switch in front passenger door E107	366
2.4	Removing and installing interior locking switch E150 / E198 (central locking button)	367
2.5	Removing and installing driver seat/front passenger seat memory operating unit E97 / E277	367
2.6	Removing and installing rear lid remote release button E233 and fuel tank flap release button E319	368
2.7	Removing and installing bulb for door opener light	368
2.8	Removing and installing central locking deadlock function warning lamp -SAFE- K133	369
2.9	Removing and installing interior door lighting strip	369
2.10	Removing and installing door contact switch	370
2.11	Removing and installing door warning lamp and entry light	370
3	Lights and switches in rear doors	371
3.1	Removing and installing rear left/rear right window regulator switch, in door E52 / E54	371
3.2	Removing and installing rear interior locking switch E273 / E274 (central locking button)	371
3.3	Removing and installing bulb for door opener light	372
3.4	Removing and installing interior door lighting strip	372
3.5	Removing and installing ashtray light in door (rear)	373
3.6	Removing and installing door contact switch	373
3.7	Removing and installing door warning lamp and entry light	373
4	Lights and switches in centre console	375
4.1	Removing and installing ashtray light (front)	375
4.2	Removing and installing parking brake switch F234	375
4.3	Removing and installing entry and start authorisation button E408	379
4.4	Removing and installing selector lever position display Y26	380
4.5	Removing and installing special signal switch - Audi A6 Security	380
4.6	Removing and installing heated rear seat switch with regulator E128 / E129	381
4.7	Removing and installing alarm switch in rear centre console - Audi A6 Security	381
4.8	Removing and installing footwell light (rear)	382
5	Lights and switches in luggage compartment	383
5.1	Removing and installing luggage compartment light - Saloon	383
5.2	Removing and installing luggage compartment light - Avant	383
5.3	Removing and installing bulb for luggage compartment light - Avant	384
5.4	Removing and installing rear lid light - Avant	385
5.5	Removing and installing alarm switch in luggage compartment - Audi A6 Security	386
5.6	Removing and installing contact switch in lock cylinder for rear lid, anti-theft system and central locking system F124	386
5.7	Removing and installing button to close rear lid in luggage compartment E406	387
6	Lights and switches in roof trim	388

6.1	Removing and installing vanity mirror light W14 / W20	388
6.2	Removing and installing contact switch for vanity mirror F147 / F148	388
6.3	Removing and installing interior light/reading light (front)	388
6.4	Removing and installing LED for background lighting	389
6.5	Renewing bulbs for interior light (front)	390
6.6	Renewing bulbs for reading light (front)	390
6.7	Removing and installing sliding sunroof adjustment regulator E139	391
6.8	Removing and installing garage door operation control unit J530	392
6.9	Removing and installing garage door operating unit E284	392
6.10	Removing and installing interior light/reading light (rear) with rectangular lens	392
6.11	Renewing bulb for interior light/reading light (rear) with rectangular lens	393
6.12	Removing and installing interior light/reading light (rear) with round lens	393
6.13	Renewing bulb for interior light/reading light (rear) with round lens	394
7	Immobiliser	395
8	Entry and start authorisation system	396
8.1	Overview of entry and start authorisation system	396
8.2	Overview of keyless entry system	397
8.3	Exploded view of exterior door handle for keyless entry system	398
8.4	Removing and installing front exterior door handle switches F272 / F273	399
8.5	Removing and installing rear exterior door handle switches F274 / F275	399
8.6	Removing and installing central locking button in front exterior door handle E369 / E370	399
8.7	Removing and installing central locking button in rear exterior door handle E371 / E372	400
8.8	Removing and installing interior aerial 1 for entry and start authorisation R138	400
8.9	Removing and installing front passenger side aerial for entry and start authorisation R135	401
8.10	Removing and installing driver side aerial for entry and start authorisation R134	401
8.11	Removing and installing luggage compartment aerial for entry and start authorisation R137	402
8.12	Removing and installing aerial reader unit for keyless entry system J723	402
9	Ultrasonic interior monitoring	403
9.1	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	403
9.2	Removing and installing interior monitoring sensor G273	403
9.3	Removing and installing alarm horn H12	404
9.4	Removing and installing vehicle inclination sender G384	404
10	Lane change assist	405
10.1	Overview of lane change assist	405
10.2	Removing and installing button for lane change assist E530	406
10.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	406
10.4	Removing and installing lane change assist control unit J769 / J770	408
10.5	Calibrating lane change assist - test equipment layout	409
10.6	Calibrating lane change assist control unit J769 / J770	410
11	Towing bracket	416
11.1	Socket for towing bracket	416
11.2	Removing and installing trailer detector control unit J345 (saloon)	416
11.3	Removing and installing trailer detector control unit J345 (Avant)	416
97 - Wiring		419
1	Contact corrosion	419
2	Component protection	420
3	Relay carriers, fuse carriers	421
3.1	Removing and installing plenum chamber electronics box (left-side)	421

3.2	Removing and installing relay and fuse holder in electronics box (plenum chamber, left-side)	423
3.3	Removing and installing connector point in electronics box (plenum chamber, left-side)	425
3.4	Removing and installing electronics box (plenum chamber, right-side)	426
3.5	Removing and installing main fuse holder in electronics box (plenum chamber, right-side)	430
3.6	Removing and installing auxiliary relay carrier in electronics box (plenum chamber, right-side)	432
3.7	Removing and installing suppression filter C24	434
3.8	Unplugging door separating connector (left-side)	436
3.9	Unplugging door separating connector (right-side)	437
3.10	Removing and installing fuse holder A SA in luggage compartment	437
4	Relay carriers, fuse carriers (vehicle interior)	439
4.1	Removing and installing fuse holder in dash panel (left-side)	439
4.2	Removing and installing CAN separating connector (left-side) T46a	440
4.3	Removing and installing onboard supply control unit J519	441
4.4	Removing and installing relay and fuse carrier behind dash panel (driver's side)	442
4.5	Removing and installing 2-position relay and fuse carrier behind dash panel (driver's side)	443
4.6	Removing and installing connector point at A-pillar (left-side)	444
4.7	Removing and installing bracket with fuse holder at dash panel (right-side)	444
4.8	Removing and installing fuse holder at dash panel (right-side)	445
4.9	Removing and installing CAN separating connector (right-side) T46b	446
4.10	Removing and installing onboard supply control unit 2 J520	446
4.11	Removing and installing special vehicle control unit J608	447
4.12	Removing and installing connector point at A-pillar (right-side)	447
5	Relay carriers, fuse carriers (luggage compartment)	448
5.1	Removing and installing relay and fuse holder in luggage compartment (right-side)	448
5.2	Removing and installing luggage compartment fuse holder (right-side)	450
5.3	Removing and installing personal danger alarm control unit J476 - Audi A6 Security	451
5.4	Removing and installing encoding connector for siren special signal system - Audi A6 Security	452
6	Repairing wiring harnesses and electrical connectors	453
7	Repairing connector housings and electrical connectors	454
8	Releasing and dismantling connector housing	455
9	Cleaning contact surfaces with contact surface cleaning set VAS 6410	456
10	Repairing aerial wires	457
11	Fibre optic cables	458
12	Vehicle diagnostic, testing and information systems	459