

Contents

00 - Technical data	1
1 Routing and attaching pipes and wiring	1
2 Contact corrosion	2
68 - Interior equipment	3
1 Shelves / trim panels	3
1.1 Dash panel cover (bottom) on driver side - exploded view	3
1.2 Removing and installing dash panel cover (bottom) on driver side	4
1.3 Knee bolster (driver side) - exploded view	5
1.4 Removing and installing bracket for knee bolster	6
1.5 Glove box - exploded view	10
1.6 Manually releasing the glove box lid	11
1.7 Removing and installing glove box	12
1.8 Removing and installing glove box lid	13
1.9 Removing and installing cushioning element for glove box lid	14
1.10 Removing and installing actuator motor for remote release of glove box lid	15
1.11 Adjusting cable for glove box lid	15
2 Centre console (rear)	16
2.1 Centre console (rear) - exploded view	16
2.2 Removing and installing centre console (rear)	17
2.3 Removing and installing vent on centre console (rear)	19
2.4 Removing and installing cup holder (rear)	20
2.5 Removing and installing mounting bracket for seat heating switch and cigarette lighter switch (rear)	20
3 Centre console (front)	21
3.1 Centre console (front) - exploded view	21
3.2 Removing and installing centre console (front)	22
3.3 Removing and installing multimedia system operating unit E380	24
3.4 Removing and installing trim cover	24
3.5 Removing and installing ashtray (front)	25
3.6 Removing and installing trim for ashtray (front)	25
3.7 Removing and installing cup holder (front)	26
3.8 Removing and installing trim for cup holder (front)	27
3.9 Removing and installing trim frame for multimedia system operating unit E380	29
4 Mounting frame for centre console	30
4.1 Mounting frame for centre console - exploded view	30
4.2 Removing and installing mounting frame for centre console	31
4.3 Removing and installing side trim for centre console	31
4.4 Removing and installing air duct	32
5 Centre armrest (front)	34
5.1 Exploded view of centre armrest (front)	34
5.2 Removing and installing centre armrest (front)	36
5.3 Removing and installing support for centre armrest (front)	36
5.4 Removing and installing storage compartment for centre armrest (front)	39
5.5 Removing and installing handle for centre armrest (front)	41
5.6 Removing and installing cover for centre armrest (front)	42
5.7 Removing and installing padding for centre armrest (front)	43
5.8 Removing and installing support bracket for centre armrest (front)	44
5.9 Removing and installing trim panels for base of centre armrest	44
5.10 Removing and installing mounting bracket for car telephone or lift mechanism for mobile phone	45
5.11 Removing and installing wiring harness for telephone or mobile phone	47
5.12 Retrofitting centre armrest (front)	48

6	Interior mirror	50
6.1	Removing and installing interior mirror	50
6.2	Removing and installing rain and light sensor G397	51
6.3	Safety regulations for interior mirror	52
6.4	General notes on interior mirror	52
6.5	Switching automatic anti-dazzle function on and off	53
6.6	Switching compass display on and off	53
6.7	Setting magnetic deflection zone	53
6.8	Calibrating digital compass	54
6.9	Adjusting automatic anti-dazzle interior mirror Y7 for right-hand drive or left-hand drive vehicles	55
6.10	Selecting the applicable deflection zone from the map	55
6.11	Checking operation of automatic anti-dazzle interior mirror	61
69 - Passenger protection	63	
1	Seat belts	63
1.1	Safety regulations for handling pyrotechnic belt tensioners	63
1.2	Disposal of pyrotechnic belt tensioners	64
1.3	Overview of seat belts and anchorage points	65
1.4	Removing and installing belt end fitting	67
1.5	Removing and installing three-point seat belt (front) with pyrotechnic belt tensioner	68
1.6	Exploded view of three-point seat belt (front) with belt tensioner and switchable belt force limiter (country-specific) - vehicles from 08/06 onwards	71
1.7	Removing and installing three-point seat belt (front) with pyrotechnic belt tensioner and switchable belt force limiter (country-specific)	72
1.8	Removing and installing anchorage point (belt buckle)	75
1.9	Removing and installing buckle for seat occupied recognition system controlling front passenger's airbag deactivation (country-specific version)	76
1.10	Removing and installing belt guide (front)	77
1.11	Removing and installing belt height adjuster	78
1.12	Removing and installing outer three-point seat belts (rear)	81
1.13	Removing and installing outer belt guide (rear)	84
1.14	Removing and installing outer three-point seat belt (rear) - Avant	85
1.15	Exploded view of rear outer belt guide II (Avant)	88
1.16	Removing and installing rear outer belt guide II (Avant)	89
1.17	Removing and installing three-point seat belt for rear centre seat - vehicles with fixed rear seat backrest	91
1.18	Removing and installing centre belt guide (rear)	94
1.19	Removing and installing outer belt end fitting (rear)	95
1.20	Centre belt end fitting (rear)	96
1.21	Removing and installing three-point seat belt for rear centre seat - vehicles with folding rear seat backrest	99
2	ISOFIX retainers	102
2.1	Removing and installing ISOFIX retainers	102
2.2	Checking ISOFIX retainers following an accident	103
3	Child seat anchors (USA, Canada)	104
3.1	Removing and installing child seat anchors	104
4	Checking seat belts	105
4.1	Checking belt webbing	105
4.2	Checking automatic belt retractor (locking action)	106
4.3	Visual inspection of belt buckle	106
4.4	Functional check of belt buckle	107
4.5	Checking guide fittings and latch plate	107
4.6	Checking securing components and anchorage points	107
4.7	Checking locking function of retractor mechanism for securing child safety seats (does not apply to driver's seat belt)	108

4.8	Checking belt-fastened sensor for rear three-point seat belts with belt tensioner (only applies to USA)	108
5	Safety regulations for airbags	110
5.1	General safety regulations for working on the airbag system	110
5.2	Additional safety regulations for side airbags	111
5.3	Additional safety regulations for curtain airbags	112
5.4	Additional safety regulations for working on seat occupied sensor for front passenger's airbag (country-specific version)	112
5.5	Procedure for dealing with seat occupied sensor controlling deactivation of front passenger's airbag (country-specific version) following a crash	113
5.6	Renewing airbag units following an accident	113
5.7	Checking mounting components following an accident	115
5.8	Accident in which no airbag was triggered	115
5.9	Disposal of pyrotechnic airbag units	115
6	Servicing airbags	117
6.1	Airbags - overview	117
6.2	Removing and installing airbag control unit J234	118
6.3	Removing and installing battery cut-off relay J655 - vehicles up to approx. 06/2004	120
6.4	Removing and installing battery isolation igniter N253 - vehicles up to 05/2006	121
6.5	Removing and installing battery isolation igniter N253 - vehicles from 06/2006 onwards	123
7	Servicing airbag (driver side)	126
7.1	Exploded view of airbag unit (driver side)	126
7.2	Removing and installing airbag igniter on driver side N95 and airbag igniter 2 on driver side N250	126
7.3	Renewing connector at airbag unit	130
7.4	Removing and installing steering wheel	131
7.5	Removing and installing airbag coil connector and return ring with slip ring F138	131
8	Servicing airbag (front passenger side)	134
8.1	Airbag unit (front passenger side) - exploded view	134
8.2	Removing and installing airbag igniter 1, front passenger side N131 and airbag igniter 2, front passenger side N132	135
8.3	Removing and installing key-operated switch to deactivate airbag on front passenger side E224	138
8.4	Removing and installing warning lamp for airbag deactivated on front passenger side K145	139
9	Servicing side airbags	141
9.1	Removing and installing side airbag igniters N199 and N200 , front (standard seats, seats with electric adjustment) - vehicles up to approx. 04.2007	141
9.2	Removing and installing side airbag igniters N199 and N200 , front (standard seats, seats with electric adjustment) - vehicles from approx. 05.2007 onwards	144
9.3	Removing and installing rear side airbag igniter on driver side N201 and rear side airbag igniter on front passenger side N202 (fixed rear seat backrest)	148
9.4	Removing and installing rear side airbag igniter on driver side N201 and rear side airbag igniter on front passenger side N202 (folding rear seat backrest)	150
10	Deactivating side airbag (rear)	152
10.1	Deactivating	152
10.2	Activating	153
11	Servicing curtain airbags - saloon	156
11.1	Removing and installing driver side curtain airbag igniter N251 and front passenger side curtain airbag igniter N252	156
12	Servicing curtain airbags -Avant	160
12.1	Removing and installing driver side curtain airbag igniter N251 and front passenger side curtain airbag igniter N252	160
13	Servicing curtain airbag - Audi A6 Security	164
13.1	Removing and installing driver side curtain airbag igniter N251 and front passenger side curtain airbag igniter N252	164
14	Servicing crash sensors for airbags	168

14.1	Precautions to take when handling crash sensors (pressure sensors) for side airbags (front)	168
14.2	Overview of fitting locations	168
14.3	Removing and installing front airbag crash sensor for driver side G283 and front airbag crash sensor for front passenger side G284	169
14.4	Removing and installing side airbag crash sensor on driver side G179 and side airbag crash sensor on front passenger side G180 (front, pressure sensor)	171
14.5	Removing and installing rear side airbag crash sensor on driver side G256 and rear side airbag crash sensor on front passenger side G257 (curtain airbag)	173
15	Belt-fastened recognition	176
16	Servicing seat occupancy recognition	178
16.1	Removing and installing seat occupancy recognition (USA)	178
70 - Trim, insulation	183
1	Door trim (front)	183
1.1	Overview of fitting locations	183
1.2	Overview of wiring in door trim	184
1.3	Removing and installing door trim (front)	184
1.4	Removing and installing insulation	187
1.5	Removing and installing armrest	189
1.6	Removing and installing mirror adjustment switch	190
1.7	Removing and installing window regulator switch	191
1.8	Removing and installing interior door handle	192
1.9	Removing and installing treble loudspeaker	192
1.10	Removing and installing operating unit for seat memory	193
1.11	Removing and installing switch for anti-theft alarm system	193
1.12	Removing and installing rear lid release switch	193
1.13	Removing and installing trim for exterior mirror	193
1.14	Removing and installing trim panel	194
1.15	Removing and installing light strip	194
1.16	Removing and installing treble loudspeaker trim	194
1.17	Removing and installing door warning light	194
1.18	Removing and installing entry light	195
1.19	Removing and installing rubber ring for vent	195
1.20	Removing and installing frame for bass reflex duct	195
1.21	Making opening for frame for bass reflex duct in door trim	195
1.22	Removing and installing trim for bass loudspeaker	196
2	Door trim (rear)	197
2.1	Overview of fitting locations	197
2.2	Overview of wiring in door trim	198
2.3	Removing and installing door trim (rear)	198
2.4	Removing and installing insulation	200
2.5	Removing and installing armrest	201
2.6	Removing and installing window regulator switch	203
2.7	Removing and installing interior door handle	203
2.8	Removing and installing treble loudspeaker	204
2.9	Removing and installing cover	204
2.10	Removing and installing trim panel	204
2.11	Removing and installing light strip	204
2.12	Removing and installing treble loudspeaker trim	205
2.13	Removing and installing door warning light	205
2.14	Removing and installing entry light	205
2.15	Removing and installing side sun blind for door window	205
2.16	Removing and installing hooks for side sun blind	206
3	Dash panel	207
3.1	Exploded view of dash panel	207

3.2	Removing and installing dash panel end trim	208
3.3	Removing and installing trim panel	208
3.4	Removing and installing trim for indirect ventilation	209
3.5	Removing and installing dash panel vent (driver side)	210
3.6	Removing and installing dash panel vent (passenger side)	211
3.7	Removing and installing dash panel vent (centre)	212
3.8	Removing and installing dash panel	214
4	Central tube for dash panel	230
4.1	Exploded view of central tube for dash panel	230
4.2	Removing and installing central tube for dash panel	231
4.3	Fitting new retainer for bracket for glove box	243
5	Trim panels	246
5.1	Removing and installing A-pillar trim (top)	246
5.2	Removing and installing A-pillar trim (top) - Audi A6 Security	249
5.3	Removing and installing A-pillar trim (bottom)	251
5.4	Removing and installing connecting piece	253
5.5	Removing and installing foot rest cover and bracket	255
5.6	Removing and installing B-pillar trim (top)	257
5.7	Removing and installing B-pillar trim (top) - Audi A6 Security	258
5.8	Removing and installing coat hook	260
5.9	Removing and installing B-pillar trim (bottom)	260
5.10	Removing and installing C-pillar trim	261
5.11	Removing and installing sill/pillar trim	264
5.12	Removing and installing D-pillar trim	266
5.13	Removing and installing roof end trim	268
5.14	Removing and installing rear shelf without sun blind (rear)	269
5.15	Removing and installing rear shelf with sun blind (rear)	273
5.16	Removing and installing electrical rear roller blind (sun blind)	276
5.17	Removing and installing floor covering	278
5.18	Rear lid trim - exploded view	280
5.19	Removing and installing rear lid trim	280
5.20	Removing and installing handle recess	283
5.21	Exploded view of rear cross panel trim	283
5.22	Removing and installing rear cross panel trim	284
5.23	Luggage compartment side trim - exploded view	285
5.24	Removing and installing luggage compartment side trim	286
5.25	Removing and installing fastening rings	288
5.26	Removing and installing retaining hooks	288
5.27	Back panel trim on vehicles with fixed rear seat backrests - exploded view	288
5.28	Removing and installing back panel trim	289
5.29	Luggage compartment floor covering - exploded view	290
5.30	Removing and installing luggage compartment floor covering	290
5.31	Removing and installing retainer for luggage compartment floor	290
5.32	Removing and installing mounting frame for loading aid	291
6	Trim panels - Avant	293
6.1	C-pillar trim (top) - exploded view	293
6.2	Removing and installing C-pillar trim (top)	293
6.3	Exploded view of D-pillar trim	295
6.4	Removing and installing D-pillar trim	296
6.5	Exploded view of roof end trim	297
6.6	Removing and installing roof end trim	298
6.7	Rear lid trim - exploded view	299
6.8	Removing and installing rear lid trim (bottom)	300
6.9	Making opening for button to close rear lid in luggage compartment E406 on replacement trim part (bottom) for rear lid	302
6.10	Removing and installing rear lid trim (top)	302

6.11	Removing and installing trim for rear lid lock	304
6.12	Sun blind (rear) - exploded view	304
6.13	Removing and installing sun blind (rear)	305
6.14	Removing and installing trim for sun blind (rear)	305
6.15	Exploded view of rear cross panel trim	305
6.16	Removing and installing rear cross panel trim	306
6.17	Luggage compartment side trim - exploded view	307
6.18	Removing and installing hinged hook	308
6.19	Removing and installing luggage compartment side trim	308
6.20	Removing and installing retaining rail for fastening rings	310
6.21	Load guard - exploded view	310
6.22	Removing and installing load guard at rear seat backrest	312
6.23	Removing and installing bracket for load guard in luggage compartment	312
6.24	Exploded view of cover for luggage compartment floor	313
6.25	Removing and installing storage well liner	315
6.26	Removing and installing handle for luggage compartment floor	316
6.27	Removing and installing hinge for luggage compartment floor	317
7	Roof trim	318
7.1	Exploded view of moulded headliner	318
7.2	Removing and installing moulded headliner	320
7.3	Attaching roof reinforcement to body - saloon models without sunroof	325
7.4	Attaching roof reinforcement to body - saloon models with sunroof	325
7.5	Attaching roof reinforcement to body - Avant models without sunroof	326
7.6	Attaching roof reinforcement to body - Avant models with sunroof	327
7.7	Removing and installing sun visor	328
7.8	Removing and installing centre bracket for sun visor	330
7.9	Removing and installing roof grab handle	331
72 - Seat frames	332	
1	Front seat (standard seat)	332
1.1	Removing and installing front seat (standard seat)	332
1.2	Unplugging connectors	335
1.3	Connecting airbag adapter VAS 6036	336
1.4	Connector assignment at connector point	338
1.5	Exploded view of modular wire routing - vehicles from 07/06 onwards	338
1.6	Modular wire routing versions	339
1.7	Modular wire routing with corrugated tube on front seat	340
1.8	Removing and installing seat rail covers	343
1.9	Removing and installing backrests, front (standard seats)	344
1.10	Removing and installing retaining plate for DVD player	348
1.11	Removing and installing backrest adjuster	348
1.12	Removing and installing seat height adjuster	349
1.13	Removing and installing side trim (sill side)	350
1.14	Removing and installing side trim (tunnel side)	352
1.15	Removing and installing seat height adjustment unit	353
1.16	Removing and installing four-way lumbar support switch	354
1.17	Removing and installing drawer - vehicles up to 06/2006	355
1.18	Exploded view of storage compartment (passenger side)	358
1.19	Removing and installing storage compartment	358
1.20	Exploded view of storage compartment components	360
1.21	Dismantling and assembling storage compartment	361
1.22	Removing and installing seat depth adjuster (sports seat)	364
1.23	Renewing backrest	365
1.24	Renewing seat pan	366
1.25	Removing and installing backrest cover panel	368
1.26	Removing and installing four-way lumbar support - old version	369

1.27	Removing and installing control motors for lumbar support adjustment - old version	371
1.28	Removing and installing four-way lumbar support (new version) - vehicles up to 11/2006	372
1.29	Removing and installing control motors for lumbar support adjustment - new version	375
1.30	Removing and installing head restraints with slide-in locking mechanism	376
1.31	Removing and installing rear footwell light	377
1.32	Exploded view of front seat (standard seat) without active head restraint system - vehicles from 11/2006 onwards	377
1.33	Backrest without active head restraint system - removing and installing head restraint	378
1.34	Backrest without active head restraint system - removing and installing backrest cover panel	378
1.35	Backrest without active head restraint system - removing and installing four-way lumbar support	378
1.36	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	378
1.37	Backrest without active head restraint system - removing and installing head restraint guides	378
1.38	Backrest without active head restraint system - removing and installing cover with padding	378
1.39	Backrest without active head restraint system - detaching cover from padding	378
2	Front seat (memory seat, seat with electric adjustment)	379
2.1	Removing and installing front seat (seat with seat memory, seat with electric adjustment)	379
2.2	Removing front seat if control unit or seat longitudinal adjustment motor are defective	381
2.3	Unplugging connectors	384
2.4	Connecting airbag adapter VAS 6036	385
2.5	Connector assignment at connector point	387
2.6	Exploded view of modular wire routing - vehicles from 07/2006 onwards	387
2.7	Modular wire routing versions	387
2.8	Modular wire routing with corrugated tube on front seat	387
2.9	Removing and installing seat rail covers	387
2.10	Removing and installing front seat backrest	388
2.11	Removing and installing retaining plate for DVD player	392
2.12	Removing and installing side trim (sill side)	392
2.13	Removing and installing side trim (tunnel side)	395
2.14	Renewing backrest	397
2.15	Renewing seat pan	397
2.16	Removing and installing seat adjustment switch	398
2.17	Removing and installing four-way lumbar support switch	399
2.18	Removing and installing seat adjustment control unit with memory function	400
2.19	Removing and installing seat longitudinal adjustment motor	402
2.20	Exploded view - seat height adjustment motor	403
2.21	Removing and installing seat height adjustment motor V245 / V246	403
2.22	Removing and installing seat rake adjustment motor	407
2.23	Removing and installing drawer - vehicles up to 06/2006	409
2.24	Exploded view of storage compartment (passenger side)	411
2.25	Removing and installing storage compartment	411
2.26	Exploded view of storage compartment components	411
2.27	Dismantling and assembling storage compartment	411
2.28	Removing and installing seat depth adjuster (sports seat)	411
2.29	Removing and installing backrest adjustment motor	412
2.30	Removing and installing backrest cover panel	417
2.31	Removing and installing four-way lumbar support - old version	418
2.32	Removing and installing lumbar support height adjustment motors - old version	420
2.33	Removing and installing four-way lumbar support (new version) - vehicles up to 11/2006	422
2.34	Removing and installing control motors for lumbar support adjustment - new version	425
2.35	Removing and installing head restraint with slide-in locking mechanism	426



2.36	Removing and installing rear footwell light	427
2.37	Exploded view of seat pan	427
2.38	Dismantling and assembling seat pan	429
2.39	Removing and installing spring mat with wiring harness for seat pan	431
2.40	Wiring assignment for seat	433
2.41	Wiring assignment for backrest	434
2.42	Removing and installing wiring harness for backrest	434
2.43	Exploded view - front seat (memory seat, seat with electric adjustment) without active head restraint system - vehicles from 11/2006 onwards	436
2.44	Backrest without active head restraint system - removing and installing head restraint ..	437
2.45	Backrest without active head restraint system - removing and installing backrest cover panel	437
2.46	Backrest without active head restraint system - removing and installing four-way lumbar support	437
2.47	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	440
2.48	Backrest without active head restraint system - removing and installing head restraint guides	441
2.49	Backrest without active head restraint system - removing and installing cover with padding	441
2.50	Backrest without active head restraint system - detaching cover from padding	441
3	S6 front seat (memory seat, seat with electric adjustment)	442
3.1	Moving front seat to service position	442
3.2	Attaching front seat to seat repair stand VAS 6136	443
3.3	Exploded view - front seat	444
3.4	Removing and installing front seat	446
3.5	Removing front seat if control unit or seat longitudinal adjustment motor V288 are defective	449
3.6	Unplugging and plugging in connectors	452
3.7	Connecting airbag adapter	455
3.8	Connector point connectors	458
3.9	Exploded view of modular wire routing	458
3.10	Modular wire routing versions	458
3.11	Modular wire routing with corrugated tube on front seat	458
3.12	Removing and installing spindle covers and seat rail covers	458
3.13	Exploded view of trim (sill side and tunnel side)	460
3.14	Removing and installing trim and assembly cover (sill side)	462
3.15	Removing and installing trim (tunnel side)	466
3.16	Exploded view of retaining brackets for trim (sill side)	467
3.17	Removing and installing retaining bracket (front)	469
3.18	Removing and installing retaining bracket (rear)	470
3.19	Removing and installing retaining bracket (top)	471
3.20	Exploded view of seat and backrest adjustment actuators	472
3.21	Removing and installing seat adjustment actuator	473
3.22	Removing and installing backrest adjustment actuator	474
3.23	Exploded view of front seat backrest	475
3.24	Removing and installing front seat backrest	476
3.25	Exploded view of backrest cover panel	477
3.26	Removing and installing backrest cover panel	478
3.27	Exploded view of four-way lumbar support	481
3.28	Removing and installing four-way lumbar support	482
3.29	Exploded view of head restraints	485
3.30	Removing and installing padding with head restraint with slide-in locking mechanism	486
3.31	Removing and installing head restraint guides without and with release button	487
3.32	Exploded view of seat pan	488
3.33	Dismantling and assembling seat pan	490
3.34	Removing and installing spring mat with wiring harness for seat pan	493

3.35	Removing and installing wiring harness for backrest	493
3.36	Exploded view - storage compartment / drawer	493
3.37	Removing and installing storage compartment / drawer	493
3.38	Removing and installing footwell light	493
3.39	Exploded view of seat depth adjuster	493
3.40	Removing and installing seat depth adjuster	494
3.41	Removing and installing trim	495
3.42	Removing and installing handle	496
3.43	Overview of electrical and electronic components	497
3.44	Exploded view - seat rake adjustment motor V243 / V244	499
3.45	Removing and installing seat rake adjustment motor V243 / V244	500
3.46	Exploded view of seat longitudinal adjustment motor V288	501
3.47	Removing and installing seat longitudinal adjustment motor V288	502
3.48	Exploded view of backrest adjustment motor V45 / V46	504
3.49	Removing and installing backrest adjustment motor V45 / V46	504
3.50	Exploded view - lumbar support longitudinal and height adjustment motors	507
3.51	Removing and installing lumbar support longitudinal adjustment motor V125 / V126	508
3.52	Removing and installing lumbar support height adjustment motor V129 / V130	510
3.53	Exploded view - seat height adjustment motor	512
3.54	Removing and installing seat height adjustment motor V245 / V246	513
3.55	Removing and installing toothed segment for seat height adjustment	517
3.56	Exploded view of lumbar support adjustment switch E176 / E177	519
3.57	Removing and installing lumbar support adjustment switch E176 / E177	521
3.58	Exploded view of seat longitudinal adjustment button E418 , rake adjustment button E421 , seat height adjustment button E424 and backrest adjustment button E425	521
3.59	Removing and installing seat longitudinal adjustment button E418 rake adjustment button E421 , seat height adjustment button E424 and backrest adjustment button E425	523
3.60	Exploded view of seat and steering column adjustment control unit with memory J136 / front passenger seat adjustment control unit with memory J521	523
3.61	Removing and installing seat and steering column adjustment control unit with memory J136 / J521	524
4	Bucket seat	527
4.1	Removing and installing seat	527
4.2	Removing and installing seat rail cover	528
4.3	Unplugging and plugging in connectors	529
4.4	Exploded view of side trim panels	529
4.5	Removing and installing outer side trim	530
4.6	Removing and installing backrest adjuster knob	530
4.7	Removing and installing seat height adjuster	531
4.8	Removing and installing side trim (sill side)	531
4.9	Removing and installing side trim (tunnel side)	533
4.10	Removing and installing lumbar support adjustment switch	534
4.11	Removing and installing button for backrest bolster adjustment and button for seat bolster adjustment	535
4.12	Removing and installing control unit	536
4.13	Exploded view of backrest and seat pan	537
4.14	Removing and installing seat pan	538
4.15	Removing and installing backrest	540
4.16	Removing and installing operating cable for seat longitudinal adjustment	541
4.17	Exploded view - seat height adjustment unit	543
4.18	Removing and installing seat height adjuster lever	544
4.19	Removing and installing seat height adjustment unit	544
4.20	Removing and installing backrest cover panels	546
4.21	Pneumatic block - allocation of components	548
5	Rear seats	551
5.1	Removing and installing seat bench	551
5.2	Removing and installing 1/3 section of backrest (left-side)	552

5.3	Removing and installing 2/3 section of backrest (right-side)	554
5.4	Removing cover and clamp from centre bracket	555
5.5	Removing and installing side padding for rear seat	556
5.6	Items to be checked following complete assembly of backrest	558
5.7	Removing and installing lock unit	558
5.8	Removing and installing centre armrest (split backrest)	558
5.9	Removing and installing hinge trim (inside)	560
5.10	Removing and installing centre bracket	560
5.11	Removing and installing outer fitting for rear seat backrest	560
5.12	Removing head restraints	560
5.13	Removing and installing head restraints with slide-in locking mechanism	561
5.14	Removing and installing head restraints without slide-in locking mechanism	562
5.15	Removing and installing fixed rear seat backrest	562
5.16	Removing and installing centre armrest (fixed rear seat backrest)	564
5.17	Removing and installing cup holder	564
5.18	Removing and installing centre armrest trim panel (rear)	565
74 - Seat - padding, covers	566	
1	Covers and padding for seat pan (front)	566
1.1	Removing and installing seat pan cover and padding (standard seat)	566
1.2	Removing and installing seat pan cover and padding (sports seat)	568
1.3	Removing and installing backrest cover and padding	573
1.4	Removing and installing seat heating element	577
1.5	Removing and installing seat heating element (sports seat)	577
1.6	Removing and installing backrest heating element	578
1.7	Removing and installing cover and padding for head restraint with slide-in locking mechanism	578
2	Covers and padding on front seats (seat with seat memory, seat with electric adjustment)	580
2.1	Removing and installing seat pan cover and padding (standard seat)	580
2.2	Removing and installing seat pan cover and padding (sports seat)	582
2.3	Removing and installing backrest cover and padding (sports seat, standard seat)	587
2.4	Removing and installing head restraint guides	590
2.5	Removing and installing seat heating element (standard seat)	592
2.6	Removing and installing seat heating element (sports seat)	592
2.7	Removing and installing backrest heating element	593
2.8	Removing and installing cover and padding for head restraint with slide-in locking mechanism	593
3	Covers and padding on S6 front seats (seat with seat memory, seat with electric adjustment)	594
3.1	Exploded view of seat pan cover and padding	594
3.2	Removing and installing seat pan cover and padding	595
3.3	Detaching cover from padding and assembling (seat pan)	597
3.4	Exploded view of cover and padding/head restraint for backrest	598
3.5	Removing and installing backrest cover and padding	599
3.6	Detaching seat cover from padding (backrest)	603
3.7	Overview - seat heating element	603
3.8	Removing and installing seat heating element	604
3.9	Overview - backrest heating element	605
3.10	Removing and installing backrest heating element	606
4	Seat covers and padding for bucket seats	608
4.1	Removing and installing seat pan cover and padding	608
4.2	Removing and installing backrest cover and padding	609
4.3	Removing and installing seat heating element	611
4.4	Removing and installing backrest heating element	612
5	Covers and padding on rear seats	613

5.1	Removing and installing seat bench cover and padding	613
5.2	Removing and installing cover and padding - fixed rear seat backrest	614
5.3	Removing and installing cover and padding for split rear seat backrest	615
5.4	Removing and installing outer head restraint guides without slide-in locking mechanism ..	619
5.5	Removing and installing inner head restraint guides without slide-in locking mechanism ..	620
5.6	Removing and installing frame for load-through hatch (folding rear seat backrest)	621
5.7	Removing and installing load-through hatch (folding rear seat backrest)	622
5.8	Making cut-out for load-through hatch in seat cover (folding rear seat backrest)	622
5.9	Removing and installing load-through hatch and frame for load-through hatch (fixed rear seat backrest)	622
5.10	Retrofitting load-through hatch (fixed rear seat backrest)	623