

Contents

00 - Technical data	1
1 Contact corrosion	1
50 - Body - front	2
1 Body - front	2
1.1 Lock carrier service position	2
1.2 Removing and installing lock carrier with attachments	3
1.3 Removing and installing cowl panel trim	8
1.4 Removing and installing cross brace (body brace)	8
1.5 Exploded view - wing	9
1.6 Exploded view - noise insulation	10
55 - Bonnet, rear lid	13
1 Bonnet	13
1.1 Removing and installing bonnet, adjusting bonnet	13
1.2 Panel gaps for bonnet	16
1.3 Lining for bonnet	17
1.4 Bonnet seal	18
1.5 Removing and installing bonnet release cable	19
2 Rear lid - saloon	20
2.1 Removing and installing rear lid	20
2.2 Adjusting rear lid	21
2.3 Rear lid lock and handle trim	23
2.4 Removing and installing rear lid lock	24
2.5 Removing and installing handle trim	24
2.6 Removing and installing rear lid lock cylinder	26
2.7 Removing and installing rear lid hinge	26
2.8 Installing rear lid seal	30
2.9 Adjusting stop buffers	30
3 Rear lid - Avant	31
3.1 Removing and installing rear lid	31
3.2 Adjusting rear lid	32
3.3 Removing and installing rear lid hinge	37
3.4 Removing and installing rear lid drive unit	40
3.5 Removing and installing gas strut for rear lid	44
3.6 Removing and installing rear lid lock	45
3.7 Removing and installing handle trim	46
3.8 Removing and installing seal for rear lid	47
4 Tank flap	48
4.1 Removing and installing tank flap	48
4.2 Tank flap unit	50
57 - Front doors, door components, central locking	51
1 Front door	51
1.1 Removing and installing door	51
1.2 Removing and installing window frame and window regulator	52
1.3 Renewing seal for window frame	55
1.4 Removing window regulator and door window	57
1.5 Removing and installing outer door seal	59
1.6 Removing and installing window regulator motor	59
1.7 Removing and installing power latching system	60
1.8 Checking door adjustment with template T40038/4	61
1.9 Adjusting front door	64



1.10	Adjustment dimensions for front door window frame	67
1.11	Front door handle and door lock	68
1.12	Removing door handle	70
1.13	Removing door lock	73
2	Security door (front)	75
2.1	Exploded view - window frame, door window, front door	75
2.2	Exploded view - reinforcements for front door	77
2.3	Removing and installing window frame	79
2.4	Removing and installing window regulator	79
2.5	Removing and installing exterior mirror	80
2.6	Removing and installing door window	81
2.7	Removing and installing window regulator motor	82
2.8	Removing and installing cover for grip moulding	82
2.9	Removing and installing reinforcement for door anchorage (rear)	83
2.10	Removing and installing rear reinforcement for front door	83
2.11	Removing and installing reinforcement for hinge cover	85
2.12	Removing and installing front reinforcement for front door	85
2.13	Removing and installing reinforcement for door anchorage	86
3	Central locking system	88
3.1	Removing and installing convenience system central control unit J393	91
3.2	Servicing central locking system	92
58	Rear doors, door components	93
1	Rear door	93
1.1	Removing and installing door	93
1.2	Removing and installing window frame and window regulator	94
1.3	Removing window regulator and door window	97
1.4	Renewing seal for window frame	99
1.5	Removing and installing outer door seal	100
1.6	Removing and installing window regulator motor	101
1.7	Removing and installing power latching system	102
1.8	Checking door adjustment	103
1.9	Adjusting door	106
1.10	Adjustment dimensions for window frame	108
1.11	Rear door handle and door lock	110
1.12	Removing door handle	111
1.13	Removing rear door lock	113
2	Security door (rear)	114
2.1	Exploded view - window frame, door window, rear door	114
2.2	Exploded view - reinforcements for rear door	115
2.3	Removing and installing window frame with door window	116
2.4	Removing and installing door window	117
2.5	Removing and installing triangular trim	118
2.6	Removing and installing rear reinforcement for door anchorage	119
2.7	Removing and installing rear reinforcement for rear door	119
2.8	Removing and installing reinforcement for hinge cover	121
2.9	Removing and installing front reinforcement for rear door	121
2.10	Removing and installing reinforcement for door anchorage	122
60	Sunroof	124
1	Removing and installing sunroof	124
1.1	Exploded view - sliding/tilting sunroof	124
1.2	Removing and installing wind deflector	125
1.3	Removing and installing sliding sunroof motor	126
1.4	Checking zero position for sliding/tilting sunroof	129

1.5	Adjusting zero position for sliding/tilting sunroof	130
1.6	Removing and installing trim for slotted guide	131
1.7	Removing and installing sunroof panel	133
1.8	Adjusting sliding sunroof panel	133
1.9	Removing and installing seal for glass sunroof panel	134
1.10	Removing and installing sliding headliner	134
1.11	Removing and installing frame for sunroof operation	137
2	Water drain hoses	139
2.1	Cleaning water drain hoses	141
63	- Bumpers	142
1	Bumper (front)	142
1.1	Removing and installing bumper (front)	142
1.2	Removing and installing lock carrier cover	145
1.3	Removing and installing number plate carrier	145
1.4	Removing and installing radiator grille	146
1.5	Removing and installing cover on vehicles with ACC (adaptive cruise control)	146
1.6	Removing and installing air intake grille	147
1.7	Removing and installing bumper (front)	147
1.8	Removing and installing impact dampers	149
1.9	Removing front guide	150
2	Bumper (rear)	151
2.1	Removing and installing bumper cover	151
2.2	Removing and installing guide	156
2.3	Removing and installing cross member for bumper	156
2.4	Removing and installing cross member for bumper (country-specific version)	157
2.5	Removing and installing cross member for bumper - vehicles with towing bracket	158
2.6	Cable for towing bracket	160
64	- Glazing	162
1	Flush-bonded windows	162
1.1	Removing and installing flush-bonded windows	162
1.2	Materials	165
1.3	Repairing windscreen using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	166
1.4	Minimum drying times	166
1.5	Re-sealing windows	167
1.6	Exploded view - windscreen	167
1.7	Renewing trim section	168
1.8	Bonding on trim section	169
1.9	Removing and installing rain and light sensor G397	170
1.10	Removing and installing windscreen	172
1.11	Exploded view - side window (saloon)	178
1.12	Removing undamaged window	180
1.13	Removing damaged window	181
1.14	Installing side window	181
1.15	Exploded view - rear window (saloon)	182
1.16	Removing and installing rear window	184
1.17	Exploded view - side window (Avant)	191
1.18	Removing and installing side window	194
1.19	Exploded view - rear window (Avant)	198
1.20	Removing and installing rear window	199
66	- Exterior equipment	206
1	Strips and panels	206
1.1	Removing and installing roof trim strip	206



1.2	Removing and installing window slot trim strips	207
1.3	Removing and installing trim cover for side member	210
1.4	Removing and installing side member trim	214
1.5	Removing and installing trim panel for B-pillar	215
1.6	Panels for allroad	216
1.7	Removing and installing trim strip for side window	218
1.8	Renewing outer sill panel trim	219
1.9	Removing and installing side member trim (RS 6)	220
2	Roof rail	221
2.1	Removing and installing roof rail	221
3	Removing and installing spoiler for rear lid	224
4	Exterior mirrors	227
4.1	Tools	227
4.2	Removing and installing exterior mirror	227
4.3	Installing mirror glass	228
4.4	Removing and installing mirror adjustment motor	228
4.5	Removing and installing mirror housing	229
5	Removing and installing wheel housing liner	230
5.1	Wheel housing liner (front)	230
5.2	Wheel housing liner (rear)	231
6	Model emblems	233
6.1	Saloon	233
6.2	Avant	237