

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	6
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	7
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	7
3.10 Moulded foam inserts	8
3.11 Bonded joints	9
3.12 Extra-high-strength body panels	15
3.13 Aluminium panels	16
3.14 Matching the surface contour	17
3.15 Laser welding	18
3.16 Corrosion protection	18
4 Vehicle identification data	20
4.1 Type plate and vehicle identification number	20
4.2 Vehicle data sticker	20
5 Processing body structure adhesive D 180 004 M2	21
5.1 Preparing bonding surfaces	22
6 Using edge milling unit -VAS 882 005-	36
6.1 General information	36
6.2 Assembling unit/changing milling tool	39
6.3 Separating flanged edges	49
6.4 Separating panels at corners and along surfaces	55
6.5 Separating outer edges	58
6.6 Roof - Renewal	61
6.7 Separating laser weld seams using round head milling unit	63
6.8 Aluminium panels	65
7 Body panel gaps/shut lines	68
8 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	73
9 Body dimensions	75
9.1 Floor group, front	75
9.2 Floor group, centre	76
9.3 Floor group, rear	77
9.4 Body - front	79
9.5 Body - centre	80
9.6 Body - rear	83
9.7 Rear door opening (Avant)	84
9.8 Body - rear (Avant)	85
10 Tools	87



11	Straightening jig	91
11.1	Portal gauge	102
50 - Body - front		107
1	Safety precautions	107
2	Front longitudinal member - Renewal	108
2.1	Tools	108
2.2	Procedure	108
3	Front longitudinal member - Partial renewal	111
3.1	Tools	111
3.2	Procedure	111
4	Upper outer longitudinal member - Renewal	114
4.1	Tools	114
4.2	Procedure	114
5	Upper inner longitudinal member - Renewal	117
5.1	Tools	117
5.2	Procedure	117
6	Impact damper plate - Renewal	120
6.1	Tools	120
6.2	Procedure	120
7	Headlight mounting - Renewal	122
7.1	Tools	122
7.2	Procedure	122
8	Plenum chamber - Renewal	124
8.1	Tools	124
8.2	Procedure	124
51 - Body - centre		127
1	Safety precautions	127
2	Roof - Renewal (Saloon)	128
2.1	Tools	128
2.2	Procedure	129
3	Roof - Renewal (Saloon with tilting sunroof)	145
3.1	Tools	145
3.2	Procedure	146
4	Roof - Renewal (Avant)	162
4.1	Tools	162
4.2	Procedure	163
5	Roof - Renewal (Avant with tilting sunroof)	178
5.1	Tools	178
5.2	Procedure	179
6	Roof side member - Renewal	194
6.1	Tools	194
6.2	Procedure	194
7	Roof side member - Renewal (Avant)	198
7.1	Tools	198
7.2	Procedure	198
8	Roof cross member (front) - Renewal	202
8.1	Tools	202
8.2	Procedure	202
9	Front roof cross member - Renewal (Avant)	204
9.1	Tools	204
9.2	Procedure	204

10	Roof cross member (rear) - Renewal	206
10.1	Tools	206
10.2	Procedure	206
11	Rear roof cross member - Renewal (Avant)	208
11.1	Tools	208
11.2	Procedure	208
12	A-pillar - Renewal	211
12.1	Tools	211
12.2	Procedure	211
13	Outer B-pillar - Renewal	217
13.1	Tools	217
13.2	Procedure	217
14	Outer side member - Renewal	223
14.1	Tools	223
14.2	Procedure	223
15	Side member with extrusion profile (aluminium) and inner B-pillar - Renewal	226
15.1	Tools	226
15.2	Procedure	226
53 - Body - rear		233
1	Safety precautions	233
2	Rear upper cross panel - Renewal	234
2.1	Tools	234
2.2	Procedure	234
3	Rear upper cross panel - Renewal (Avant)	238
3.1	Tools	238
3.2	Procedure	238
4	Inner cross panel - Renewal	242
4.1	Tools	242
4.2	Procedure	242
5	Inner cross panel - Renewal (Avant)	246
5.1	Tools	246
5.2	Procedure	246
6	Lower cross panel - Renewal	250
6.1	Tools	250
6.2	Procedure	250
7	Lower cross panel - Renewal (Avant)	254
7.1	Tools	254
7.2	Procedure	254
8	Rear wheel housing - Partial renewal	258
8.1	Tools	258
8.2	Procedure	258
9	Rear wheel housing - Partial renewal (Avant)	263
9.1	Tools	263
9.2	Procedure	263
10	Tail light mounting - Renewal	268
10.1	Tools	268
10.2	Procedure	268
11	Tail light mounting - Renewal (Avant)	272
11.1	Tools	272
11.2	Procedure	272
12	Side panel - Renewal	276
12.1	Tools	276



12.2	Procedure	277
13	Side panel - Renewal (Avant)	284
13.1	Tools	284
13.2	Procedure	285
14	Rear longitudinal member - Partial renewal	292
14.1	Tools	292
14.2	Procedure	292
15	Spare wheel well - Renewal	298
15.1	Tools	298
15.2	Procedure	298