

Contents

87 - Air conditioning system	1
1 Safety measures for working on vehicles with air conditioning and for handling refrigerant	1
1.1 Safety measures	1
1.2 Discharging the refrigerant circuit	2
1.3 Working on refrigerant circuit	2
1.4 Paintwork repairs on vehicles with air conditioner	3
1.5 Further information on working on the air conditioner	3
2 Notes on general repairs	4
2.1 Contact corrosion	4
2.2 Note for vehicles with auxiliary heater (poor heating output)	5
3 Servicing refrigerant circuit	6
3.1 Overview of components	6
3.2 Removing and installing refrigerant pressure and temperature sender G395	9
3.3 O-rings for refrigerant circuit	10
3.4 Detaching and attaching compressor (with pulley) at bracket	11
3.5 Checking cut-in signal for air conditioner compressor regulating valve N280	12
4 Renewing compressor pulley	16
4.1 Renewing pulley	16
4.2 Detaching and attaching pulley at compressor	17
5 Control components of air conditioner (not located in passenger compartment)	21
5.1 Components not located in passenger compartment	22
5.2 Layout - components of air intake unit	25
5.3 Removing and installing air quality sensor G238	28
5.4 Operation of air quality sensor G238	28
5.5 Checking air quality sensor G238	30
5.6 Checking ventilation frame	33
5.7 Checking, cleaning, removing and installing plenum chamber water drain	34
5.8 Removing and installing upper cover of air intake unit	36
5.9 Removing and installing air flow flap control motor V71 with potentiometer G113	37
5.10 Preparing adapter cables for activation of control motor	40
5.11 Removing and installing fresh air intake duct temperature sensor G89	40
5.12 Removing and installing fresh air blower control unit J126	41
5.13 Removing and installing fresh air blower V2	42
5.14 Removing and installing air recirculation flap control motor V113	44
5.15 Removing and installing cover with air intake unit flap	47
5.16 Removing and installing grille in front of fresh-air intake	49
5.17 Removing and installing air intake unit	49
5.18 Operation of solar roof	54
6 Dismantling and assembling air intake unit	59
6.1 Components fitted in air intake unit	59
6.2 Removing and installing air flaps of air intake unit	61
6.3 Distinguishing features of air intake unit versions "1" and "2"	63
7 Incorporation of air conditioning unit into engine coolant circuit	65
7.1 Incorporation of air conditioning unit in coolant circuit on left-hand drive vehicles	65
7.2 Incorporation of air conditioning unit in coolant circuit in right-hand drive vehicles	67
7.3 Removing and installing pump valve unit	68
8 Heated windscreens	72
8.1 Operation of heated windscreens	73
9 Control components of air conditioner (in passenger compartment)	75
9.1 Air conditioner components located in passenger compartment (viewed from left side)	76
9.2 Air conditioner components located in passenger compartment (viewed from right side)	80

9.3	Components of air conditioning unit	83
9.4	Removing and installing dust and pollen filter	88
9.5	Dust and pollen filter with activated charcoal filter insert	91
9.6	Cleaning air conditioner evaporator	92
9.7	Removing and installing sunlight penetration photosensor G107	96
9.8	Removing and installing temperature sensor blower V42	96
9.9	Removing and installing operating and display unit (Climatronic control unit J255)	96
9.10	Checking, removing and installing condensation drain hose	105
10	Checking electrical components activated by air conditioner	108
10.1	Checking heated rear window Z1	109
10.2	Checking heated seats	111
10.3	Checking supplementary air heater element Z35 (vehicles with diesel engine)	112
10.4	Checking actuation of heated windscreen Z2	113
10.5	Checking "Solar mode" function on vehicles with sun roof with solar cells	114
11	Removing and installing electrical components of air conditioning unit (with air conditioning unit in position)	115
11.1	Removing and installing centre vent control motor V102	116
11.2	Removing and installing defroster flap control motor V107	118
11.3	Removing and installing left footwell flap control motor V108	120
11.4	Removing and installing right footwell flap control motor V109 (or left footwell flap control motor V108)	123
11.5	Removing and installing rear footwell vent control motor V112	125
11.6	Removing and installing front cold air flap control motor V197	127
11.7	Removing and installing indirect ventilation flap control motor V213	130
11.8	Removing and installing front left chest vent control motor V237 (air conditioner of "Convenience" type)	132
11.9	Removing and installing front right chest vent control motor V238 (or front left chest vent control motor V237)	135
11.10	Removing and installing left vent temperature sender G150	138
11.11	Removing and installing right vent temperature sender G151	139
11.12	Removing and installing centre vent temperature sender G191	140
11.13	Removing and installing evaporator output temperature sender G263	141
11.14	Removing and installing supplementary air heater element Z35	142
12	Removing and installing heat exchanger of air conditioning unit	145
12.1	Preparations for removing heat exchanger	145
12.2	Removing and installing heat exchanger	148
13	Block diagram of air distribution and air routing in air conditioning unit and air intake unit	153
13.1	Air inlets and vent outlets of air conditioning unit	153
13.2	Air routing in air intake unit and air conditioning unit	154
13.3	Routing of air flow and air distribution in passenger compartment	155
14	Checking cooling output of air conditioner	158
14.1	Test requirements:	158
14.2	Checking cooling output	159
14.3	Fault Finding if results do not match specifications	165
14.4	Fault Finding if temperature increases downstream of evaporator	167
15	Checking heating output of air conditioner and operation of pump valve unit	169
15.1	Checking operation of pump valve unit	169
16	Servicing refrigerant circuit	172
16.1	Servicing refrigerant circuit	172
16.2	Removing and installing refrigerant lines at compressor	177
16.3	Removing and installing compressor (vehicles with 4 or 6-cyl. engine)	180
16.4	Removing and installing compressor (vehicles with 8-cyl. engine)	182
16.5	Removing and installing compressor on vehicles with 10-cyl. engine (Audi S6 and RS6)	191
16.6	Checking/replacing compressor drive unit	202

16.7	Unfastening and tightening compressor drive shaft	204
16.8	Removing and installing compressor drive shaft	205
16.9	Detaching and attaching drive plate with overload protection device	205
16.10	Checking concentricity of drive plate with overload protection device / adjusting	206
16.11	Removing and installing drive plate on compressor	206
16.12	Removing and installing drive plate with roller bearing	207
16.13	Detaching and attaching refrigerant lines at condenser	208
16.14	Removing and installing condenser	211
16.15	Removing and installing restrictor	214
16.16	Removing and installing refrigerant lines	215
16.17	Removing and installing reservoir	221
16.18	Detaching refrigerant pipes from air conditioning unit/attaching	223
16.19	Removing and installing evaporator	225
16.20	Capacities	233
16.21	Starting up air conditioner after charging refrigerant circuit	234
17	Removing and installing air conditioning unit	236
17.1	Preparation for removing air conditioning unit	236
17.2	Removing air conditioning unit	238
17.3	Installing air conditioning unit	240
18	Dismantling and assembling air conditioning unit	243
18.1	Dismantling and assembling air conditioning unit	244
18.2	Dismantling and assembling housing for evaporator and heat exchanger	246
18.3	Detaching electrical components and corresponding connecting elements from air distribution housing/re-attaching	248
18.4	Removing and installing connecting elements to the various air conditioning unit flaps	252
18.5	Connection between left and right footwell flap with air conditioning unit of "Basic" type	254
18.6	Connection between left and right chest vent flap with air conditioning unit of "Basic" type	254