

## Contents

<b>82</b>	<b>Auxiliary heating</b> .....	<b>1</b>
1	<b>Repair Auxiliary heating</b> .....	1
1.1	General information on auxiliary heater .....	1
1.2	Notes on Auxiliary heating .....	2
1.3	Notes on operation of auxiliary heater with biodiesel (vehicles with diesel engine only) ..	3
2	<b>Safety precautions when working on vehicles fitted with auxiliary heater</b> .....	5
3	<b>Notes on general repair work on vehicles fitted with auxiliary heater</b> .....	6
4	<b>Rules for cleanliness when working on auxiliary heater (and fuel system)</b> .....	8
5	<b>Layout of components for auxiliary heater in vehicle</b> .....	9
5.1	Buttons and indicator lamps of auxiliary heater remote control .....	18
5.2	Checking and replacing batteries in auxiliary heater remote control hand transmitter .....	20
5.3	Adaption of remote control hand transmitter in auxiliary heater control unit J364 .....	20
5.4	Activating/deactivating auxiliary heater/auxiliary ventilation via Multi Media Interface (MMI) .....	21
6	<b>Diverting fuel for auxiliary heater</b> .....	29
6.1	Components for diverting fuel for auxiliary heater .....	30
6.2	Routing of auxiliary heater fuel-diverting hose in fuel delivery unit .....	35
6.3	Removing and installing metering pump V54 .....	37
6.4	Checking operation of fuel shut-off valve N109 .....	39
6.5	Routing the fuel pipe to the auxiliary heater .....	40
6.6	Checking fuel delivery of metering pump V54 .....	42
7	<b>Checking and adjusting CO2 content in auxiliary heater exhaust gas</b> .....	53
7.1	Checking CO2 content in auxiliary heater exhaust gas .....	53
7.2	Adjusting CO2 content in auxiliary heater exhaust gas .....	58
7.3	Checking electrical connections to auxiliary heater and circulation pump V55 .....	64
7.4	Checking auxiliary heater components .....	71
8	<b>Functional description of auxiliary heater</b> .....	79
8.1	Functional description of auxiliary heater .....	81
8.2	Control sequence when starting the auxiliary heater (also as additional heater) .....	90
8.3	Auxiliary heater control sequence on load change (from full to part-load mode and vice versa) .....	94
8.4	Control sequence on shutoff of auxiliary heater .....	97
8.5	Auxiliary heater temperature control curve .....	98
9	<b>Incorporation of auxiliary heater into coolant circuit</b> .....	100
9.1	Incorporation of auxiliary heater on vehicles with heater coolant shutoff valve N279 .....	100
9.2	Operation and actuation of heater coolant shutoff valve N279 .....	102
9.3	Removing and installing heater coolant shutoff valve N279 .....	104
9.4	Actuation of circulation pump V55 in auxiliary heating mode .....	108
9.5	Bleeding coolant circuit .....	109
10	<b>Removing and installing auxiliary heater</b> .....	111
10.1	Removing and installing auxiliary heater (all models except Audi S6) .....	111
10.2	Removing and installing auxiliary heater (Audi S6) .....	115
11	<b>Dismantling and assembling auxiliary heater</b> .....	121
11.1	Detaching add-on components from auxiliary heater/re-attaching (all models except Audi S6) .....	121
11.2	Detaching add-on components from auxiliary heater/re-attaching (Audi S6) .....	127
11.3	Dismantling and assembling auxiliary heater .....	135
11.4	Design of auxiliary heater control unit J364 and combustion air blower V6 .....	139
11.5	Checking installation position of glow plug with flame monitor Q8 .....	140
11.6	Attaching connection for coolant hoses to auxiliary heater .....	141
11.7	Removing and installing combustion air intake pipe .....	141
11.8	Assembling burner housing with heat exchanger and outer casing .....	142



11.9	Assembling auxiliary heater control unit J364 and burner element	142
11.10	Removing and installing overheating fuse S24 / overheating sensor G189 and temperature sensor G18	144
<b>12</b>	<b>Auxiliary heater block diagram.</b>	<b>146</b>
12.1	Assignment of connector console at auxiliary heater control unit J364	146
<b>13</b>	<b>Activating auxiliary heater with remote control</b>	<b>149</b>
13.1	Block diagram for actuation of auxiliary heater with remote control	149
13.2	Removing and installing auxiliary heating radio controlled receiver R64	153
13.3	Removing and installing aerial module (Saloon)	154