

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code letters, allocation, transmission ratios, capacities	1
2 Transmission layout	4
3 Calculating ratio "i"	6
4 General repair instructions	7
4.1 Special tools	7
4.2 Components	7
30 - Clutch	12
1 Servicing clutch mechanism	12
1.1 Exploded view - pedal cluster (LHD vehicles)	13
1.2 Removing and installing over-centre spring	14
1.3 Removing and installing clutch pedal switch for engine start F194	15
1.4 Removing and installing clutch position sender G476	16
1.5 Exploded view - pedal cluster (RHD vehicles)	17
1.6 Exploded view - hydraulic system	19
1.7 Notes on removing and installing clutch master cylinder and slave cylinder	20
1.8 Function check for clutch master cylinder and slave cylinder	20
1.9 Removing and installing clutch master cylinder	22
1.10 Bleeding clutch system	24
2 Servicing clutch release mechanism	26
2.1 Checking release bearing	29
2.2 Removing and installing clutch slave cylinder	30
3 Servicing clutch	35
3.1 Exploded view - servicing conventional clutch	35
3.2 Removing and installing conventional clutch	38
3.3 Exploded view - servicing clutch with SAC pressure plate (LuK version)	39
3.4 Removing and installing clutch with SAC pressure plate	41
3.5 Resetting adjuster ring in SAC clutch pressure plate	43
34 - Controls, housing	46
1 Servicing selector mechanism	46
1.1 Installation position of selector mechanism	46
1.2 Exploded view - selector mechanism	47
1.3 Removing and installing gear knob with gear lever boot	49
1.4 Removing and installing selector mechanism	50
1.5 Adjusting selector mechanism	54
2 Removing and installing gearbox	57
2.1 Removing gearbox - vehicles with 2.0 ltr. TFSI engine	57
2.2 Installing gearbox in vehicles with 2.0 ltr. TFSI engine	64
2.3 Removing gearbox in vehicles with 2.0 ltr. TDI engine	68
2.4 Installing gearbox - vehicles with 2.0 ltr. TDI engine	75
2.5 Removing gearbox in vehicles with V6 petrol engine	79
2.6 Installing gearbox in vehicles with V6 petrol engine	89
2.7 Transporting gearbox	93
3 Exploded view - tunnel cross member, gearbox mounting and gearbox support	95
3.1 Removing and installing tunnel cross member, gearbox mounting and gearbox support ..	95
4 Checking oil level in manual gearbox	98
5 Mounting gearbox on assembly stand	100
6 Dismantling and assembling gearbox	102



6.1	General layout of gearbox	102
6.2	Exploded view	103
6.3	Exploded view - removing and installing ball bearing for input shaft, gearbox cover, bearing housing and selector shaft	103
6.4	Exploded view - removing and installing 3rd to 6th gear	106
6.5	Exploded view - removing and installing input shaft, output shaft, reverse gear wheel and reverse selector gear	108
7	Assembly sequence - dismantling and assembling gearbox	111
7.1	Dismantling gearbox	111
7.2	Assembling gearbox	123
8	Servicing gearbox cover	133
9	Servicing bearing housing	138
10	Servicing gearbox housing	144
11	Servicing selector shaft	151
11.1	Removing and installing selector shaft with gearbox installed	151
11.2	Renewing oil seal for selector shaft (with gearbox installed in vehicle)	154
11.3	Renewing oil seal for selector shaft with gearbox removed (gearbox remains assembled)	156
11.4	Removing and installing reversing light switch F4	158
35 - Gears, shafts		160
1	Dismantling and assembling input shaft	160
1.1	Exploded view - input shaft	160
1.2	Dismantling and assembling input shaft	163
1.3	Adjusting input shaft	164
2	Pinion shaft (output shaft)	169
2.1	Exploded view - pinion shaft (output shaft)	169
2.2	Dismantling and assembling pinion shaft (output shaft)	172
39 - Final drive - differential		184
1	Renewing oil seals for flange shaft	184
1.1	Renewing oil seal for flange shaft (left-side)	184
1.2	Renewing oil seal for flange shaft (right-side)	187
2	Removing and installing differential	192
3	Dismantling and assembling differential	195
4	Adjusting pinion shaft (output shaft) and crown wheel	202
4.1	Adjustment and marking of final drive gear set	202
4.2	Position of shims	204
4.3	Table of adjustments	204
4.4	Recommended sequence for adjusting gear set	205
4.5	Adjusting pinion shaft (output shaft)	205
4.6	Re-determining shim "S4" when renewing bearing housing	214
4.7	Adjusting crown wheel	217