

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code letters, allocation, transmission ratios, capacities	1
2 Identification of rear final drive units 01R, 0AR and 08V	3
2.1 Rear final drive 01R	3
2.2 Rear final drive 0AR	4
2.3 Rear final drive 08V	4
3 Transmission layout	6
4 Calculating ratio "i"	8
5 General repair instructions	9
5.1 Special tools	9
5.2 Components	9
30 - Clutch	15
1 Servicing clutch mechanism	15
1.1 Exploded view - pedal cluster (LHD vehicles)	15
1.2 Removing and installing over-centre spring	17
1.3 Clutch pedal switch for engine start F194	17
1.4 Removing and installing clutch position sender G476	19
1.5 Exploded view - pedal cluster (RHD vehicles)	20
1.6 Exploded view - hydraulic system	22
1.7 Notes on removing and installing clutch master cylinder and slave cylinder	23
1.8 Function check for clutch master cylinder and slave cylinder	23
1.9 Removing and installing clutch master cylinder	25
1.10 Bleeding clutch system	26
2 Servicing clutch release mechanism	29
2.1 Exploded view - clutch release mechanism	29
2.2 Checking release bearing	32
2.3 Removing and installing clutch slave cylinder	33
3 Servicing clutch	38
3.1 Servicing conventional clutch	38
3.2 Removing and installing conventional clutch	41
3.3 Servicing clutch with SAC pressure plate (LuK version)	42
3.4 Removing and installing clutch with SAC pressure plate	44
3.5 Resetting adjuster ring in SAC clutch pressure plate	46
34 - Controls, housing	49
1 Servicing selector mechanism	49
1.1 Installation position of selector mechanism	49
1.2 Exploded view - selector mechanism	50
1.3 Removing and installing gear knob with gear lever boot	52
1.4 Removing and installing selector mechanism	53
1.5 Adjusting selector mechanism	56
2 Removing and installing gearbox	59
2.1 Removing gearbox on vehicles with 6-cylinder petrol engine	59
2.2 Installing gearbox	68
2.3 Transporting gearbox	73
3 Exploded view - tunnel cross member, gearbox mounting and gearbox support	74
3.1 Removing and installing gearbox mounting and gearbox support	74
4 Checking oil level in manual gearbox	77
5 Mounting gearbox on assembly stand	79



6	Dismantling and assembling gearbox	81
6.1	General layout of gearbox	81
6.2	Exploded view - dismantling and assembling gearbox	82
6.3	Exploded view - removing and installing ball bearing for input shaft, gearbox cover, bearing housing and selector shaft	83
6.4	Exploded view - removing and installing centre differential housing and self-locking centre differential	85
6.5	Exploded view - removing and installing 3rd to 6th gear	86
6.6	Exploded view - removing and installing input shaft, pinion shaft, hollow shaft, reverse gear wheel and reverse selector gear	89
6.7	Assembly sequence - dismantling and assembling gearbox	90
7	Exploded view - dismantling and assembling centre differential housing	114
7.1	Removing and installing centre differential housing and centre differential with gearbox installed	117
7.2	Renewing oil seal and ball bearing for flange shaft (rear)	120
8	Exploded view - servicing gearbox cover	124
9	Exploded view - servicing bearing housing	130
10	Exploded view - servicing gearbox housing	136
11	Removing and installing selector shaft and oil seal for selector shaft	143
11.1	Removing and installing selector shaft with gearbox installed	143
11.2	Renewing oil seal for selector shaft with gearbox installed	146
11.3	Renewing oil seal for selector shaft with gearbox removed (gearbox remains assembled)	149
11.4	Removing and installing reversing light switch F4	151
35 - Gears, shafts		153
1	Input shaft	153
1.1	Exploded view - input shaft	153
1.2	Dismantling and assembling input shaft	155
1.3	Adjusting input shaft	157
2	Pinion shaft and hollow shaft	161
2.1	Exploded view - pinion shaft and hollow shaft	161
2.2	Dismantling and assembling pinion shaft and hollow shaft	165
39 - Final drive - front differential		175
1	Renewing oil seals for flange shafts	175
1.1	Renewing oil seal for flange shaft (left-side)	175
1.2	Renewing oil seal for flange shaft (right-side)	178
2	Differential	182
2.1	Removing and installing differential	182
2.2	Dismantling and assembling differential	185
3	Adjusting pinion shaft and crown wheel	192
3.1	Adjustment and marking of final drive gear set	192
3.2	Position of shims	194
3.3	Table of adjustments	194
3.4	Recommended sequence for adjusting gear set	195
3.5	Adjusting pinion shaft	195
3.6	Re-determining shim "S4" when renewing bearing housing	204
3.7	Adjusting crown wheel	206