

Contents

00	Technical data	1
1	Gearbox identification	1
1.1	Code letters, allocation, transmission ratios, capacities	1
2	Transmission layout	3
3	Calculating ratio "i"	5
4	General repair instructions	6
4.1	Special tools	6
4.2	Gearbox repairs	6
4.3	Components	6
30	Clutch	9
1	Servicing clutch mechanism	9
1.1	Exploded view - pedal cluster (LHD vehicles)	9
1.2	Removing and installing over-centre spring	11
1.3	Removing and installing clutch pedal switch for engine start F194	11
1.4	Removing and installing clutch position sender G476	13
1.5	Exploded view - pedal cluster (RHD vehicles)	14
1.6	Exploded view - hydraulic system	16
1.7	Notes on removing and installing clutch master cylinder and slave cylinder	17
1.8	Function check for clutch master cylinder and slave cylinder	18
1.9	Removing and installing clutch master cylinder	19
1.10	Bleeding clutch system	21
2	Servicing clutch release mechanism	23
2.1	Removing and installing clutch slave cylinder	29
3	Servicing clutch	35
3.1	Servicing clutch with SAC pressure plate (LuK version)	35
3.2	Removing and installing clutch with SAC pressure plate	38
3.3	Resetting adjuster ring in SAC clutch pressure plate	40
34	Controls, housing	43
1	Servicing selector mechanism	43
1.1	Installation position of selector mechanism	43
1.2	Exploded view - selector mechanism	45
1.3	Servicing gear lever and gear lever bearing	46
1.4	Servicing selector rod, connecting rod and push rod	47
1.5	Removing and installing gear knob with boot	48
1.6	Removing and installing selector mechanism	49
1.7	Adjusting selector mechanism	51
2	Removing and installing gearbox	54
2.1	Removing gearbox - vehicles with 2.7 ltr. TDI engine	54
2.2	Installing gearbox - vehicles with 2.7 ltr. TDI engine	63
2.3	Transporting gearbox	66
3	Exploded view - gearbox support, gearbox mounting and tunnel cross member	68
3.1	Removing and installing tunnel cross member	68
3.2	Removing and installing gearbox mounting and gearbox support	71
4	Checking oil level in manual gearbox	72
5	Renewing oil seal for selector shaft with gearbox installed	73
6	Removing and installing reversing light switch F4	78
7	Removing and installing selector shaft locking bushes (with gearbox installed in vehicle)	79
8	Removing and installing selector shaft with gearbox installed	82



9	Dismantling and assembling gearbox	88
35 - Gears, shafts		89
1	Input shaft	89
2	Pinion shaft (output shaft)	90
39 - Final drive - differential		91
1	Renewing flange shaft oil seals (left and right)	91
1.1	Renewing flange shaft oil seal (left-side) with gearbox installed	91
1.2	Renewing oil seal for flange shaft (right-side) with gearbox installed	94
2	Differential	98
2.1	Removing and installing differential	98
2.2	Dismantling and assembling differential	98
3	Adjusting pinion shaft and crown wheel	99