

Contents

00	Technical data	1
1	Gearbox identification	1
1.1	Code letters, allocation, transmission ratios, capacities	1
2	Identification of rear final drive units 01R and 0AR	3
2.1	Rear final drive 01R	3
2.2	Rear final drive 0AR	4
3	Transmission layout	6
4	Calculating ratio "i"	8
5	General repair instructions	9
5.1	Special tools	9
5.2	Components	9
30	Clutch	12
1	Servicing clutch mechanism	12
1.1	Exploded view - pedal cluster (LHD vehicles)	12
1.2	Removing and installing over-centre spring	14
1.3	Removing and installing clutch pedal switch for engine start F194	14
1.4	Removing and installing clutch position sender G476	16
1.5	Exploded view - pedal cluster (RHD vehicles)	17
1.6	Exploded view - hydraulic system	19
1.7	Notes on removing and installing clutch master cylinder and slave cylinder	20
1.8	Function check for clutch master cylinder and slave cylinder	21
1.9	Removing and installing clutch master cylinder	22
1.10	Bleeding clutch system	24
2	Servicing clutch release mechanism	26
2.1	Removing and installing clutch slave cylinder	32
3	Servicing clutch	38
3.1	Servicing clutch with SAC pressure plate (LuK version)	38
3.2	Removing and installing clutch with SAC pressure plate	41
3.3	Resetting adjuster ring in SAC clutch pressure plate	42
34	Controls, housing	45
1	Servicing selector mechanism	45
1.1	Installation position of selector mechanism	45
1.2	Exploded view - selector mechanism	47
1.3	Servicing gear lever and gear lever bearing	48
1.4	Servicing selector rod, connecting rod and push rod	49
1.5	Removing and installing gear knob with boot	50
1.6	Removing and installing selector mechanism	51
1.7	Adjusting selector mechanism	56
2	Removing and installing gearbox	59
2.1	Removing gearbox - vehicles with 3.0 ltr. TDI engine	59
2.2	Installing gearbox - vehicles with 3.0 ltr. TDI engine	68
2.3	Transporting gearbox	72
3	Exploded view - gearbox support, gearbox mounting and tunnel cross member	74
3.1	Removing and installing tunnel cross member	74
3.2	Removing and installing gearbox mounting and gearbox support	77
4	Checking oil level in manual gearbox	78
5	Renewing oil seal for selector shaft with gearbox installed	79
6	Removing and installing reversing light switch F4	83



7	Removing and installing selector shaft locking bushes (with gearbox installed in vehicle)	84
8	Removing and installing selector shaft with gearbox installed	87
9	Exploded view – centre differential and centre differential housing	93
9.1	Removing and installing centre differential housing and centre differential with gearbox installed	93
10	Exploded view - centre differential housing	97
10.1	Renewing oil seal for flange shaft (rear) on gearbox	100
11	Dismantling and assembling gearbox	106
35	Gears, shafts	107
1	Input shaft	107
2	Pinion shaft (output shaft)	108
39	Final drive - front differential	109
1	Renewing flange shaft oil seals (left and right)	109
1.1	Renewing flange shaft oil seal (left-side) with gearbox installed	109
1.2	Renewing oil seal for flange shaft (right-side) with gearbox installed	112
2	Differential	116
2.1	Removing and installing differential	116
2.2	Dismantling and assembling differential	116
3	Adjusting pinion shaft and crown wheel	117