

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
<b>2 General repair instructions</b> .....	<b>3</b>
2.1 Special tools .....	3
2.2 Components .....	3
<b>34 - Controls, housing</b> .....	<b>8</b>
<b>1 Dismantling and assembling gearbox</b> .....	<b>8</b>
1.1 General layout of gearbox .....	8
1.2 Exploded view - dismantling and assembling gearbox .....	10
1.3 Exploded view - removing and installing centre differential housing and centre differential .....	11
1.4 Servicing bearings for centre differential .....	12
1.5 Exploded view - removing and installing gearbox cover and selector shaft .....	15
1.6 Exploded view - removing and installing 1st, 2nd and reverse gear .....	19
1.7 Exploded view - removing and installing input shaft, hollow shaft, pinion shaft and selector rods .....	21
1.8 Assembly sequence - dismantling and assembling gearbox .....	25
1.9 Renewing grooved ball bearing for input shaft with gearbox removed (gearbox remains assembled) .....	46
<b>2 Dismantling and assembling centre differential housing</b> .....	<b>50</b>
<b>3 Servicing gearbox cover</b> .....	<b>56</b>
<b>4 Servicing gearbox housing</b> .....	<b>61</b>
<b>35 - Gears, shafts</b> .....	<b>69</b>
<b>1 Input shaft</b> .....	<b>69</b>
1.1 Exploded view - input shaft .....	69
1.2 Assembly sequence - dismantling and assembling input shaft .....	73
<b>2 Pinion shaft and hollow shaft</b> .....	<b>83</b>
2.1 Exploded view - pinion shaft and hollow shaft .....	83
2.2 Dismantling and assembling pinion shaft .....	87
2.3 Re-determining shim „S5“ for positioning tapered roller bearing inner race .....	91
2.4 Dismantling and assembling hollow shaft .....	92
2.5 Re-determining shim „S6“ for positioning 2nd speed selector gear .....	96
<b>39 - Final drive - front differential</b> .....	<b>99</b>
<b>1 Renewing oil seals for flange shafts</b> .....	<b>99</b>
<b>2 Removing and installing differential</b> .....	<b>100</b>
<b>3 Dismantling and assembling differential</b> .....	<b>104</b>
3.1 Exploded view - differential .....	104
3.2 Dismantling and assembling differential .....	106
<b>4 Adjusting pinion shaft and crown wheel</b> .....	<b>112</b>
4.1 Adjustment and marking of final drive gear set .....	112
4.2 Position of shims .....	115
4.3 Table of adjustments .....	115
4.4 Recommended sequence for adjusting gear set .....	116
4.5 Adjusting pinion shaft .....	116
4.6 Adjusting crown wheel .....	128