

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on "6-speed automatic gearbox 09E"	2
3 Transmission layout	4
4 Code letters, gearbox allocation, transmission ratios, equipment	5
5 Capacities	7
6 Safety precautions	9
7 Notes on tow-starting and towing	10
8 Repair instructions	11
9 Rules for cleanliness when working on the gearbox	15
10 Contact corrosion	16
11 Gearbox adaption for vehicles from model year 2006 onwards	17
32 - Torque converter	19
1 Exploded view - torque converter	19
1.1 Identification of torque converter	19
1.2 Removing and installing torque converter	20
1.3 Draining torque converter	21
1.4 Renewing oil seal for torque converter	22
1.5 Checking torque converter	23
37 - Controls, housing	24
1	24
2 Servicing selector mechanism - exploded view	27
2.1 Checking selector mechanism	28
2.2 Manual release of selector mechanism from position "P"	30
2.3 Removing and installing selector lever lock solenoid N110	31
2.4 Removing and installing selector lever sensors control unit J587 and tiptronic switch F189	32
2.5 Removing and installing gear selector position P switch F305	33
2.6 Removing and installing shift unit	33
3 Selector lever handle, selector lever position display Y26 - exploded view	39
3.1 Removing and installing selector lever handle	39
3.2 Detaching selector lever boot from selector lever handle	42
3.3 Removing and installing selector lever position display Y26	42
4 Selector lever cable - exploded view	43
4.1 Removing and installing selector lever cable	43
4.2 Adjusting selector lever cable	53
4.3 Adjusting selector lever cable to basic setting	55
5 Removing and installing gearbox	63
5.1 Tightening torques for installing gearbox	67
6 Transporting gearbox	69
7 Securing gearbox to assembly stand	71
8 Exploded view - tunnel cross member, gearbox mounting and gearbox support	73
8.1 Removing and installing tunnel cross member	73
8.2 Removing and installing gearbox mounting and gearbox support	76
9 ATF in planetary gearbox	80
9.1 Checking ATF level	80
9.2 Draining ATF and filling up after repairs	84
10 Exploded view - gearbox cooling for Audi S6	87



11	Exploded view - gearbox cooling for Audi RS 6	89
12	Removing and installing ATF cooler	91
38	- Gears, control	93
1	Oil pan, ATF strainer and mechatronic unit - exploded view	93
1.1	Removing and installing oil pan	95
1.2	Removing and installing ATF strainer	100
1.3	Removing and installing mechatronic unit - gearbox with 24 bolts on oil pan	102
1.4	Removing and installing mechatronic unit - gearbox with 13 bolts on oil pan	105
1.5	Removing and installing wiring harness in gearbox	108
39	- Final drive - front differential	110
1	Exploded view - gear oil cooler and pipes	110
2	Checking gear oil in gearbox and filling after repairs	111
2.1	Checking gear oil level in gearbox and topping up	111
2.2	Filling up gear oil in gearbox after repairs	115
3	Exploded view - front final drive	121
3.1	Removing and installing flange shaft (right-side)	122
3.2	Removing and installing flange shaft (left-side)	124
3.3	Renewing oil seal for flange shaft (right-side)	126
3.4	Renewing oil seal for flange shaft (left-side)	127
3.5	Renewing O-ring on cover for front final drive	130
3.6	Renewing oil seal for selector shaft	131
4	Exploded view - centre differential	137
4.1	Removing and installing centre differential housing	138
4.2	Renewing oil seal for flange shaft (rear)	143
4.3	Removing and installing centre differential	146
4.4	Renewing ball bearing for flange shaft (rear)	147
4.5	Renewing ball bearing for centre differential	149