

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on 6-speed automatic gearbox 09L	2
3 Code, gearbox allocation, transmission ratios, equipment	3
4 Identification of rear final drive	10
5 Gearbox fluid capacities	12
5.1 Capacity of planetary gearbox, ATF section	12
5.2 Capacity of front final drive	12
5.3 Capacity of transfer box	13
5.4 Capacity of rear final drive	13
6 Repair instructions	14
6.1 Contact corrosion	14
6.2 General repair instructions	14
7 Rules for cleanliness when working on the automatic gearbox	18
8 Notes on tow-starting and towing	19
32 - Torque converter	20
1 Identification of torque converter	20
2 Draining torque converter	21
3 Renewing oil seal for torque converter	22
4 Checking torque converter	24
5 Installing torque converter	25
37 - Controls, housing	27
1 Electrical/electronic components and fitting locations	27
2 Checking selector mechanism	33
3 Servicing selector mechanism on vehicles up to 11.2005 - assembly overview	36
3.1 Selector lever handle, display unit for selector lever position Y26 on vehicles up to 11.2005 - assembly overview	38
3.2 Manual release for selector mechanism on vehicles up to 11.2005	39
3.3 Removing and installing selector lever handle on vehicles up to 11.2005	39
3.4 Detaching selector lever boot from selector lever handle on vehicles up to 11.2005	42
3.5 Removing and installing display unit for selector lever position Y26 on vehicles up to 11.2005	43
3.6 Dismantling selector mechanism on vehicles up to 11.2005 - assembly overview	44
3.7 Removing and installing selector lever lock solenoid N110 on vehicles up to 11.2005	46
3.8 Removing and installing selector lever sensors control unit J587 and tiptronic switch F189 on vehicles up to 11.2005	48
3.9 Removing and installing shift unit on vehicles up to 11.2005	49
3.10 Removing and installing gear selector position P switch F305 on vehicles up to 11.2005	52
3.11 Selector lever cable on vehicles up to 11.2005 - assembly overview	57
3.12 Removing and installing selector lever cable on vehicles up to 11.2005	58
3.13 Adjusting selector lever cable on vehicles up to 11.2005	61
4 Servicing selector mechanism on vehicles from 11.2005 onwards - assembly overview	65
4.1 Selector lever handle and display unit for selector lever position Y26 on vehicles from 11.2005 onwards - assembly overview	67
4.2 Manual release for selector mechanism on vehicles from 11.2005 onwards	68
4.3 Removing and installing selector lever handle on vehicles from 11.2005 onwards	69
4.4 Detaching selector lever boot from selector lever handle on vehicles from 11.2005 onwards	72
4.5 Removing and installing display unit for selector lever position Y26 on vehicles from 11.2005 onwards	73



4.6	Shift mechanism on vehicles from 11.2005 onwards - assembly overview	73
4.7	Removing and installing selector lever lock solenoid N110 on vehicles from 11.2005 onwards	75
4.8	Removing and installing selector lever sensors control unit J587 and tiptronic switch F189 on vehicles from 11.2005 onwards	76
4.9	Removing and installing gear selector position P switch F305 on vehicles from 11.2005 onwards	77
4.10	Removing and installing shift unit on vehicles from 11.2005 onwards	77
4.11	Selector lever cable on vehicles from 11.2005 onwards - assembly overview	80
4.12	Removing and installing selector lever cable on vehicles from 11.2005 onwards	81
4.13	Adjusting selector lever cable on vehicles from 11.2005 onwards	87
4.14	Adjusting selector lever cable to basic setting	89
5	Removing and installing gearbox	92
5.1	Removing gearbox - vehicles with 6-cyl. 3.0 ltr. MPI and 2.8 ltr./3.2 ltr. FSI engine	92
5.2	Removing gearbox - vehicles with 6-cylinder 3.0 ltr. TFSI engine	102
5.3	Removing gearbox - vehicles with 8-cyl. petrol engine	113
5.4	Removing gearbox - vehicles with 6-cyl. TDI engine	113
5.5	Installing gearbox	128
6	Transporting gearbox	135
7	Securing gearbox/transmission unit to engine and gearbox support	136
8	Tunnel cross member, gearbox mounting and gearbox support	137
8.1	Assembly overview - tunnel cross member, gearbox mounting and gearbox support	137
8.2	Removing and installing gearbox mounting and gearbox support, vehicles with 6-cyl. and 8-cyl. petrol engine, 6-cyl. TDI engine from 09.2008 onwards	140
8.3	Removing and installing tunnel cross member - vehicles with 6-cyl. and 8-cyl. petrol engine, 6-cyl. TDI engine from 09.2008 onwards	142
8.4	Removing and installing gearbox mounting and gearbox support - vehicles with 6 cyl. TDI engine up to 09.2008	145
9	ATF level in planetary gearbox	148
9.1	Checking and correcting ATF level	148
9.2	Draining ATF and filling up after repairs	152
10	ATF lines	156
10.1	ATF lines and ATF cooler - assembly overview for vehicles with 6-cyl. petrol engine and 6-cyl. TDI engine	156
10.2	ATF lines and ATF cooler - assembly overview for vehicles with 8-cyl. petrol engine	158
10.3	Removing and installing ATF lines	159
10.4	Cleaning ATF lines and ATF cooler	161
38 - Gears, control		163
1	Oil pan, ATF strainer and mechatronic unit - assembly overview	163
1.1	Removing and installing oil pan	165
1.2	Removing and installing ATF strainer	169
1.3	Removing and installing mechatronic unit	171
1.4	Removing and installing wiring harness in gearbox	176
39 - Final drive - front differential		178
1	Gear oil level in front final drive	178
1.1	Checking gear oil level in front final drive	178
1.2	Filling up gear oil in front final drive after repairs	179
2	Servicing front final drive - assembly overview	181
2.1	Removing and installing left flange shaft	182
2.2	Removing and installing right flange shaft	185
2.3	Renewing oil seal for right flange shaft	187
2.4	Renewing O-ring on cover for final drive	189
2.5	Renewing oil seal for final drive/gearbox housing	190
2.6	Renewing oil seal for selector shaft	194

3	Gear oil level in transfer box	198
3.1	Checking gear oil level in transfer box	198
3.2	Filling up gear oil in transfer box after repairs	199
4	Servicing transfer box	201
4.1	Removing and installing cover for self-locking centre differential	201
4.2	Renewing oil seal for flange shaft (rear)	207
4.3	Dismantling and servicing gearbox, common faults	211