

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 Gearbox identification	1
2 Notes on continuously variable automatic gearbox "multitronic 01J, front-wheel drive"	2
3 Code, gearbox allocation, transmission ratios, equipment	3
4 Gearbox fluid capacities	5
5 Safety precautions	6
6 Notes on tow-starting and towing	7
7 Repair instructions	8
8 Rules for cleanliness when working on the gearbox	11
9 Contact corrosion	12
<b>13 - Crankshaft group</b>	<b>13</b>
1 Damper unit, for description refer to: Engine, mechanics; Repair group 13	13
<b>37 - Controls, housing</b>	<b>14</b>
1 Electrical/electronic components and fitting locations	14
2 Checking selector mechanism	20
3 <b>Assembly overview - selector mechanism (vehicles up to 11.2005)</b>	<b>23</b>
3.1 Assembly overview - selector lever handle and selector lever position display Y26 (vehicles up to 11.2005)	25
3.2 Operating manual release for selector mechanism (vehicles up to 11.2005)	26
3.3 Removing and installing selector lever handle (vehicles up to 11.2005)	26
3.4 Separating selector lever boot from selector lever handle (vehicles up to 11.2005)	29
3.5 Removing and installing selector lever position display Y26 (vehicles up to 11.2005)	30
3.6 Assembly overview - shift unit (vehicles up to 11.2005)	31
3.7 Removing and installing selector lever lock solenoid N110 (vehicles up to 11.2005)	33
3.8 Removing and installing selector lever sensors control unit J587 and tiptronic switch F189 (vehicles up to 11.2005)	35
3.9 Removing and installing shift unit (vehicles up to 11.2005)	36
3.10 Removing and installing gear selector position P switch F305 (vehicles up to 11.2005)	41
3.11 Assembly overview - selector lever cable (vehicles up to 11.2005)	45
3.12 Removing and installing selector lever cable (vehicles up to 11.2005)	46
3.13 Adjusting selector lever cable (vehicles up to 11.2005)	52
4 <b>Assembly overview - selector mechanism (vehicles from 11.2005 onwards)</b>	<b>55</b>
4.1 Assembly overview - selector lever handle and selector lever position display Y26 (vehicles from 11.2005 onwards)	57
4.2 Manual release for selector mechanism (vehicles from 11.2005 onwards)	58
4.3 Removing and installing selector lever handle (vehicles from 11.2005 onwards)	59
4.4 Separating selector lever boot from selector lever handle (vehicles from 11.2005 onwards)	62
4.5 Removing and installing selector lever position display Y26 (vehicles from 11.2005 onwards)	63
4.6 Assembly overview - shift unit (vehicles from 11.2005 onwards)	63
4.7 Removing and installing selector lever lock solenoid N110 (vehicles from 11.2005 onwards)	65
4.8 Removing and installing selector lever sensors control unit J587 and tiptronic switch F189 (vehicles from 11.2005 onwards)	66
4.9 Removing and installing gear selector position P switch F305 (vehicles from 11.2005 onwards)	68
4.10 Removing and installing shift unit (vehicles from 11.2005 onwards)	68
4.11 Assembly overview - selector lever cable (vehicles from 11.2005 onwards)	71
4.12 Removing and installing selector lever cable (vehicles from 11.2005 onwards)	72
4.13 Adjusting selector lever cable (vehicles from 11.2005 onwards)	80

4.14	Adjusting selector lever cable to basic setting (vehicles from 11.2005 onwards)	82
<b>5</b>	<b>Removing and installing gearbox</b>	<b>88</b>
5.1	Removing gearbox - vehicles with 2.0 ltr. TFSI engine	88
5.2	Installing gearbox - vehicles with 2.0 ltr. TFSI engine	95
5.3	Removing gearbox - vehicles with 2.4 ltr. MPI or 2.8 ltr./3.2 ltr. FSI engine	98
5.4	Installing gearbox - vehicles with 2.4 ltr. MPI or 2.8 ltr./3.2 ltr. FSI engine	106
5.5	Removing gearbox - vehicles with 3.0 ltr. MPI engine	110
5.6	Installing gearbox - vehicles with 3.0 ltr. MPI engine	123
5.7	Removing gearbox - vehicles with 2.0 ltr. TDI engine (unit injector and common rail)	126
5.8	Installing gearbox - vehicles with 2.0 ltr. TDI engine (unit injector and common rail)	134
<b>6</b>	<b>Transporting automatic gearbox</b>	<b>139</b>
<b>7</b>	<b>Securing gearbox to engine and gearbox support</b>	<b>140</b>
<b>8</b>	<b>Assembly overview - gearbox mounting, gearbox support and tunnel cross member</b>	<b>141</b>
8.1	Removing and installing gearbox mounting and gearbox support	141
8.2	Removing and installing tunnel cross member	143
<b>9</b>	<b>ATF in gearbox</b>	<b>148</b>
9.1	Checking and correcting ATF level	148
9.2	Changing ATF or filling up after performing repairs	155
<b>10</b>	<b>Assembly overview - ATF lines, ATF cooler and additional ATF filter</b>	<b>160</b>
10.1	Cleaning ATF lines and ATF coolers	164
10.2	Removing and installing ATF lines	165
10.3	Removing and installing additional ATF filter - vehicles with petrol engine	167
10.4	Removing and installing additional ATF filter - vehicles with 2.0 ltr. TDI engine	169
10.5	Removing and installing ATF breather pipe	172
<b>11</b>	<b>Renewing oil seal for selector shaft</b>	<b>173</b>
<b>38 - Gears, control</b>		<b>174</b>
<b>1</b>	<b>Dismantling and assembling gearbox</b>	<b>174</b>
1.1	Removing and installing end cover	174
1.2	Removing and installing automatic gearbox control unit J217	180
1.3	Cleaning selector shaft	180
1.4	Removing and installing hydraulic control unit	180
1.5	Removing and installing input shaft	180
1.6	Renewing oil seal for input shaft	180
<b>39 - Final drive - differential</b>		<b>182</b>
<b>1</b>	<b>Gear oil level in front final drive</b>	<b>182</b>
1.1	Checking gear oil level in front final drive	182
<b>2</b>	<b>Servicing front final drive</b>	<b>184</b>
2.1	Removing and installing left flange shaft	184
2.2	Removing and installing right flange shaft	186
2.3	Removing and installing cover for front final drive	188
2.4	Renewing oil seal for left flange shaft	189
2.5	Renewing oil seal for right flange shaft and deep-groove ball bearing	189
2.6	Renewing oil seal for pinion shaft	189