

## Contents

<b>00</b>	<b>Technical data</b> .....	<b>1</b>
1	<b>Repair instructions</b> .....	1
1.1	General repair instructions .....	1
1.2	Special tools .....	3
2	<b>Rules for cleanliness when working on the gearbox</b> .....	11
3	<b>Common faults</b> .....	12
3.1	Jolting on overrun, delayed gear engagement when shifting to „D“ or „R“ when stationary, in some cases sporadic fault in event memory „Reverse gear“ .....	12
3.2	Defective stator shaft bushes .....	13
3.3	Jolting under power and on overrun, entry in event memory „Torque converter lock-up clutch, no transmission“ .....	14
4	<b>Gearbox adaption for vehicles from model year 2006 onwards</b> .....	15
<b>32</b>	<b>Torque converter</b> .....	<b>17</b>
1	<b>Torque converter</b> .....	17
1.1	Draining torque converter .....	17
1.2	Checking torque converter .....	17
<b>37</b>	<b>Controls, housing</b> .....	<b>18</b>
1	<b>Securing gearbox to assembly stand</b> .....	18
2	<b>Dismantling and assembling planetary gearbox</b> .....	19
2.1	Planetary gearbox - exploded view .....	19
2.2	Dismantling and assembling planetary gearbox .....	20
3	<b>Dismantling and assembling body „I“</b> .....	47
3.1	Body „I“ - exploded view .....	47
3.2	Clutch „C“ - exploded view .....	49
3.3	Dismantling and assembling clutch „C“ .....	50
3.4	Piston/cylinder „D“ - exploded view .....	53
3.5	Dismantling and assembling piston/cylinder „D“ .....	54
3.6	Adjusting clearance of clutch „D“ .....	57
3.7	Planetary drive „II“ and „III“ - exploded view .....	60
3.8	Dismantling and assembling planetary drive „II“ and „III“ .....	61
4	<b>Dismantling and assembling clutch „B“</b> .....	66
4.1	Clutch „B“ - exploded view .....	66
4.2	Dismantling and assembling clutch „B“ .....	67
5	<b>Dismantling and assembling body „II“</b> .....	72
5.1	Body „II“ - exploded view .....	72
5.2	Dismantling body „II“ .....	73
5.3	Clutch „A“ - exploded view .....	75
5.4	Dismantling and assembling clutch „A“ .....	76
5.5	Clutch „E“ - exploded view .....	81
5.6	Dismantling and assembling clutch „E“ .....	82
5.7	Assembling body „II“ .....	87
<b>38</b>	<b>Gears, control</b> .....	<b>90</b>
1	<b>Oil pan, ATF strainer and mechatronic unit - exploded view</b> .....	90
1.1	Removing and installing oil pan .....	92
1.2	Removing and installing ATF strainer .....	96
1.3	Removing and installing mechatronic unit - gearbox with 24 bolts on oil pan .....	98
1.4	Removing and installing mechatronic unit - gearbox with 13 bolts on oil pan .....	101
1.5	Removing and installing wiring harness in gearbox .....	104
2	<b>Dismantling and assembling ATF supply unit</b> .....	107



2.1	ATF supply unit - exploded view	107
2.2	Renewing oil seal for torque converter	108
2.3	Removing and installing ATF supply unit	110
2.4	Removing and installing ATF pump in ATF supply unit	121
2.5	Removing and installing needle bearing for torque converter	123
<b>39</b>	<b>Final drive - front differential</b>	<b>125</b>
<b>1</b>	<b>Servicing front final drive</b>	<b>125</b>
1.1	Front final drive - exploded view	125
1.2	Removing and installing flange shaft (right-side) with gearbox removed	126
1.3	Removing and installing flange shaft (left-side)	127
1.4	Renewing oil seal for flange shaft (right-side)	130
1.5	Renewing oil seal between final drive and gearbox housing	130
1.6	Renewing O-ring on cover for front final drive	133
1.7	Renewing oil seals for side shaft - gearbox with separate oil systems	134
1.8	Renewing O-rings for protective tube for side shaft - gearbox with common oil system	145
1.9	Renewing oil seal for selector shaft	154
<b>2</b>	<b>Servicing transfer box</b>	<b>156</b>
2.1	Exploded view - centre differential	156
2.2	Removing and installing centre differential housing with gearbox removed	157
2.3	Renewing ball bearing for self-locking centre differential	159
2.4	Renewing oil seal for flange shaft (rear)	160
<b>3</b>	<b>Assessment of wear on gearbox components</b>	<b>163</b>
3.1	Assessment of wear by checking ATF for colour and contamination	163
3.2	Clutch „C“	163
3.3	Clutch „D“	165
3.4	Planetary drive „II“ and „III“	167
3.5	Clutch „B“	169
3.6	Body „II“	170
3.7	Clutch „A“	173
3.8	Clutch „E“	174
3.9	ATF supply unit	176