

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Rules for cleanliness and instructions for working on fuel system	2
1.4 Important: Required procedure prior to opening high-pressure injection system	3
1.5 Checking vacuum system	4
2 Injection system	6
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Air cleaner - exploded view	13
2.4 Removing and installing engine cover panel	15
2.5 Removing and installing air filter element	15
2.6 Removing and installing air mass meter G70	17
2.7 Intake manifold - exploded view	17
2.8 Fuel rail - exploded view	20
2.9 Removing and installing intake manifold with fuel rail	21
2.10 Removing and installing fuel rail	25
2.11 Checking initial fuel pressure up to mechanical high-pressure pump	26
2.12 High-pressure pump - exploded view	26
2.13 Removing and installing high-pressure pump	28
2.14 Removing and installing injectors	29
2.15 Renewing combustion chamber ring seal (teflon ring seal)	31
2.16 Cleaning injectors	33
2.17 Lambda probes - overview	34
2.18 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	35
2.19 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	36
3 Engine control unit	38
3.1 Wiring and component check with test box V.A.G 1598/42	38
3.2 Renewing engine control unit J623	40
28 - Ignition system	43
1 General notes and safety precautions	43
1.1 General notes on ignition system	43
2 Servicing ignition system	44
2.1 Test data	44
2.2 Ignition system - exploded view	44
2.3 Removing and installing ignition coils with output stages	45
2.4 Removing and installing knock sensor 1 G61 and knock sensor 2 G66	46