

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
1 <b>Servicing Motronic injection system</b> .....	1
1.1     Safety precautions .....	1
1.2     Rules for cleanliness .....	1
1.3     Overview - fitting locations .....	2
1.4     Dismantling and assembling air cleaner .....	6
1.5     Intake manifold change-over - exploded view of components .....	8
1.6     Intake manifold - exploded view of components .....	9
1.7     Removing and installing intake manifold .....	9
1.8     Wiring and component check with adapter lead, 121-pin V.A.G 1598/31 (test box) .....	13
1.9     Renewing Motronic control unit J220 .....	16
1.10    Checking system pressure, fuel pressure regulator and residual pressure .....	20
1.11    Dismantling and assembling fuel rail with injectors .....	21
1.12    Removing and installing fuel rail and injectors .....	22
1.13    Checking injection quantity and spray pattern of injectors; checking for leaks .....	24
1.14    Removing and installing Lambda probe before catalytic converter - bank 1 (right) .....	26
1.15    Removing and installing Lambda probe before catalytic converter - bank 2 (left) .....	27
1.16    Removing and installing Lambda probe after catalytic converter - bank 1 (right) .....	29
1.17    Removing and installing Lambda probe after catalytic converter - bank 2 (left) .....	30
<b>28 - Ignition system</b> .....	<b>32</b>
1 <b>General notes on ignition system</b> .....	32
2 <b>Safety measures</b> .....	33
3 <b>Removing and installing ignition coils</b> .....	34