

Contents

24	Mixture preparation - injection	1
1	Servicing Simos injection system	1
1.1	Safety precautions	1
1.2	Rules for cleanliness when working on the injection system	2
1.3	Important: Required procedure prior to opening high-pressure injection system	2
1.4	Technical data	5
1.5	Overview of fitting locations	5
1.6	Air cleaner - exploded view	13
1.7	Removing and installing air filter element	15
1.8	Intake manifold (top section) - exploded view of components	16
1.9	Removing and installing intake manifold (top section)	18
1.10	Intake manifold (bottom section) - exploded view of components	20
1.11	Removing and installing intake manifold (bottom section) with fuel rail	23
1.12	Removing and installing injectors	26
1.13	Checking fuel pressure and residual pressure (up to high-pressure pump)	30
1.14	Removing and installing high-pressure pump	33
1.15	Bleeding fuel system	37
1.16	Wiring and component check with test box V.A.G 1598/42	37
1.17	Removing and installing engine control unit	39
1.18	Removing and installing Lambda probe before catalytic converter - bank 1 (right)	42
1.19	Removing and installing Lambda probe before catalytic converter - bank 2 (left)	44
1.20	Removing and installing Lambda probe after catalytic converter - bank 1 (right)	46
1.21	Removing and installing Lambda probe after catalytic converter - bank 2 (left)	48
28	Ignition system	51
1	General notes and safety precautions	51
1.1	General notes on ignition system	51
1.2	Safety precautions	51
2	Servicing ignition system	52
2.1	Technical data	52
2.2	Removing and installing ignition coils	52