

Contents

24	Mixture preparation - injection	1
1	Safety precautions and rules for cleanliness	1
1.1	General notes on self-diagnosis	1
1.2	Safety precautions	1
1.3	Rules for cleanliness and instructions for working on fuel system	2
1.4	Procedure before opening high-pressure section of injection system	3
1.5	Checking vacuum system	4
1.6	Checking for leaks in the fuel system	5
1.7	Contact corrosion!	5
1.8	Routing and attachment of pipes, hoses and wiring	6
2	Injection system	7
2.1	Test data	7
2.2	Overview of fitting locations	7
2.3	Air cleaner - exploded view	16
2.4	Removing and installing air filter element	18
2.5	Intake manifold (top section) - exploded view	20
2.6	Removing and installing intake manifold (top section)	23
2.7	Intake manifold (bottom section) with fuel rail - exploded view	25
2.8	Removing and installing intake manifold (bottom section) with fuel rail	26
2.9	Removing and installing injectors	27
2.10	Checking fuel pressure and residual pressure (up to high-pressure pump)	31
2.11	High-pressure pump - exploded view	34
2.12	Removing and installing high-pressure pump	36
2.13	Removing and installing high-pressure pipe	37
2.14	Removing and installing Lambda probe G39 before catalytic converter - bank 1 (right-side)	39
2.15	Removing and installing Lambda probe 2 G108 before catalytic converter - bank 2 (left-side)	40
2.16	Removing and installing Lambda probe after catalytic converter G130 - bank 1 (right-side)	42
2.17	Removing and installing Lambda probe 2 after catalytic converter G131 - bank 2 (left-side)	44
3	Engine control unit	47
3.1	Wiring and component check with test box V.A.G 1598/42	47
3.2	Removing and installing engine control unit	49
28	Ignition system	53
1	General notes and safety precautions	53
1.1	General notes on ignition system	53
1.2	Safety precautions	53
2	Servicing ignition system	55
2.1	Test data	55
2.2	Ignition system - exploded view	55
2.3	Removing and installing ignition coils with output stages	56
2.4	Removing and installing knock sensors G61 / G66	58
2.5	Removing and installing Hall sender (inlet side) G40 / G163	59
2.6	Removing and installing Hall sender (exhaust side) G300 / G301	60
2.7	Removing and installing engine speed sender G28	61