

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Rules for cleanliness when working on the injection system	2
1.4 Important: Required procedure prior to opening high-pressure injection system	3
1.5 Checking vacuum system	4
2 Injection system	6
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Air cleaner - exploded view	18
2.4 Removing and installing air filter element	20
2.5 Removing and installing air mass meter G70	23
2.6 Intake manifold (magnesium) - exploded view	23
2.7 Intake manifold (plastic - gradual introduction in model year 2009) - exploded view	38
2.8 Removing and installing fuel pressure sender G247	56
2.9 Checking fuel pressure and residual pressure (up to high-pressure pump)	57
2.10 High-pressure pump - exploded view	62
2.11 Removing and installing high-pressure pump	65
2.12 Lambda probes - overview	68
2.13 Removing and installing Lambda probe before catalytic converter G39 and Lambda probe after catalytic converter G130 (cylinder bank 1)	69
2.14 Removing and installing Lambda probe 2 before catalytic converter G108 and Lambda probe after catalytic converter G131 (cylinder bank 2)	71
3 Engine control unit	74
3.1 Wiring and component check with test box V.A.G 1598/42	74
3.2 Removing and installing engine control unit J623	75
28 - Ignition system	80
1 General notes and safety precautions	80
1.1 General notes on ignition system	80
1.2 Safety precautions	80
2 Servicing ignition system	81
2.1 Test data	81
2.2 Ignition system - exploded view	81
2.3 Removing and installing ignition coils	82
2.4 Removing and installing knock sensors	84